 
 



Naava One, One Slim, Duo, Flow, Flow Duo

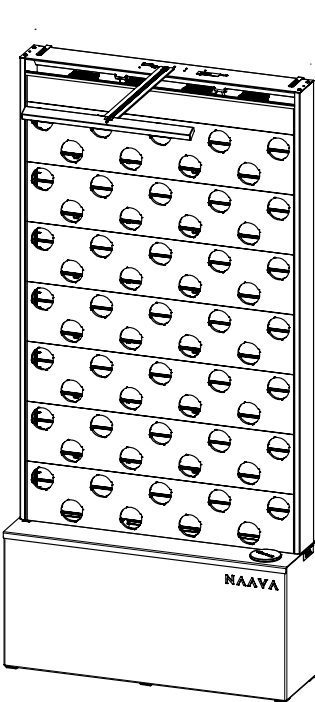


Naava One

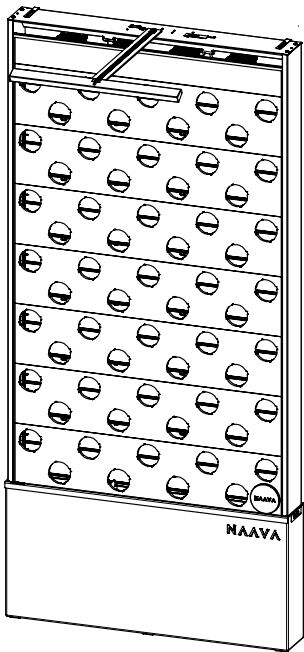

 
Naava One Slim

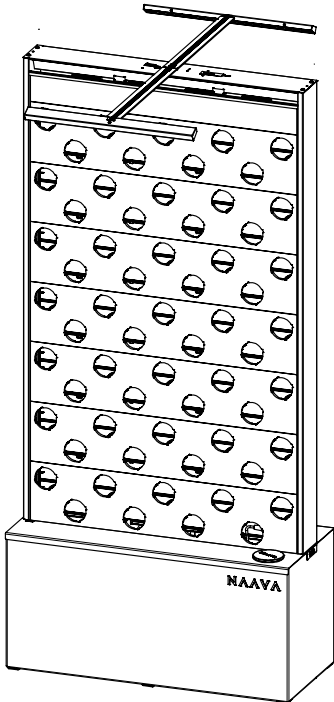

Naava Duo

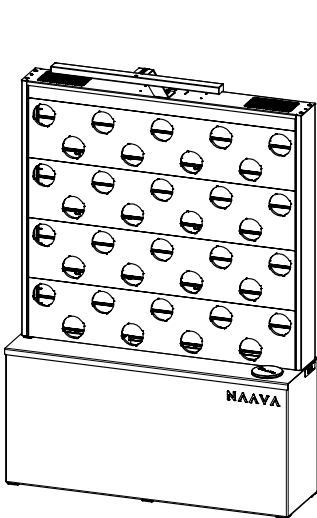 







Naava Flow


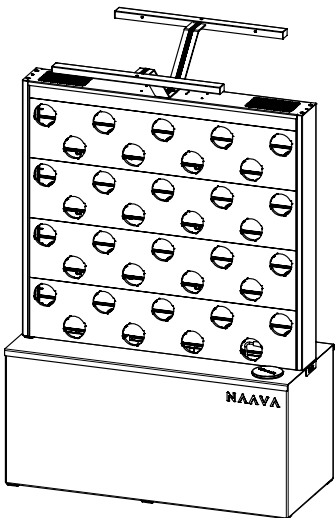 


Naava Flow Duo





        
<https://www.naava.io/manuals>

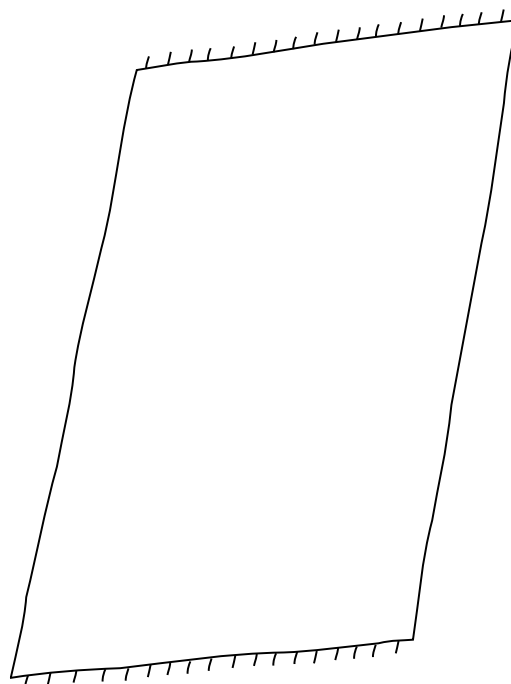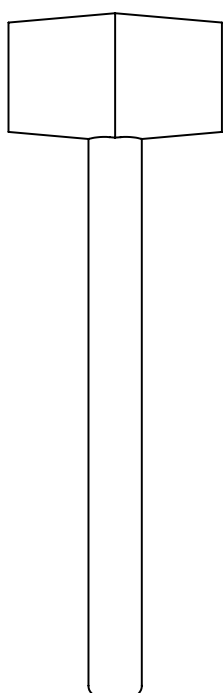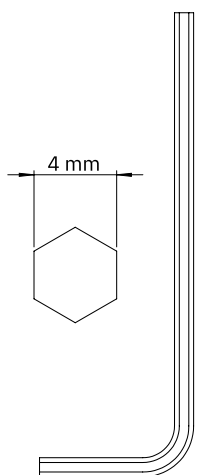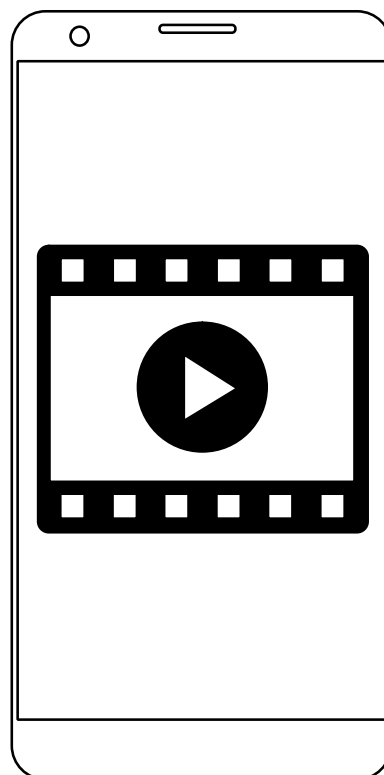

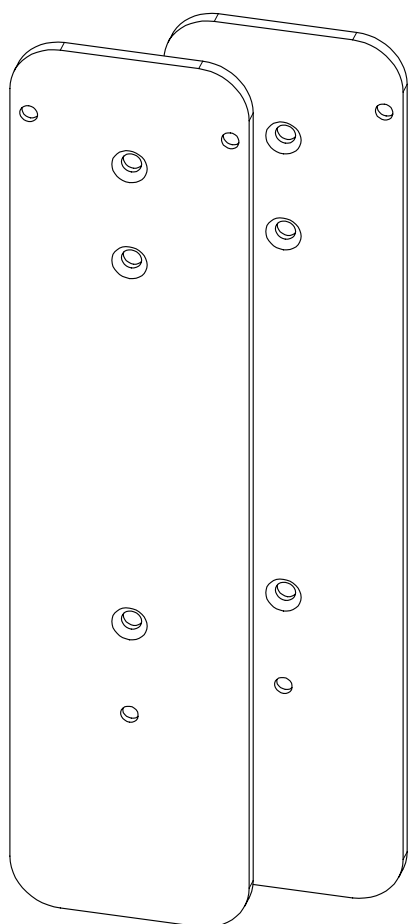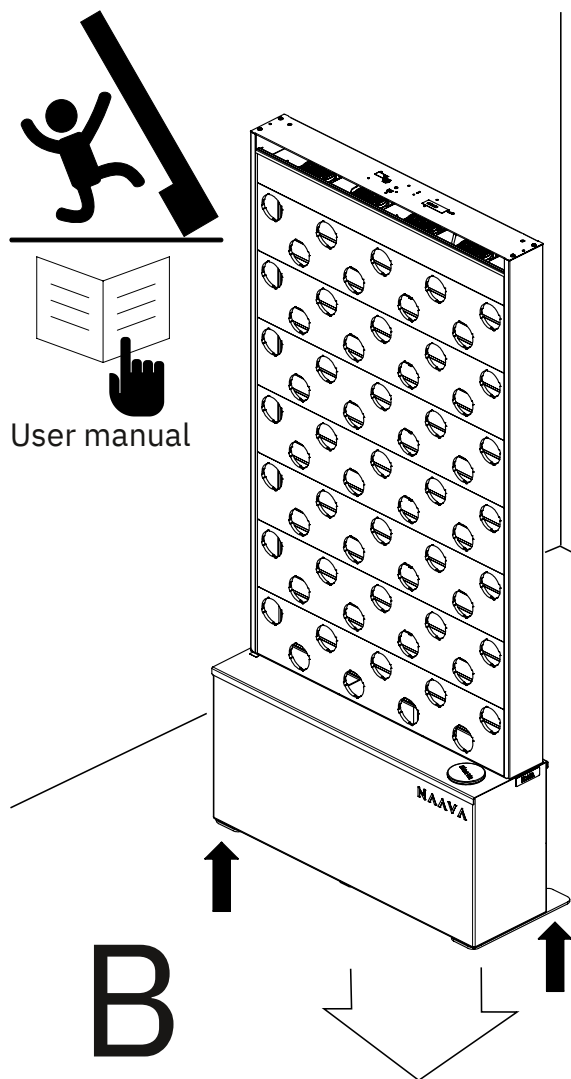


One
Duo

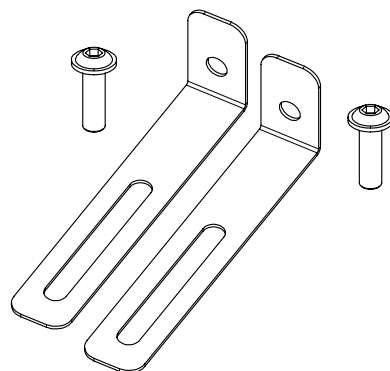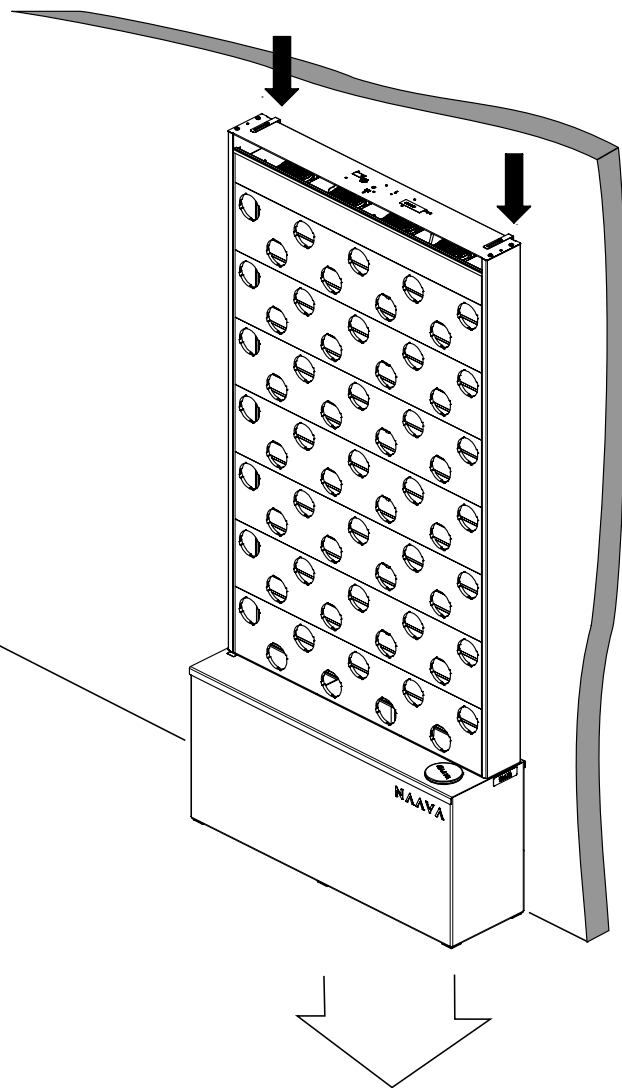  
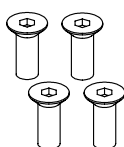 


One
Slim


 
1










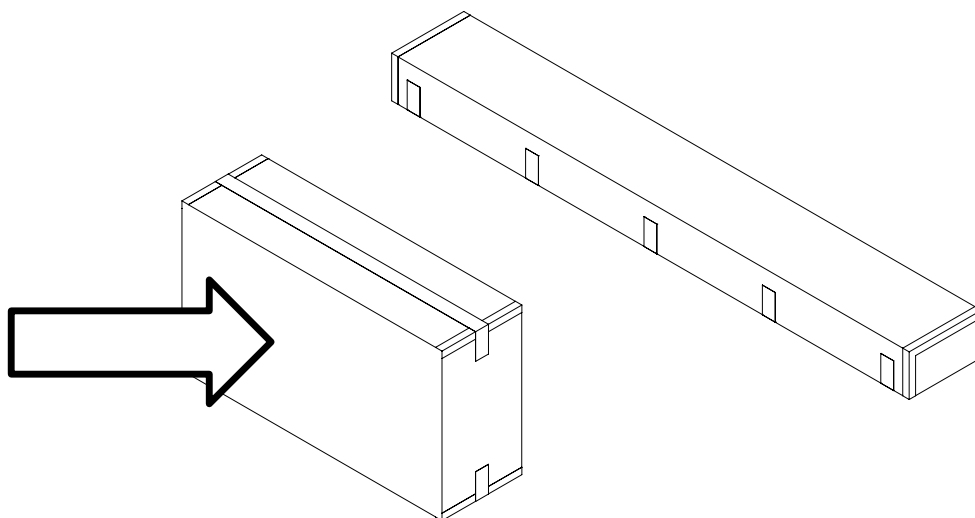



.1

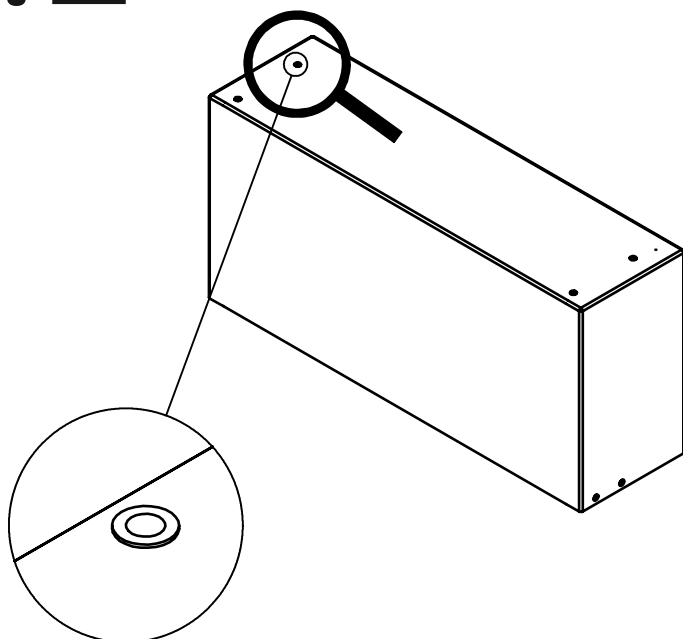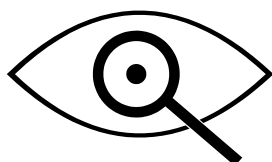  

.2

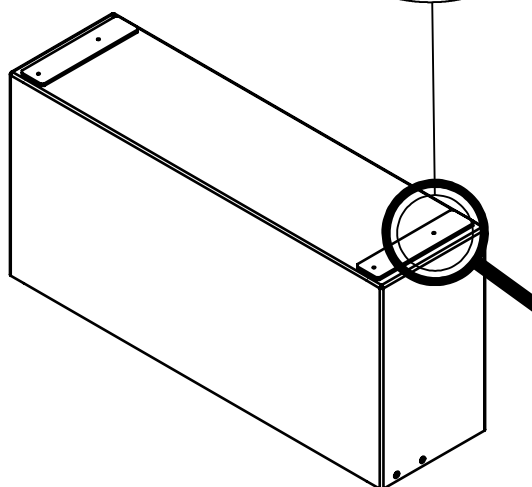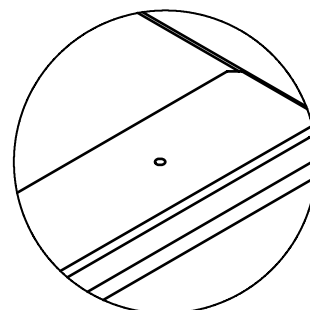  


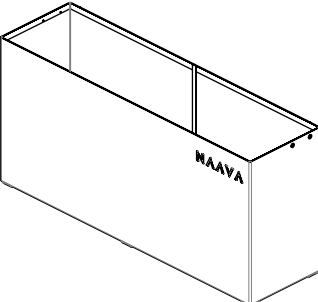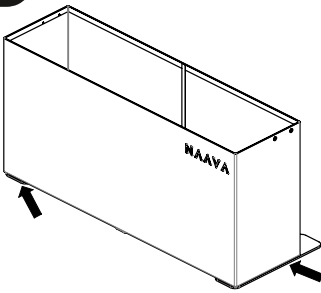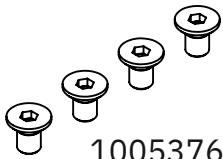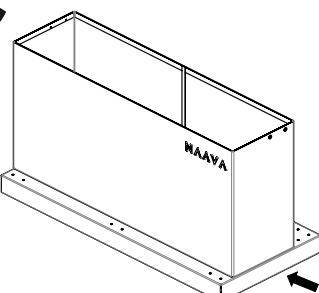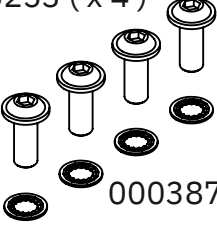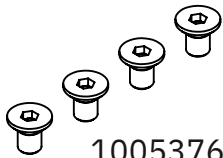          P. 3 P. 4	.1	.2
A 		 1005375 (x 4)
B 	4 x   003992 (x 4)	  1005376 (x 4)
C * 	6 x  1005253 (x 4)  0003877 (x 4)	  1005376 (x 4)

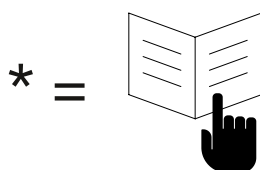 


Skate

 
Naava One

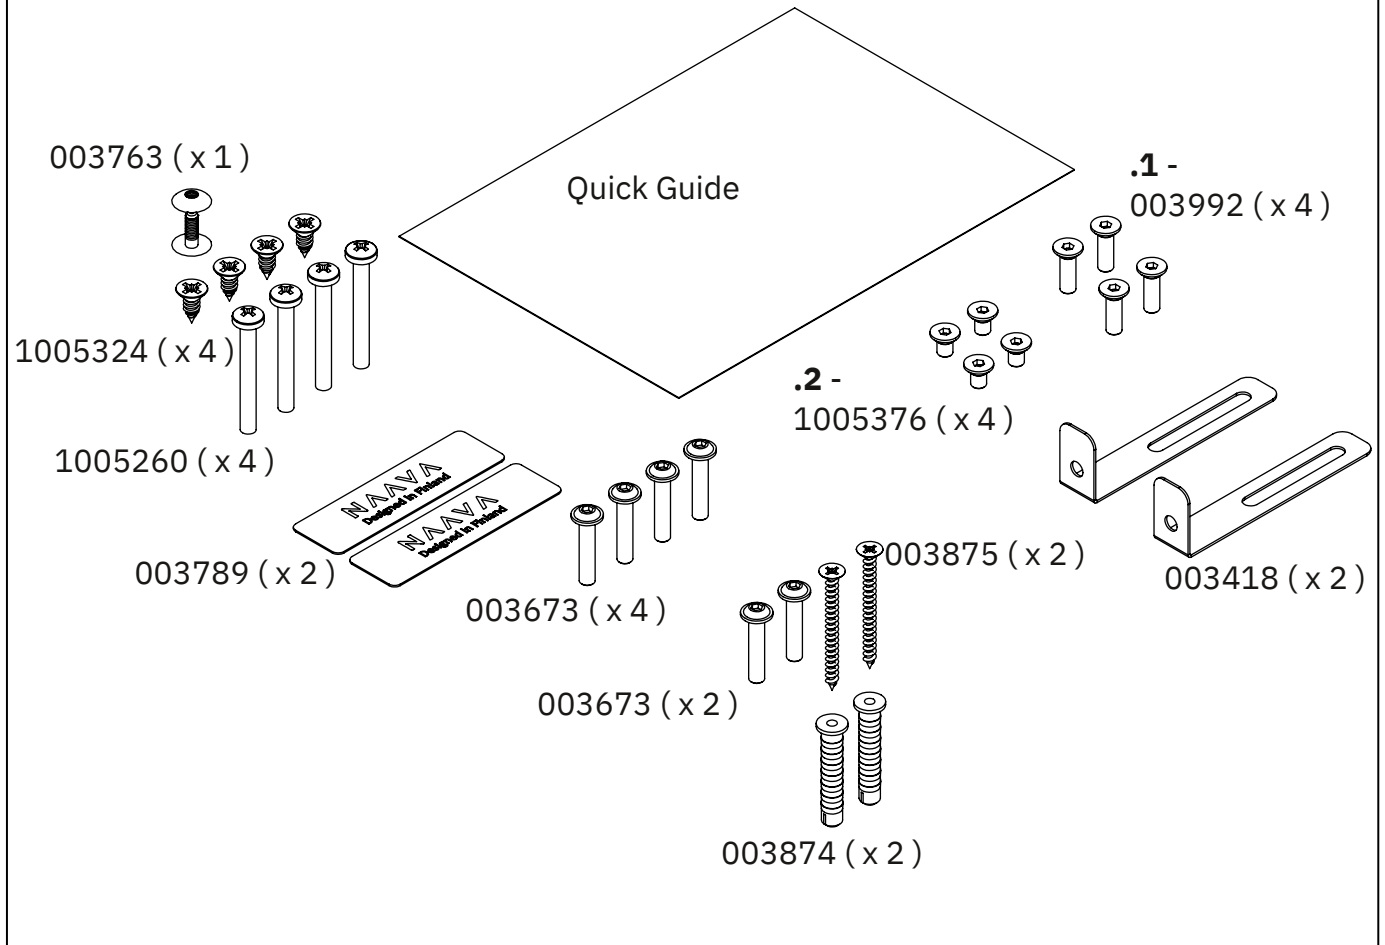


Naava Flow

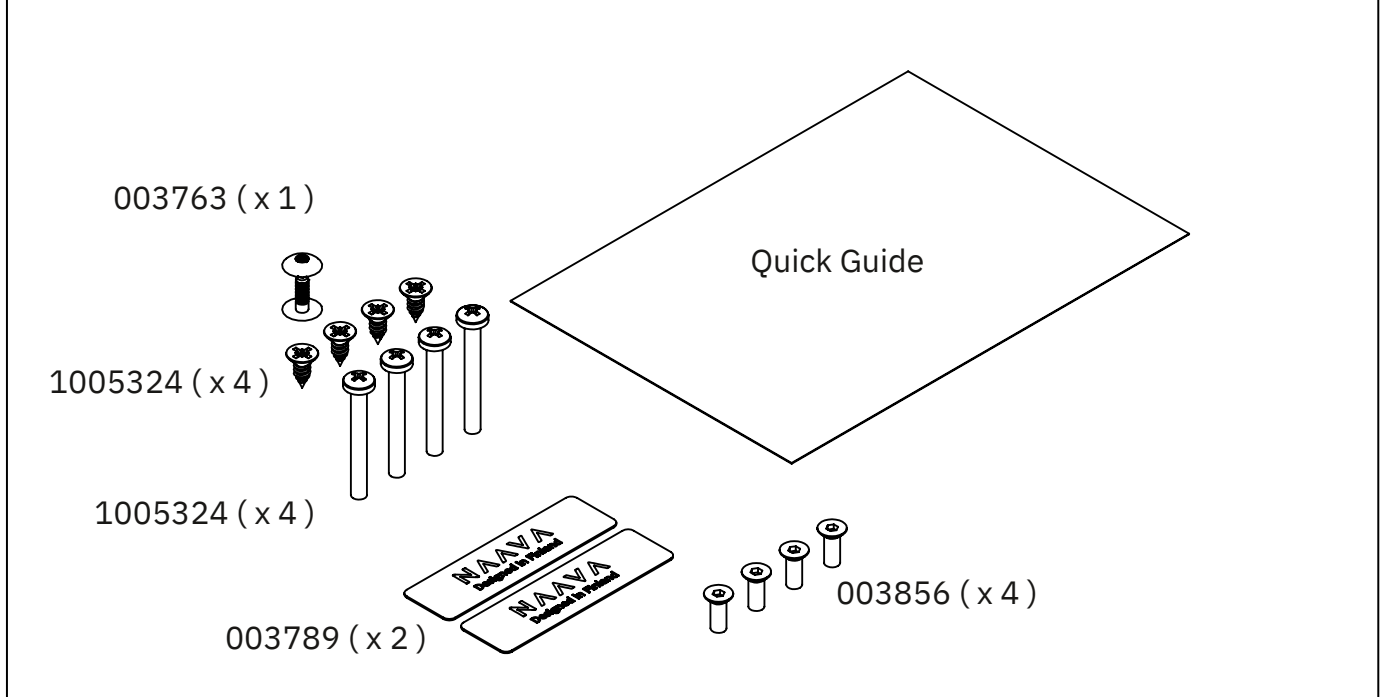 


Naava Duo

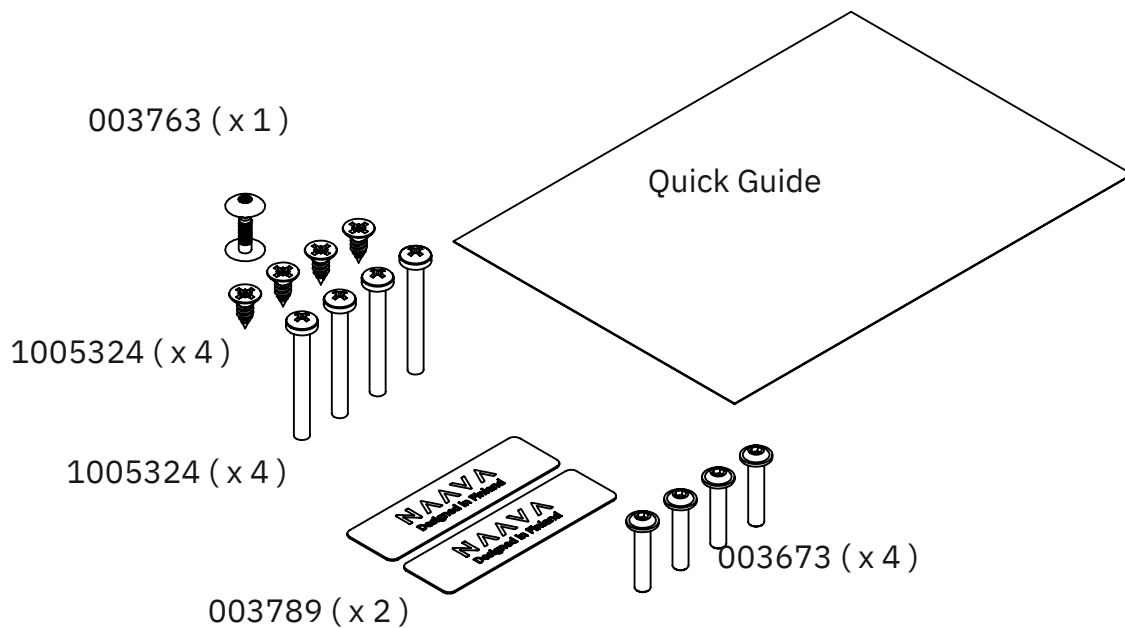 


Naava Slim

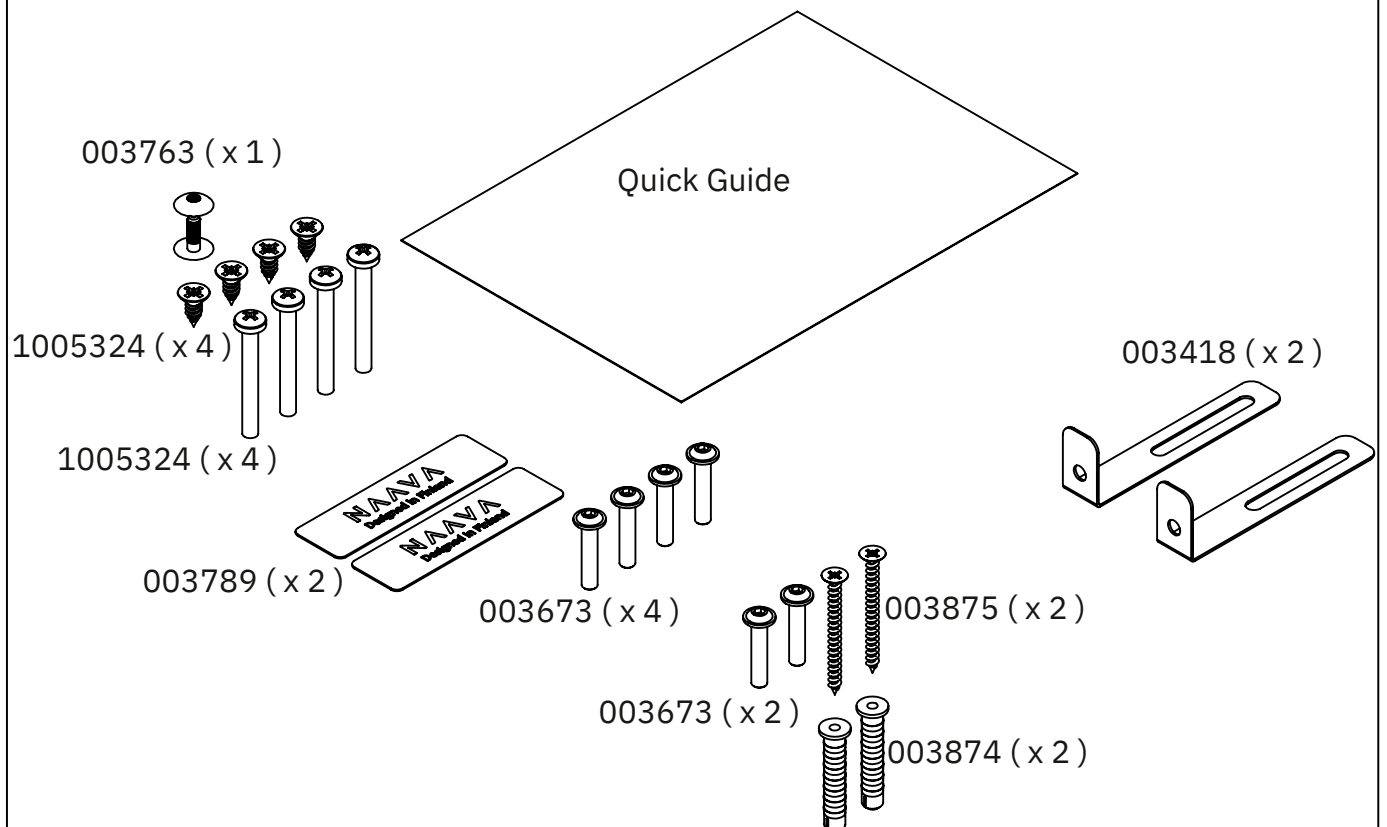 



(A.2)

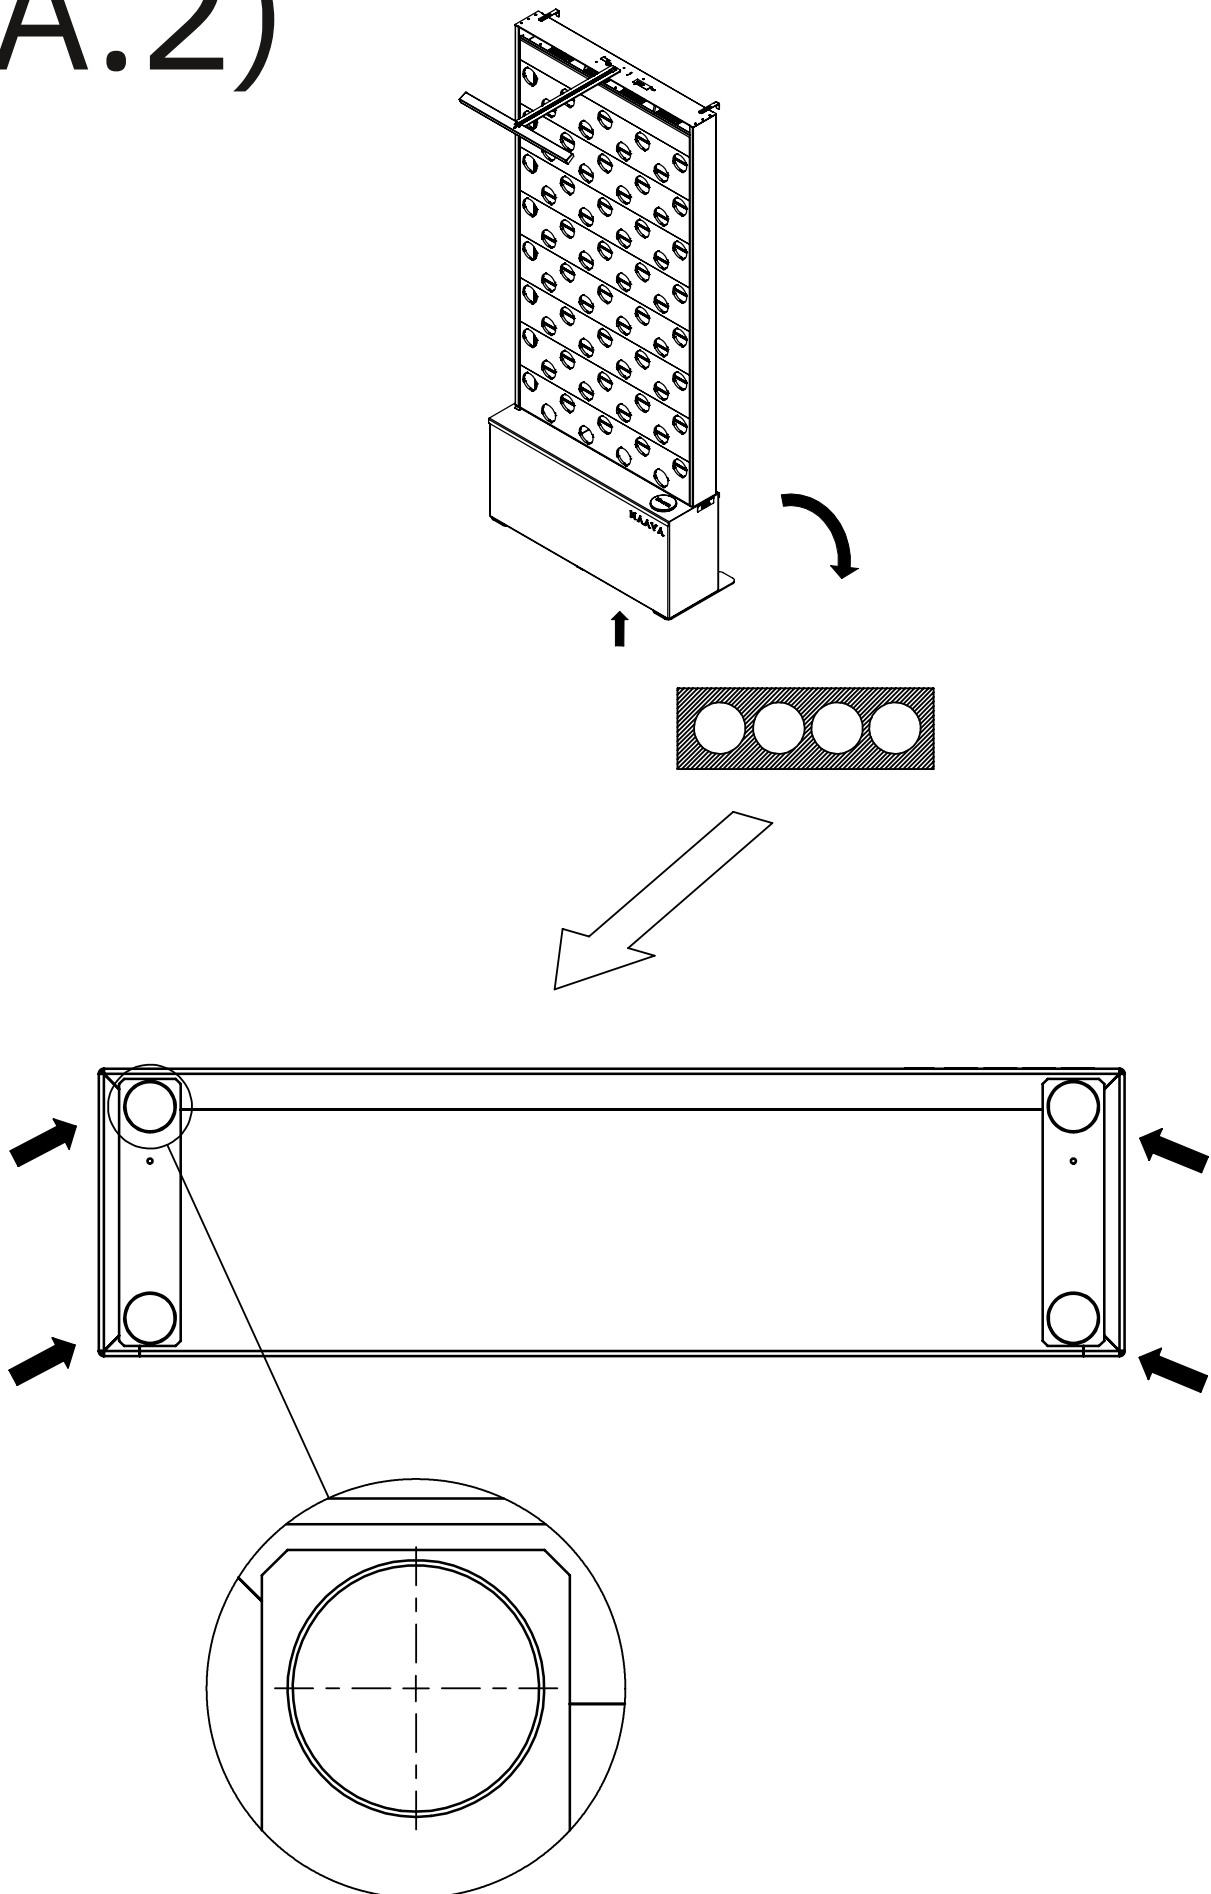 


2

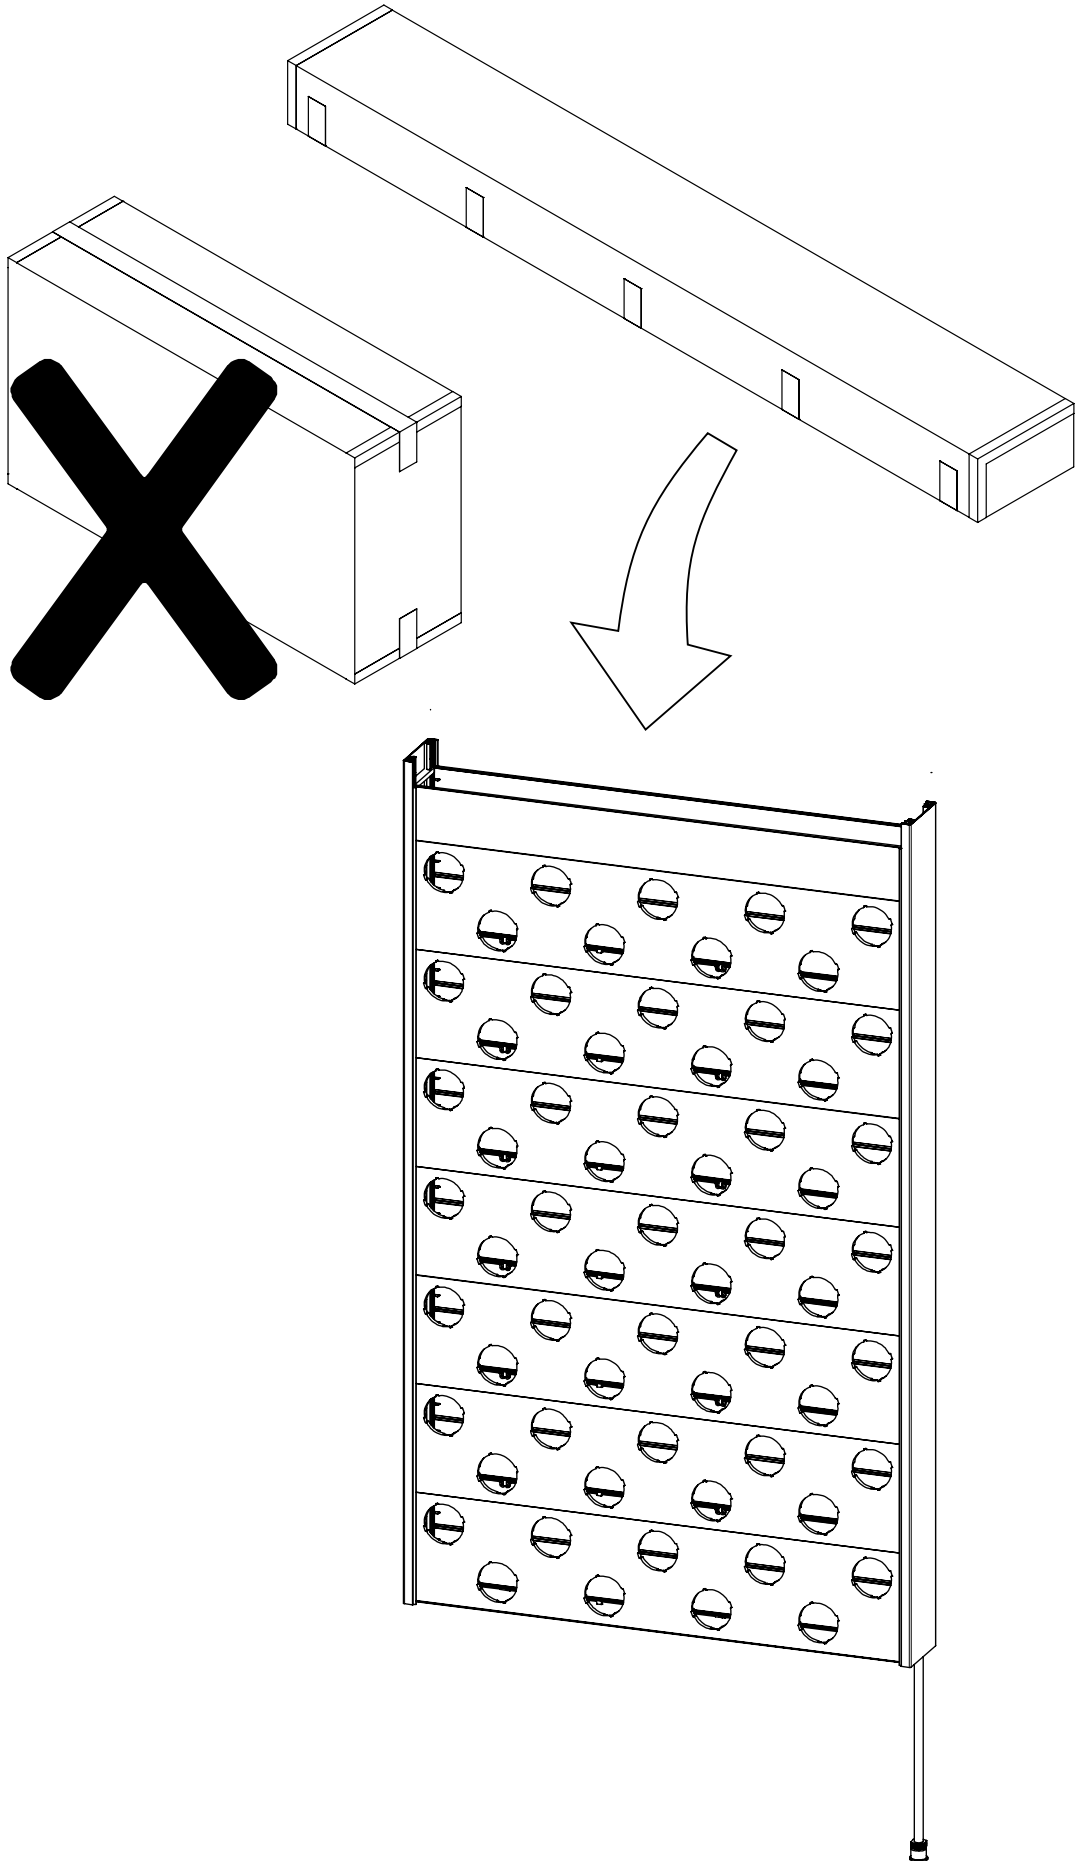 


3

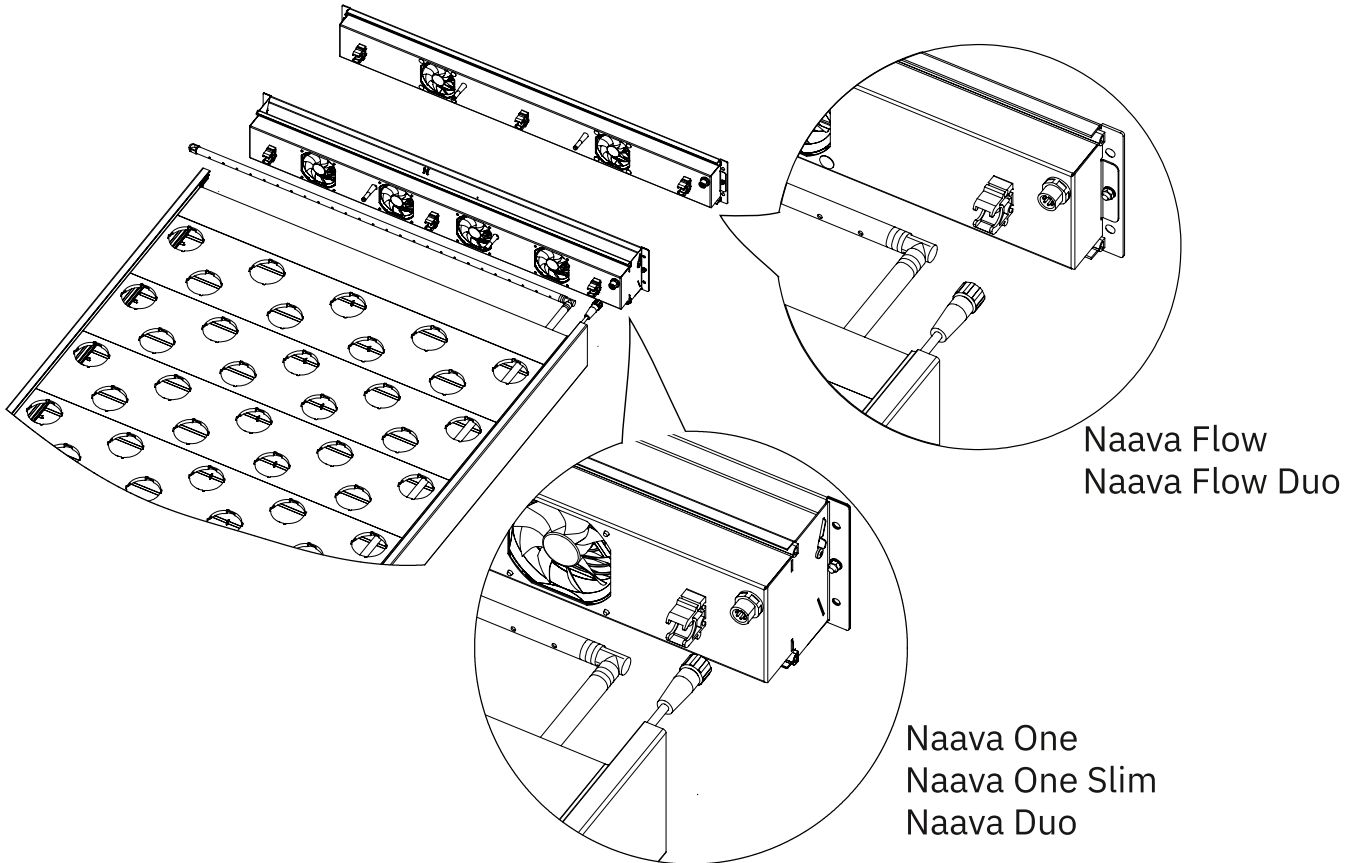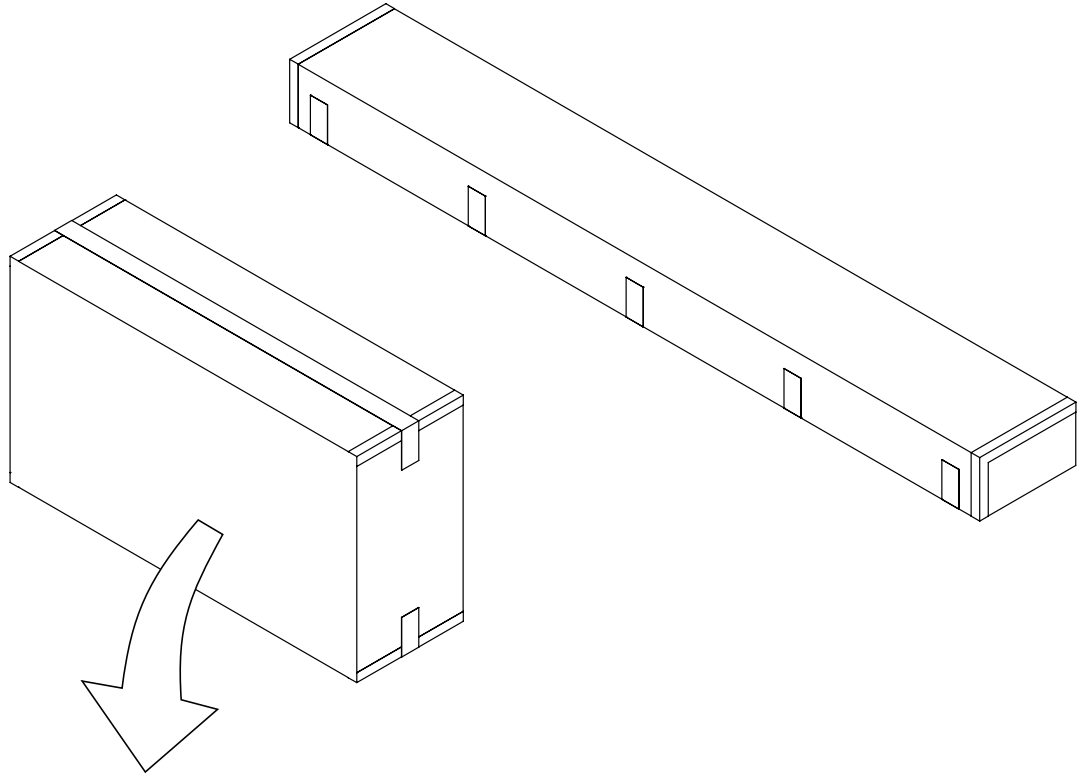  


4

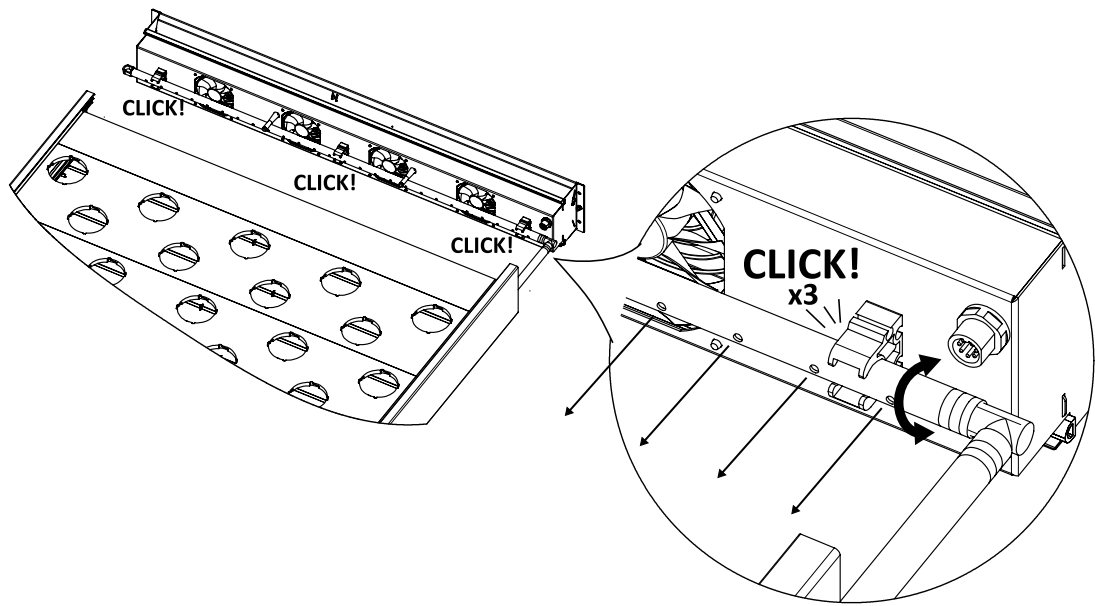 

5

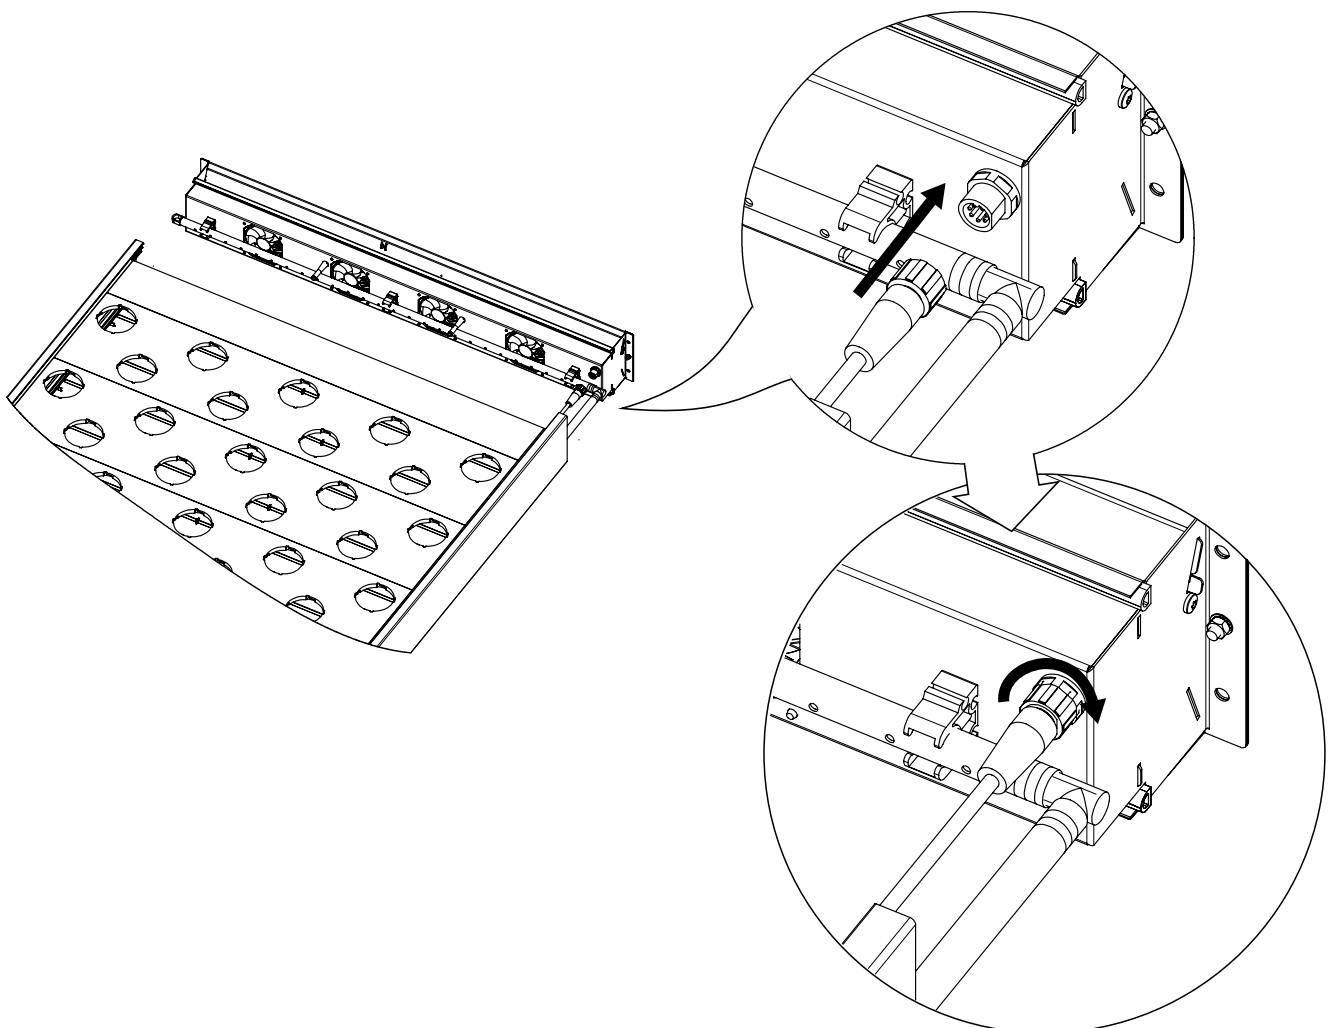 


6

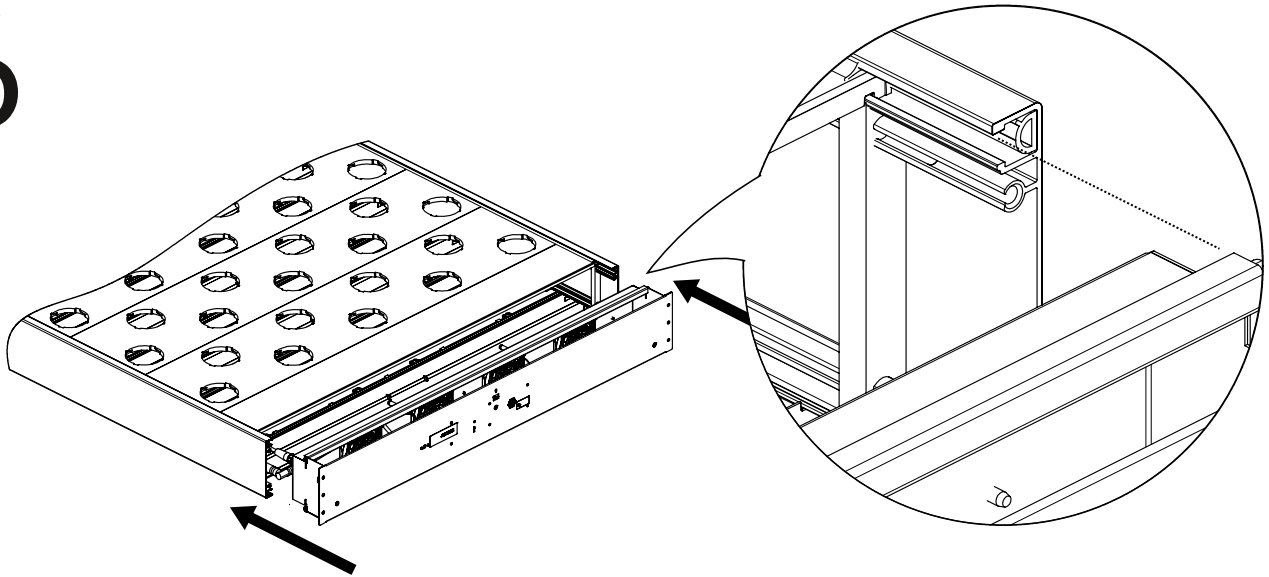 


7

003673 (x 4)




 
One, One Slim,
Duo

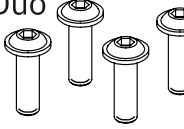






Flow,
Flow Duo

 


003856 (x 4)

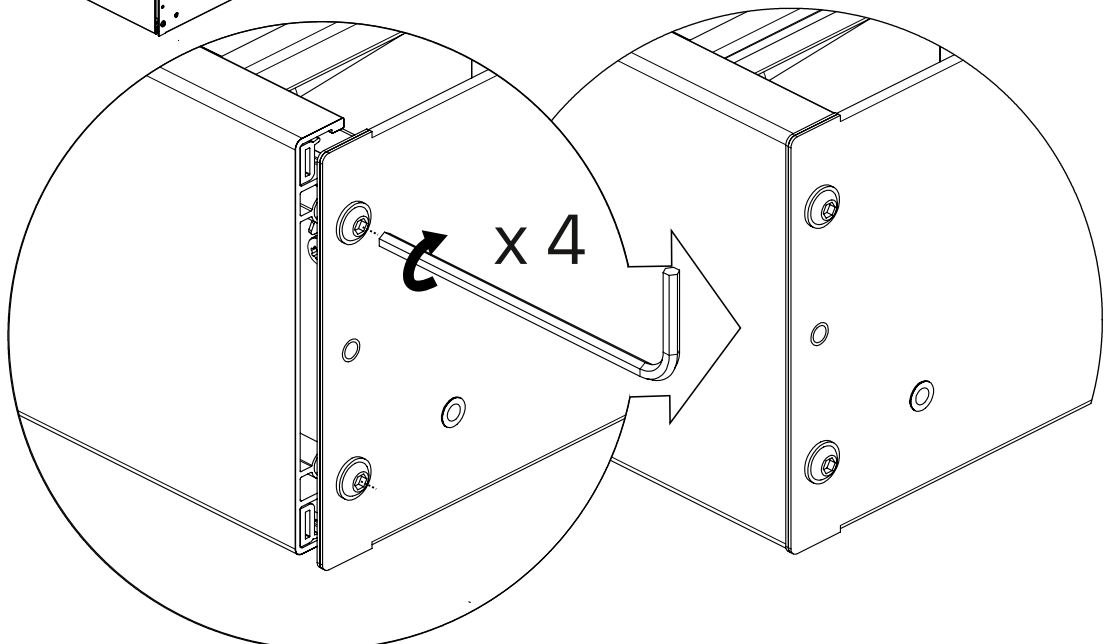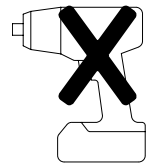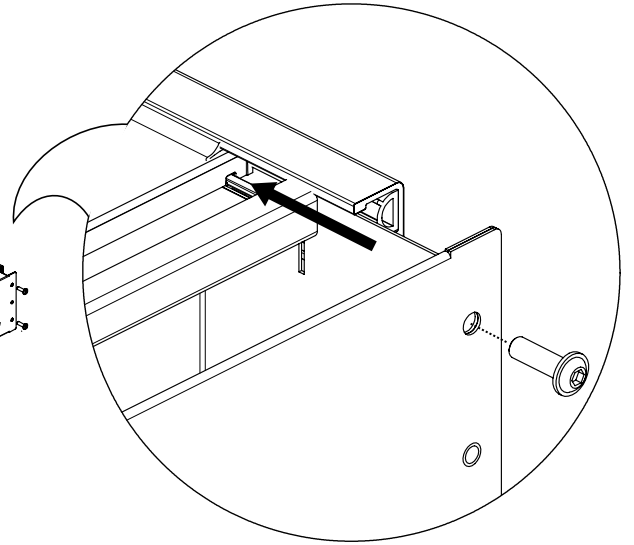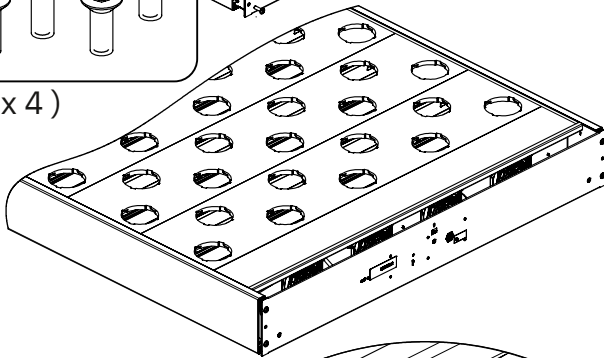    





8

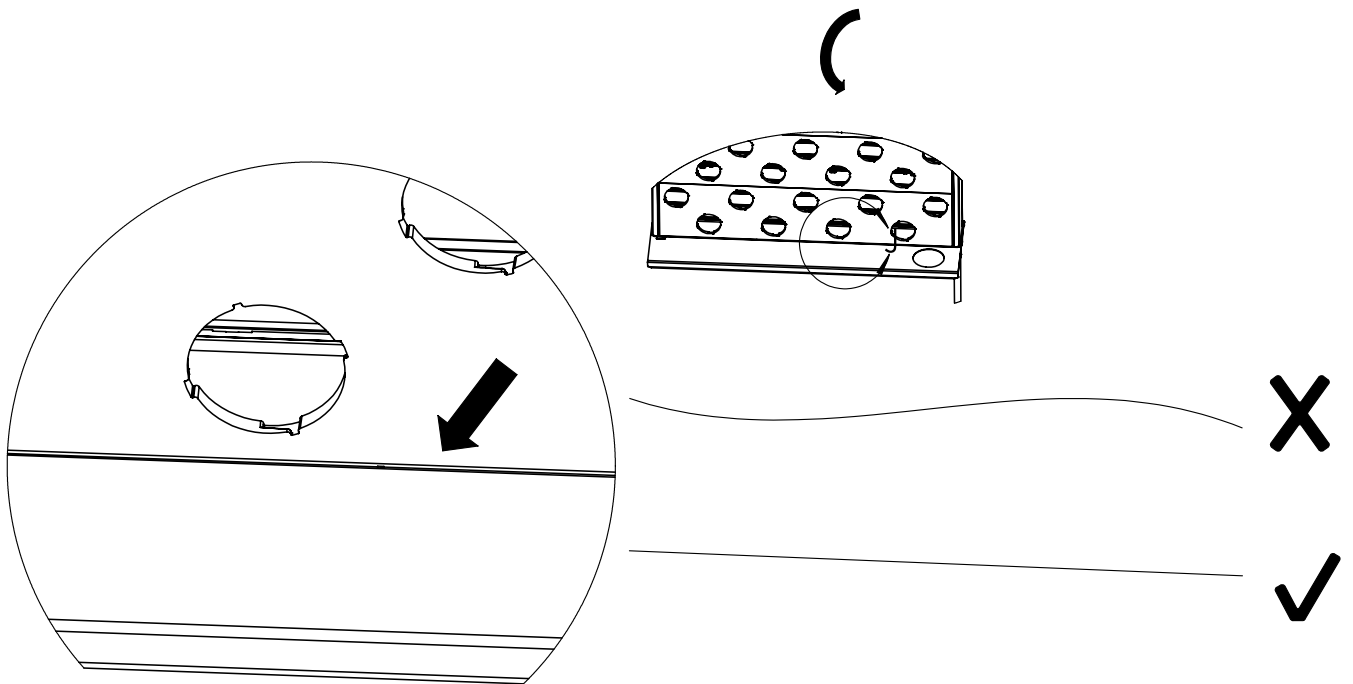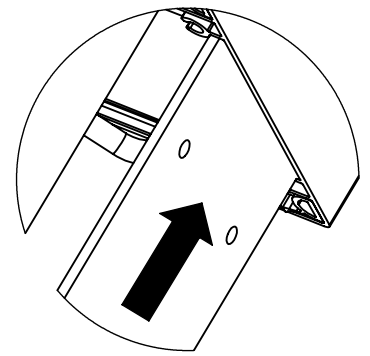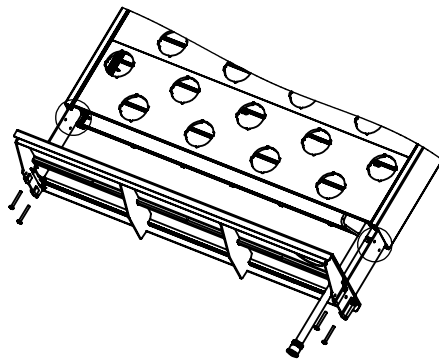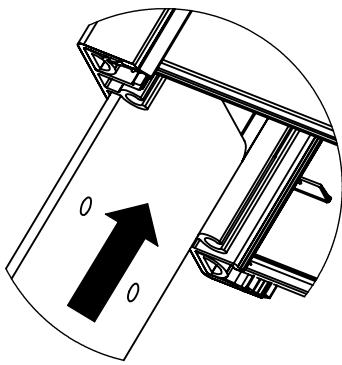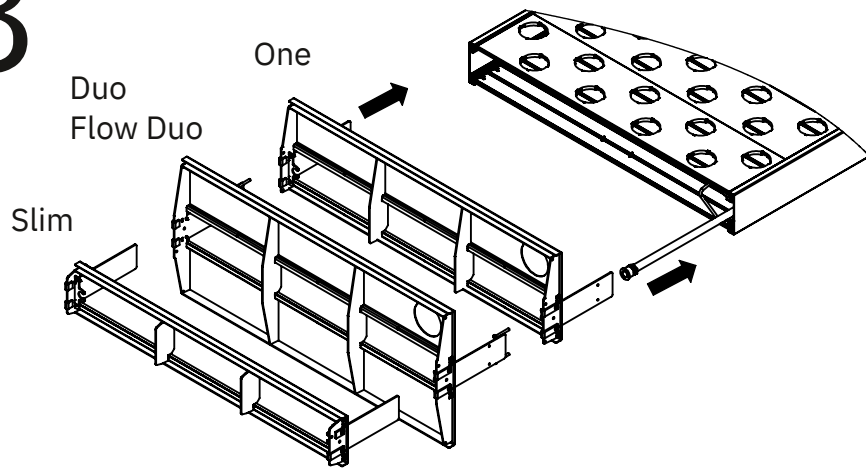     


9

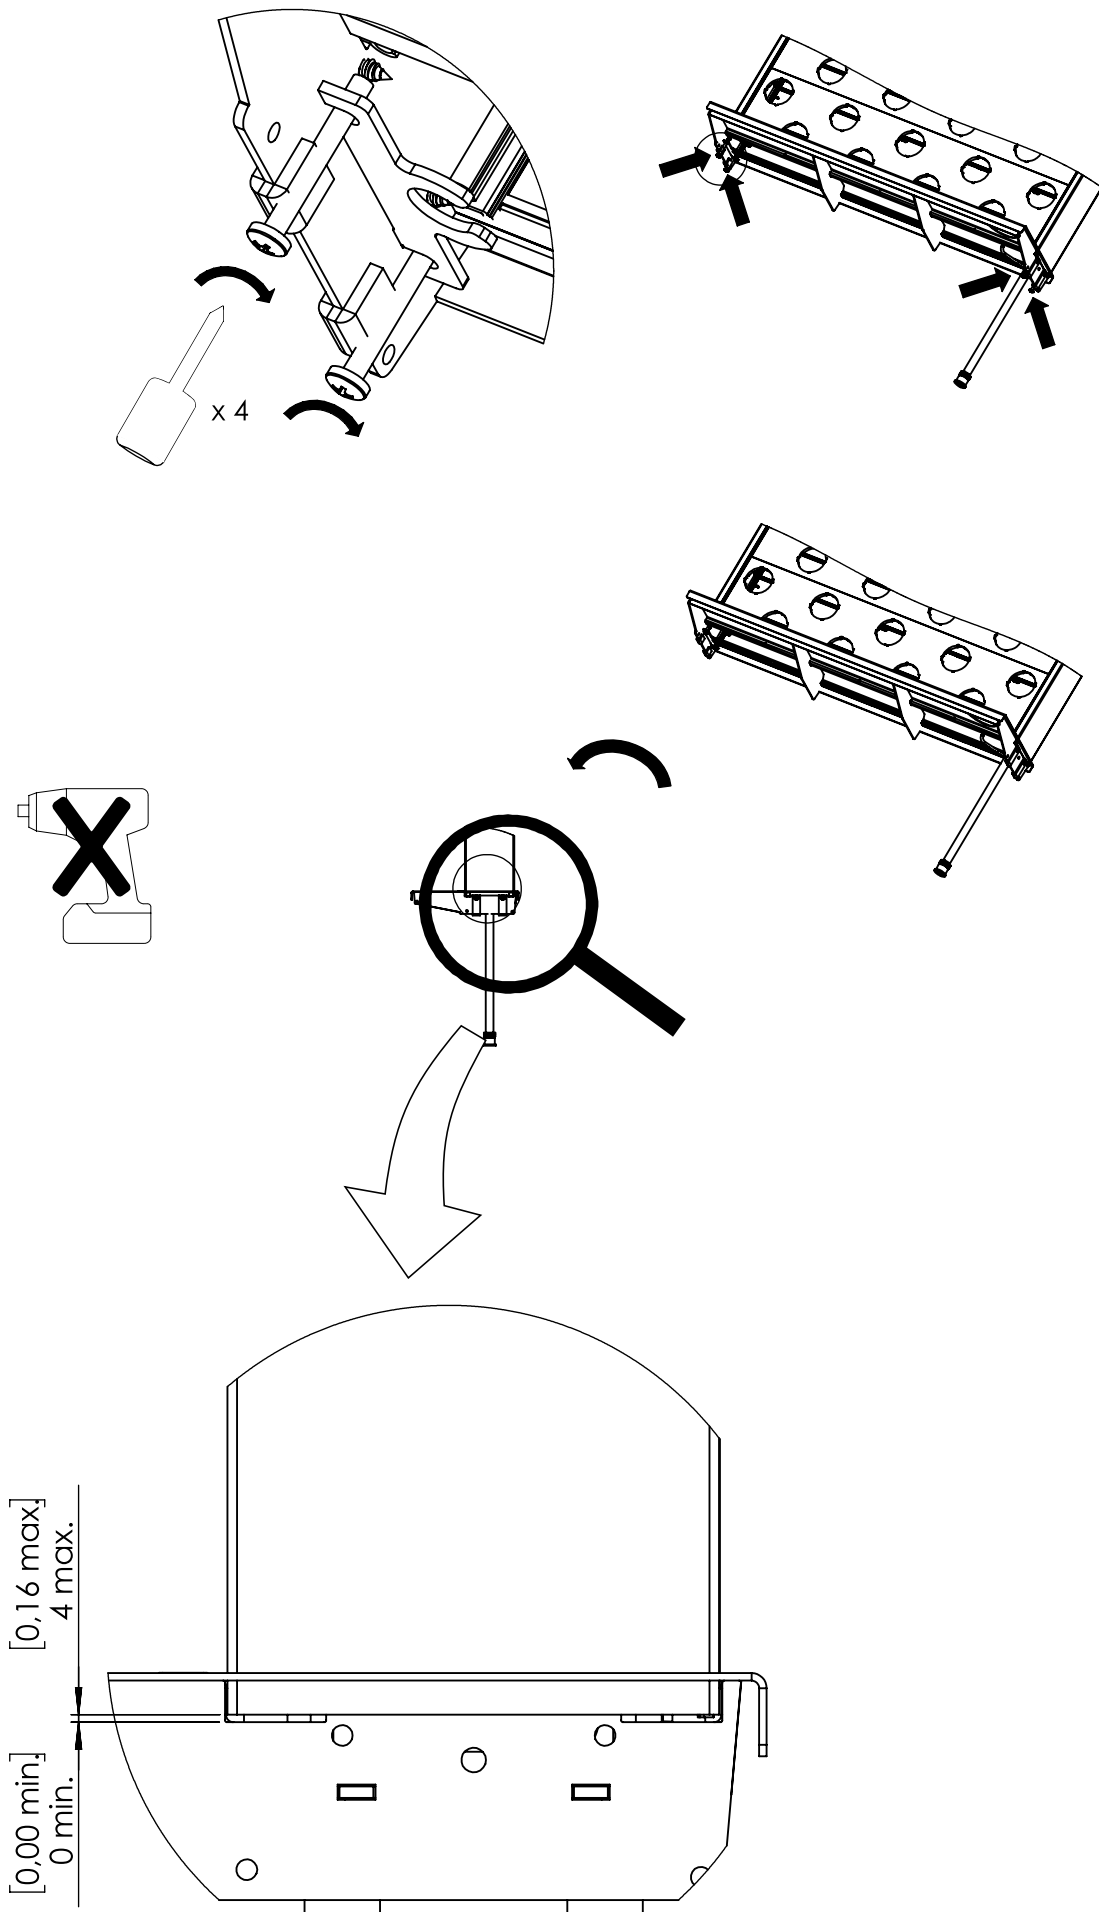 


10

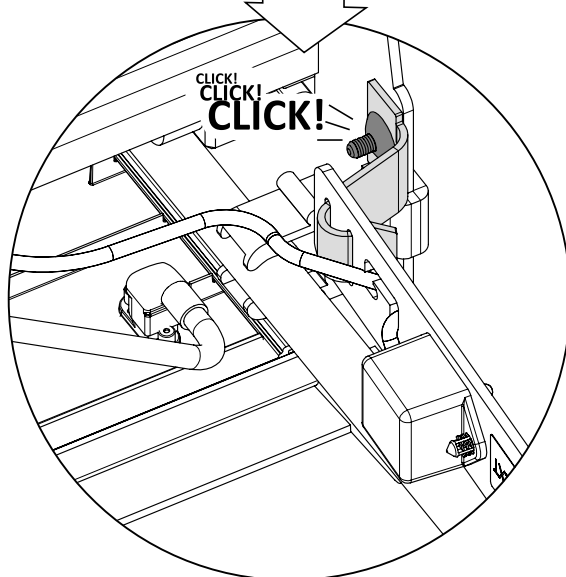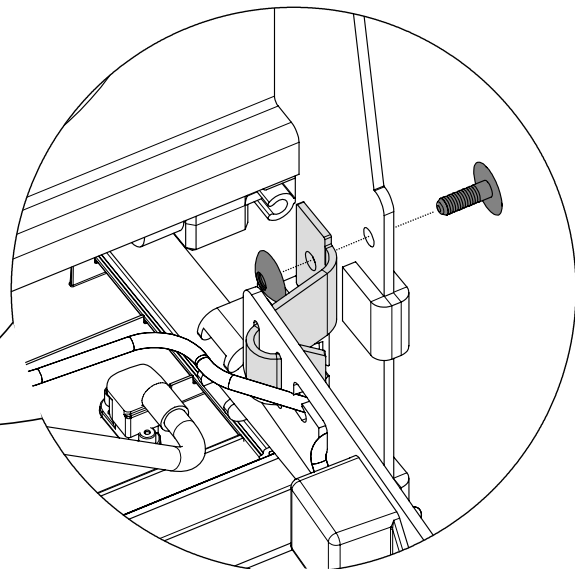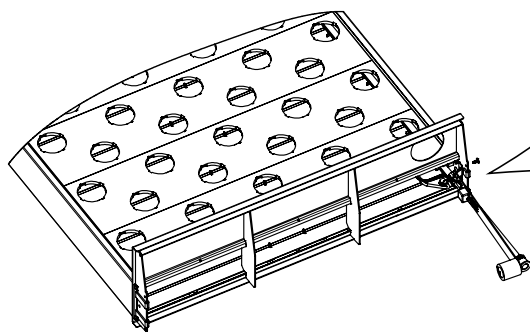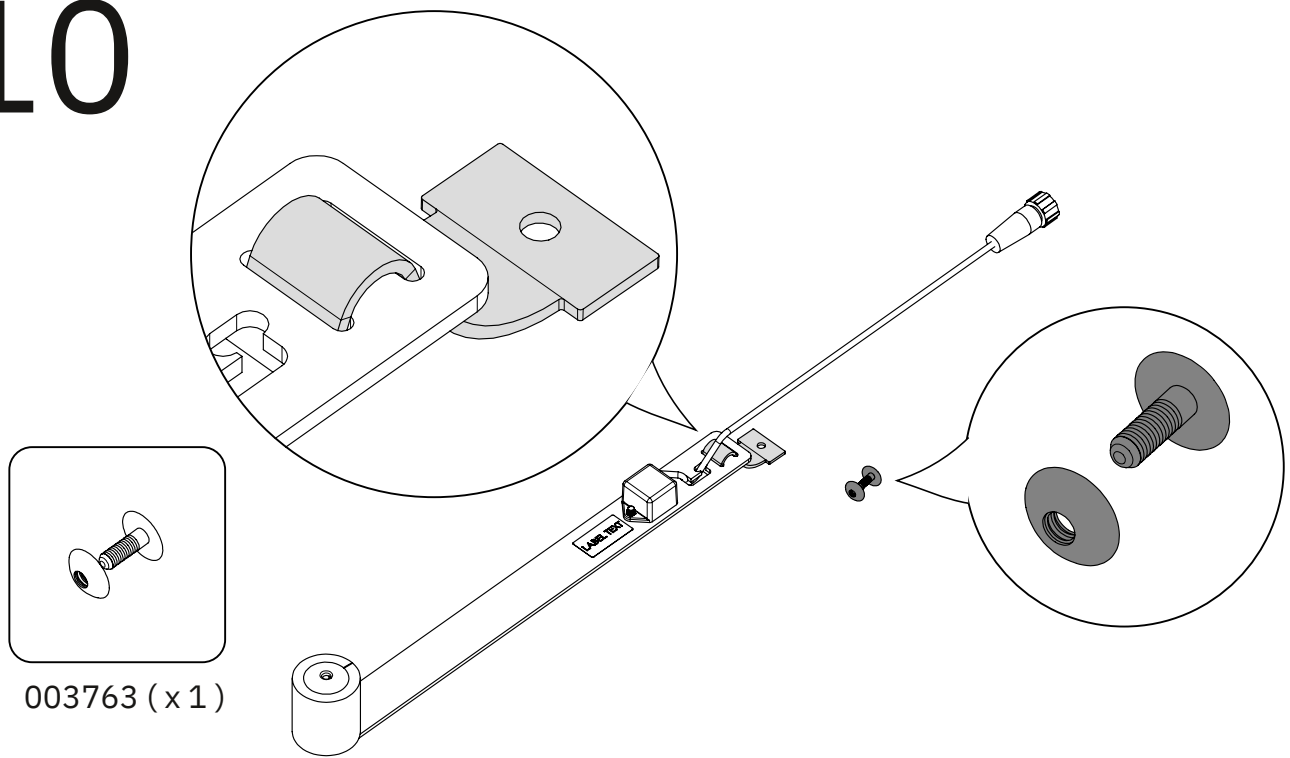    

11

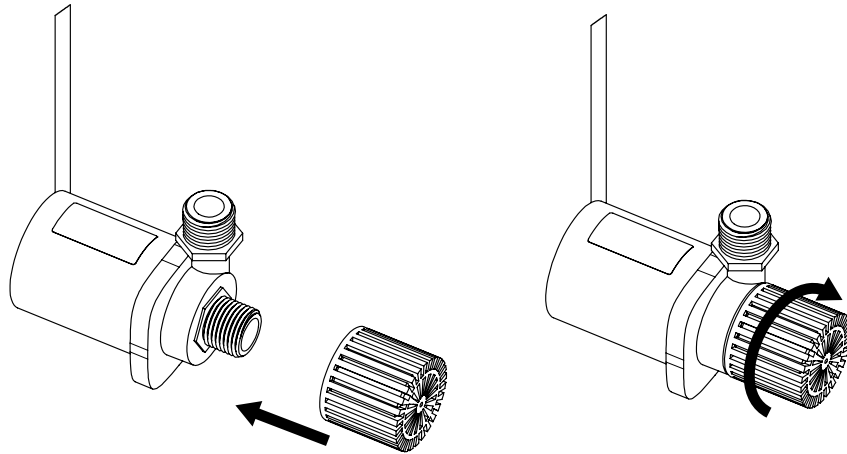 


12


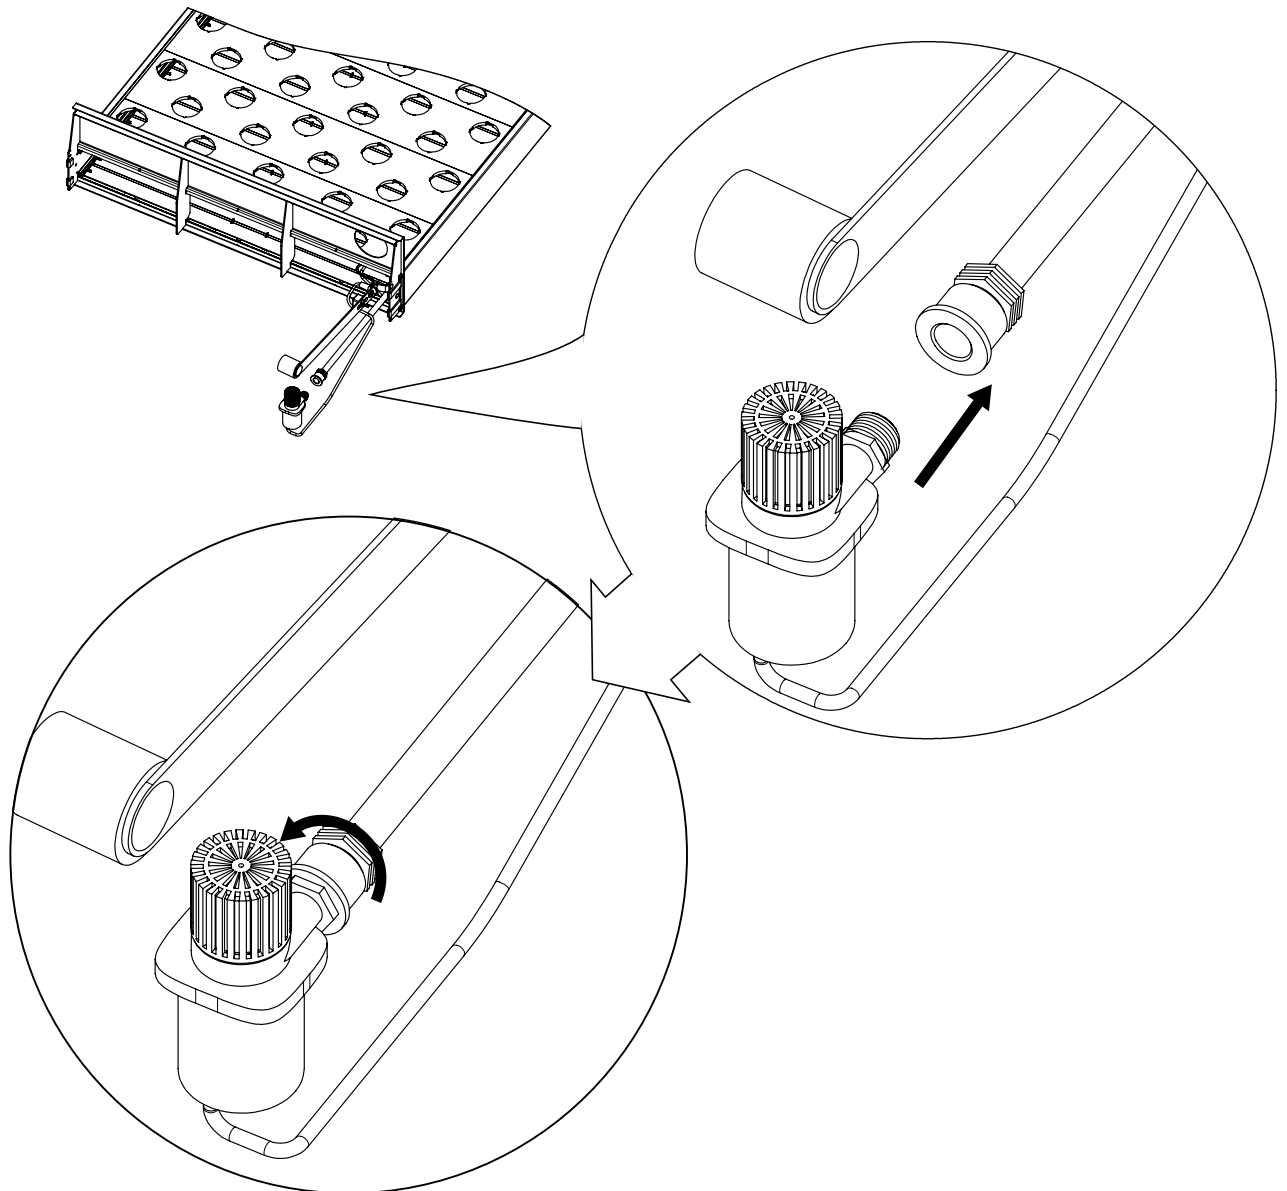 


13

 Upright

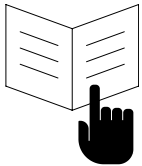


V 1.0



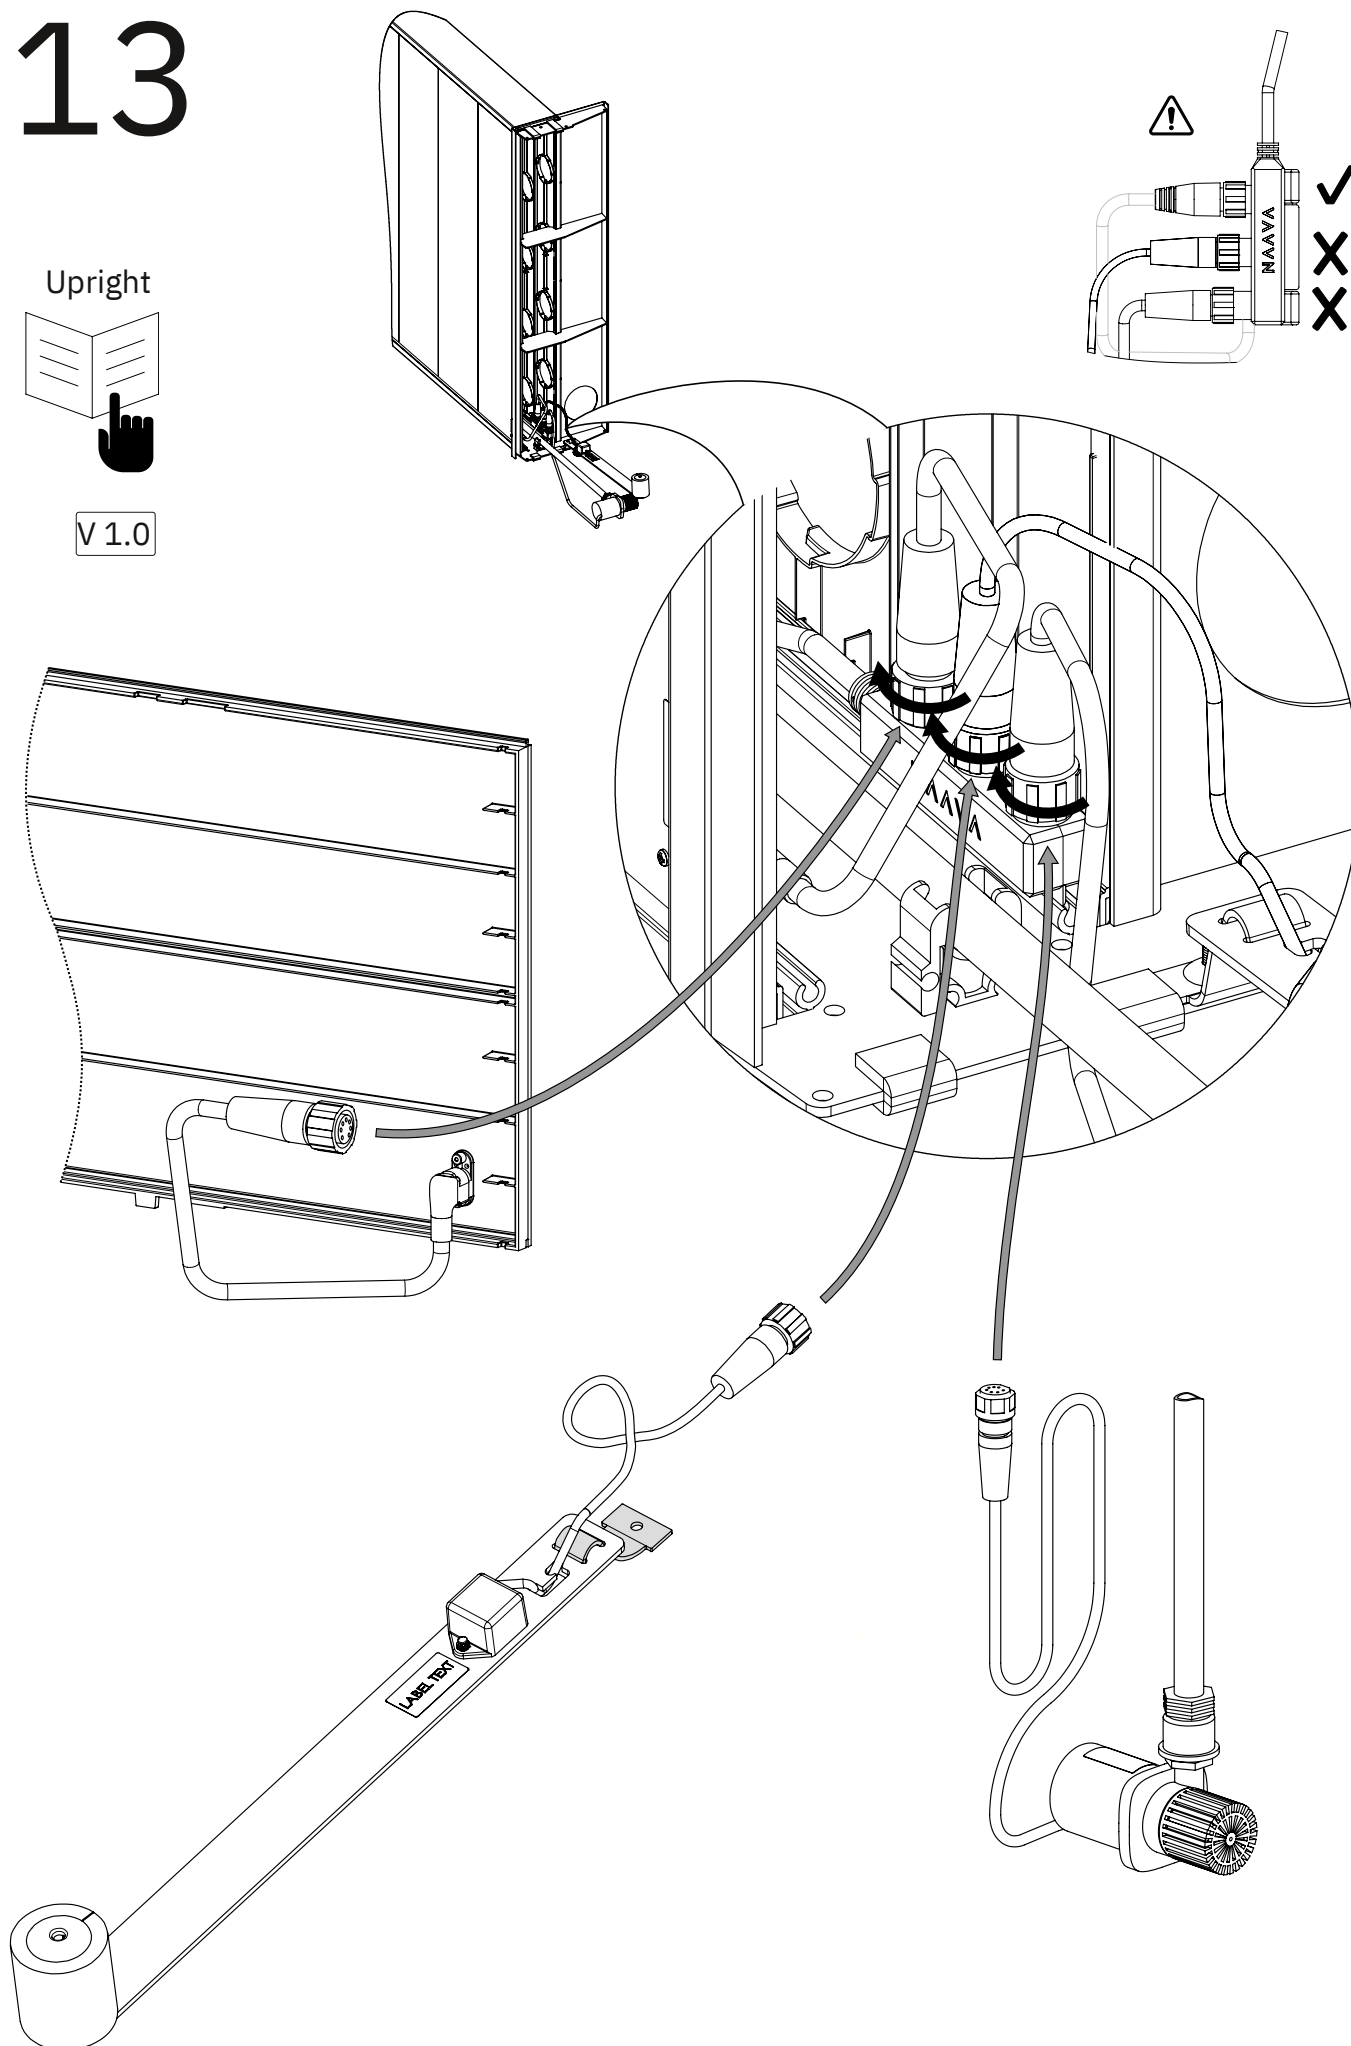 
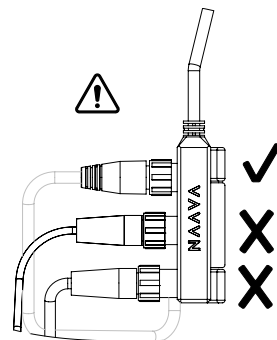 


13

Upright










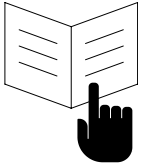


V 1.1

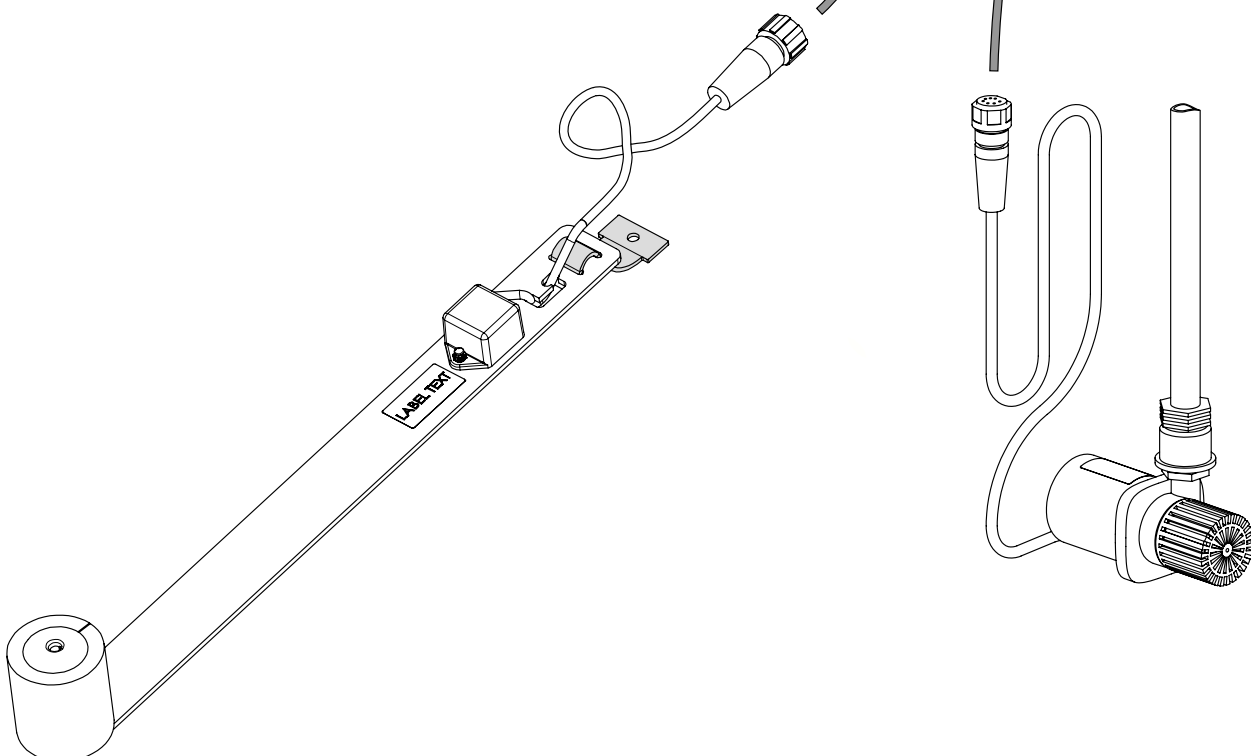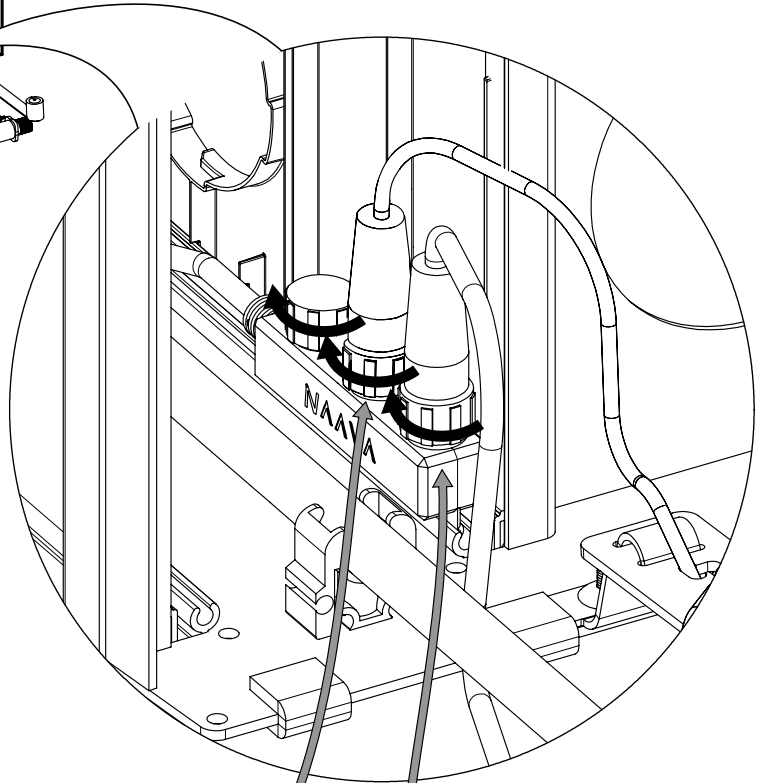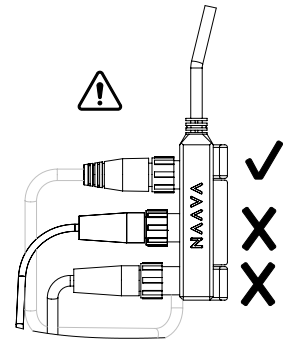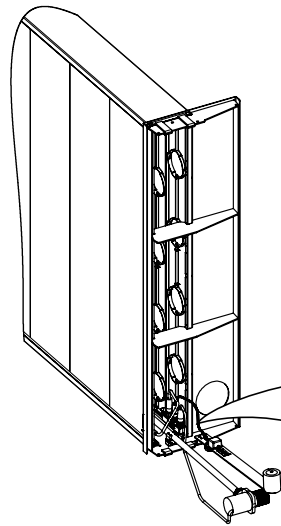    








(B.1)

          003992 (x 4)

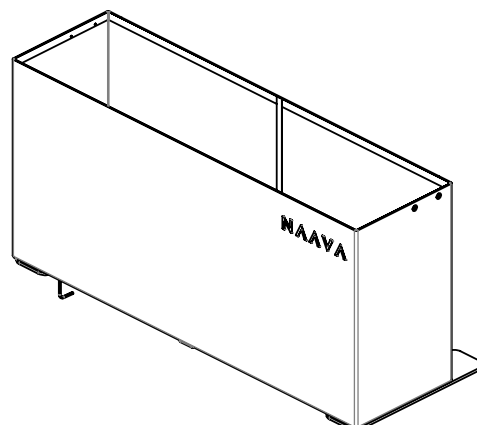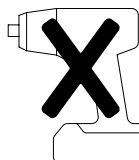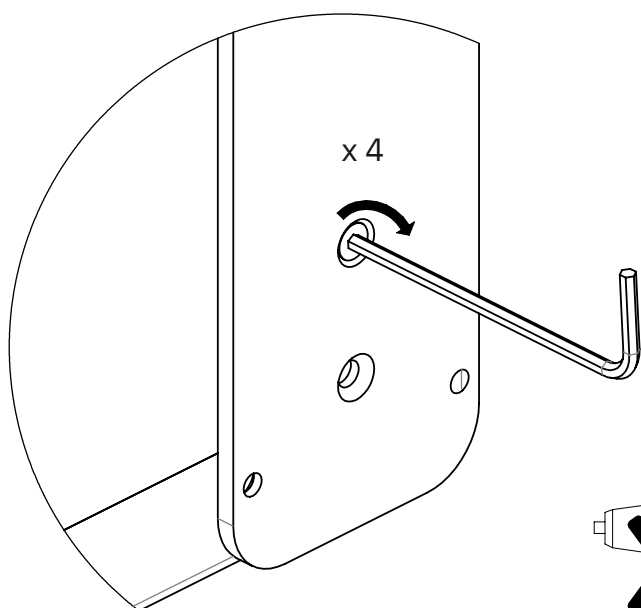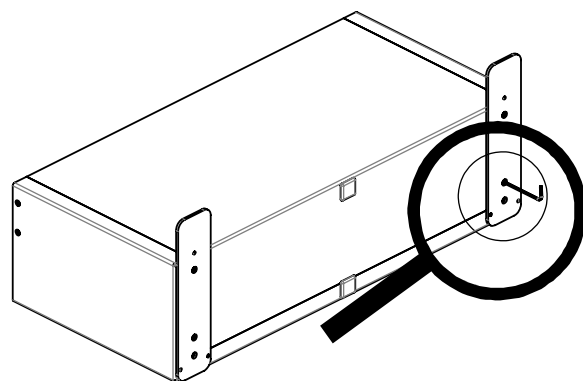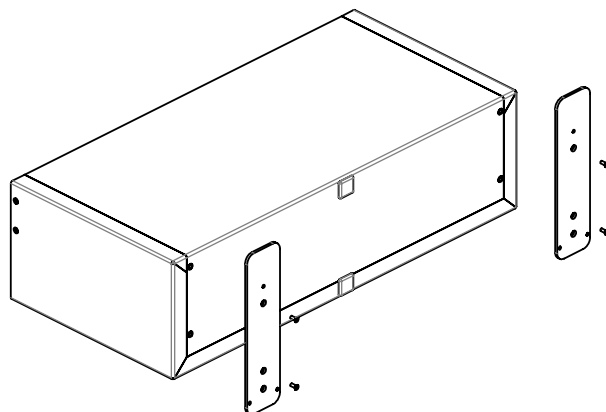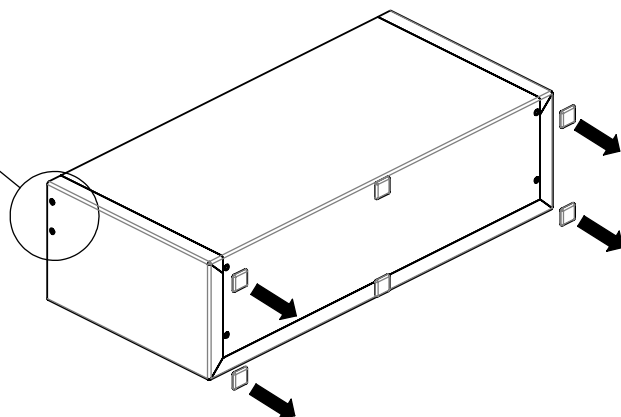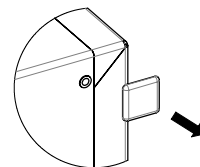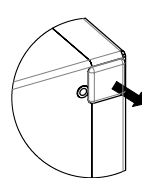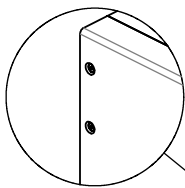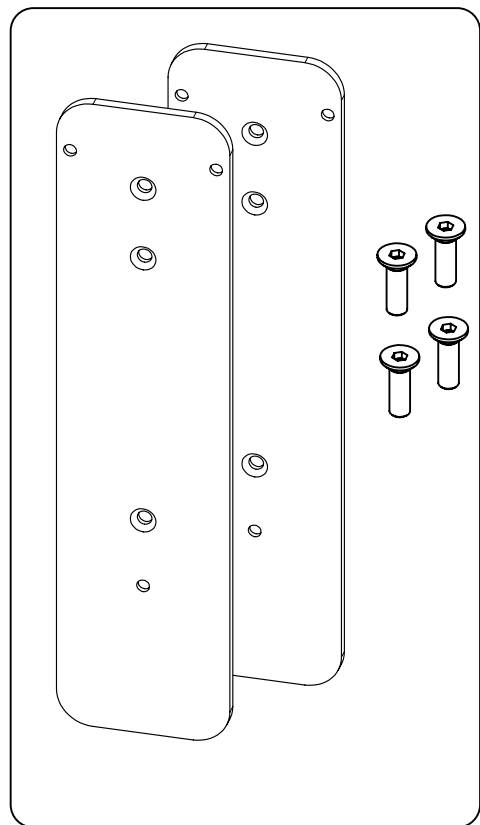


(B.2)

      
 
1005376 (x 4)

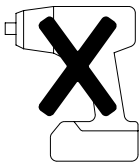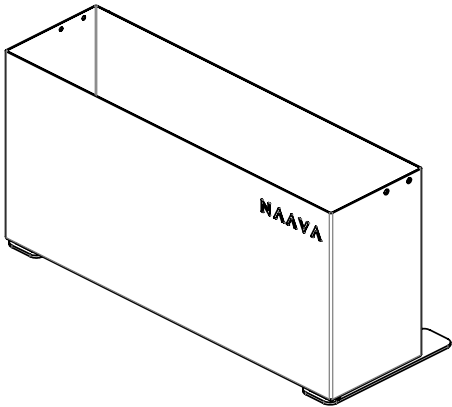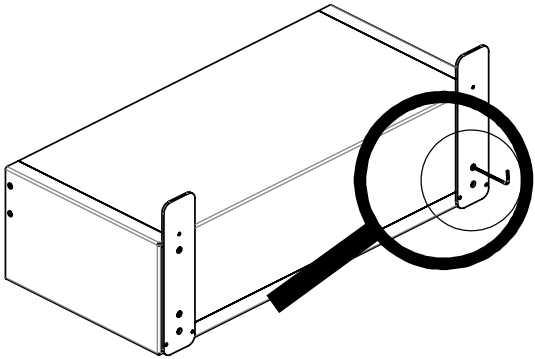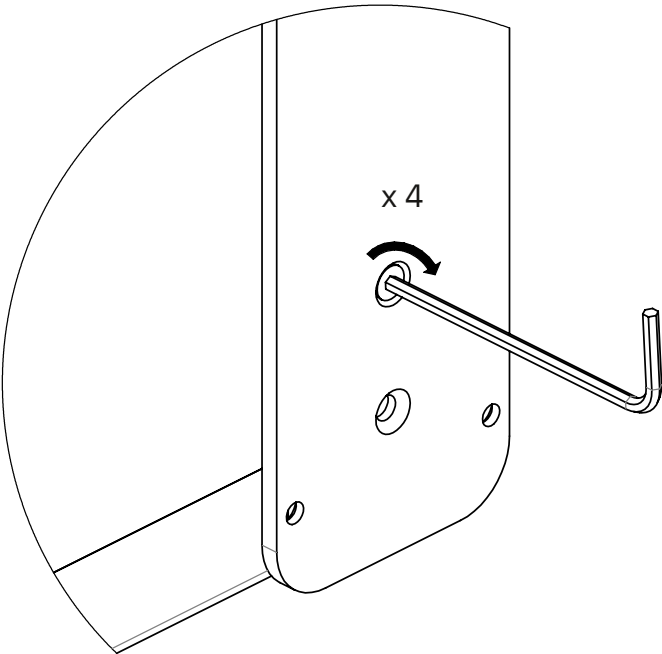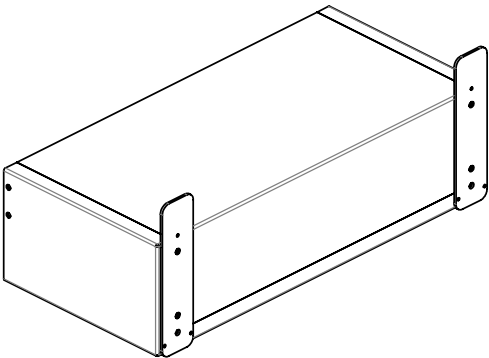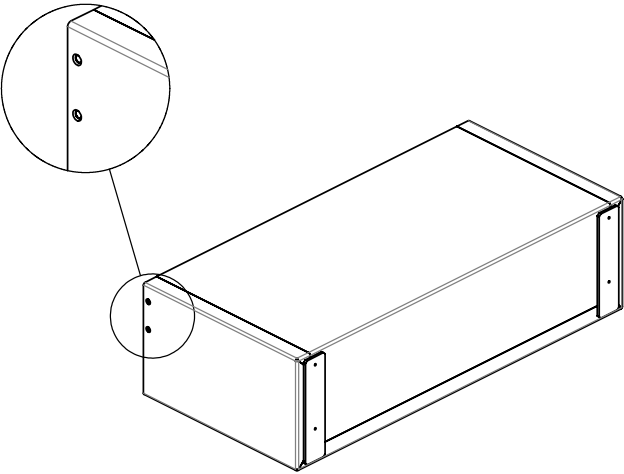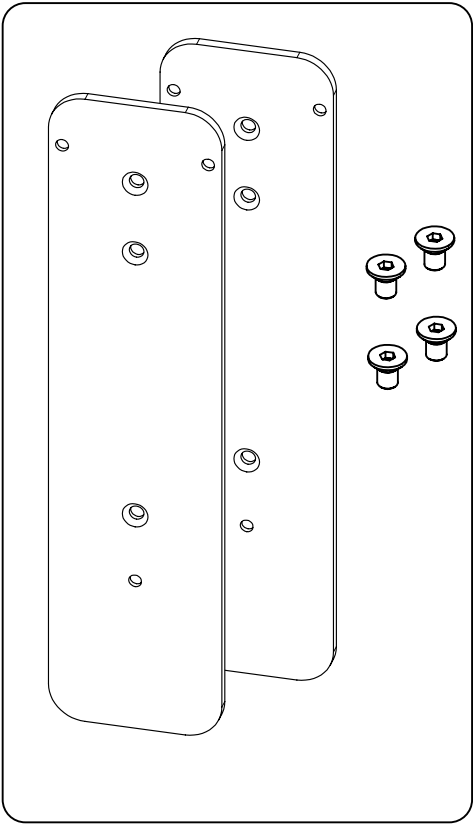



14

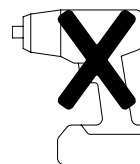 

1005324 (x 4)

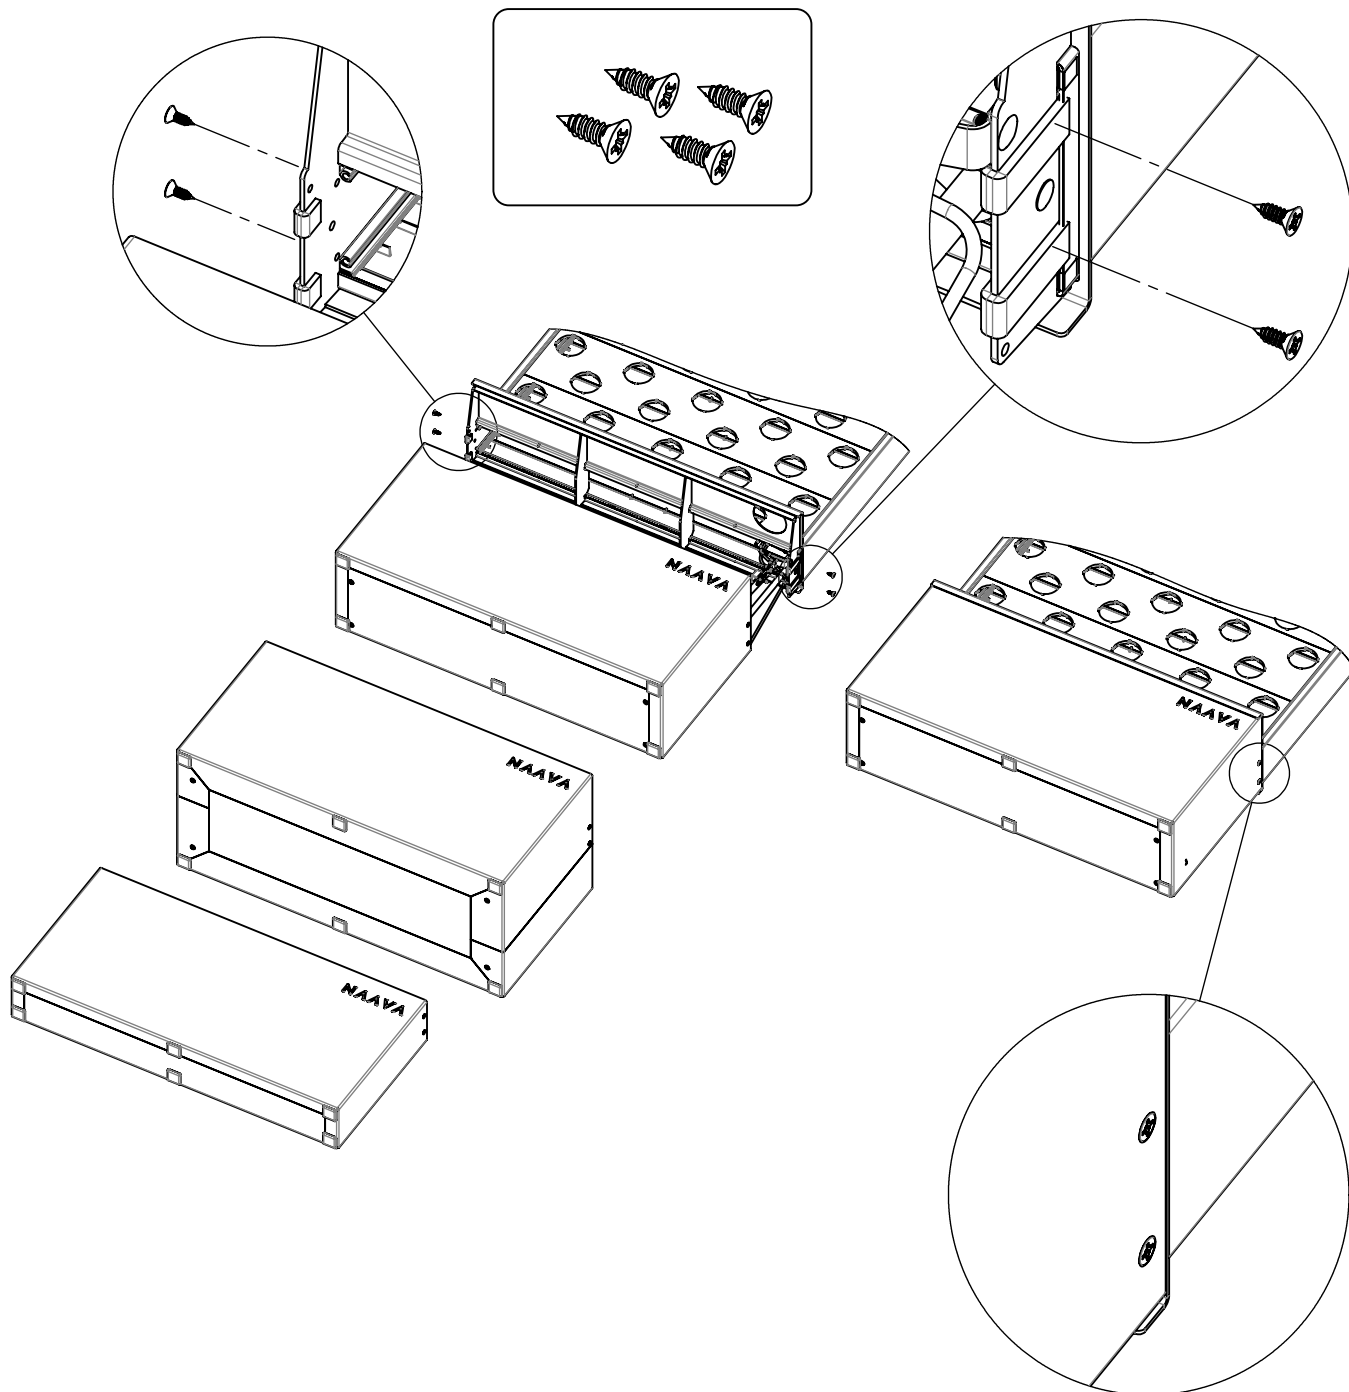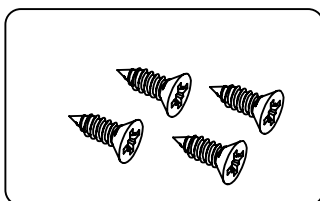  

15





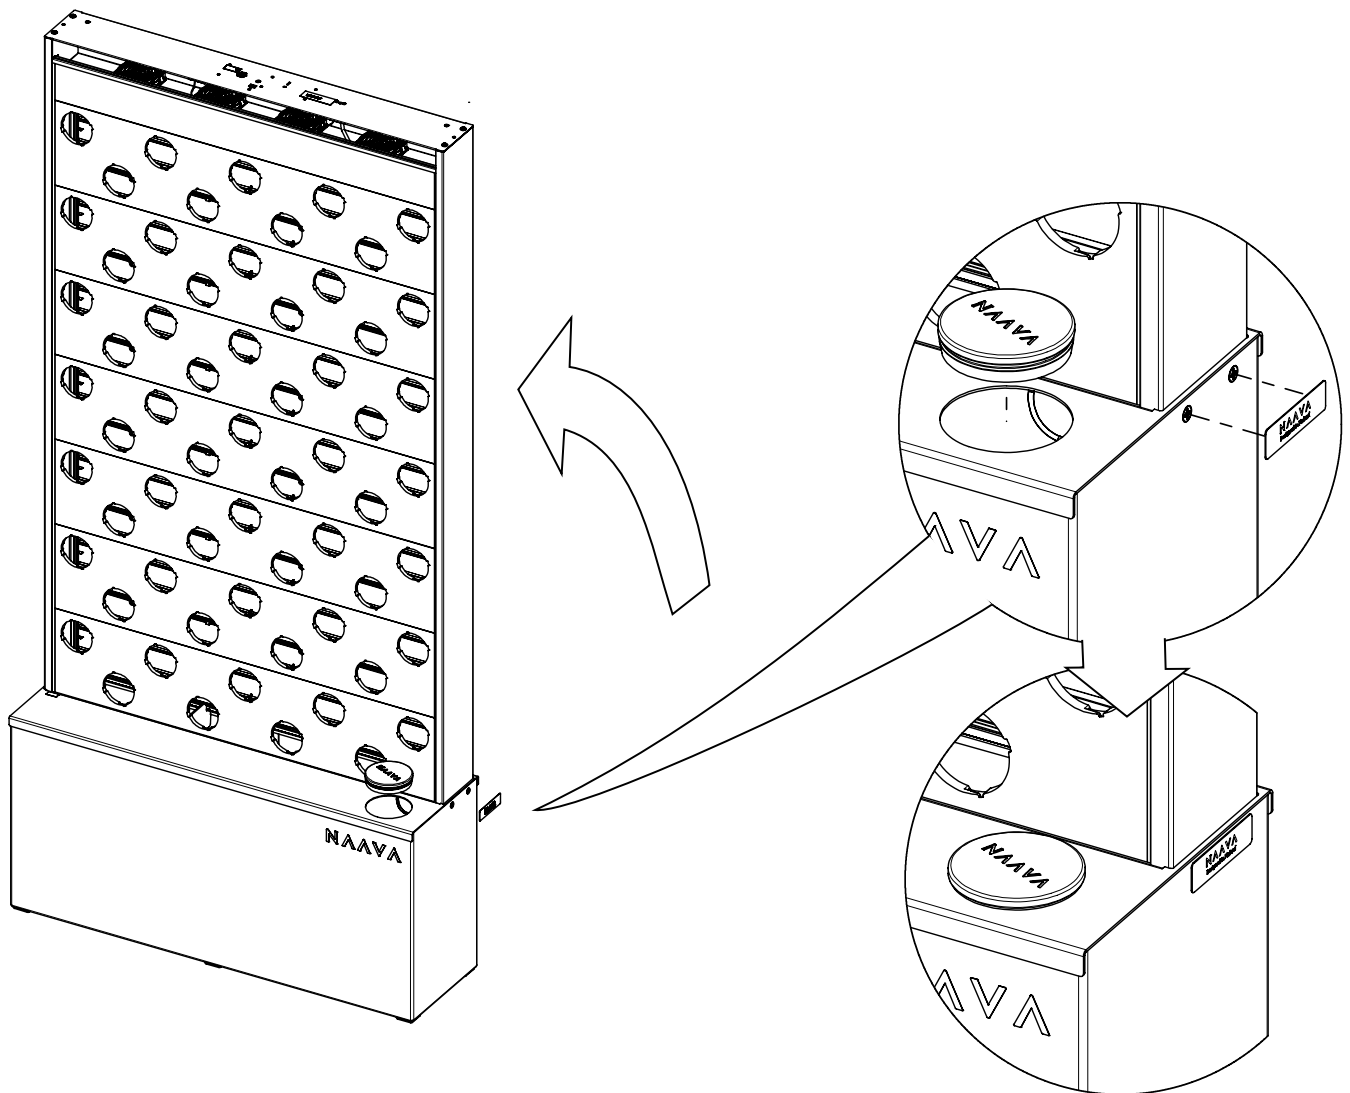 
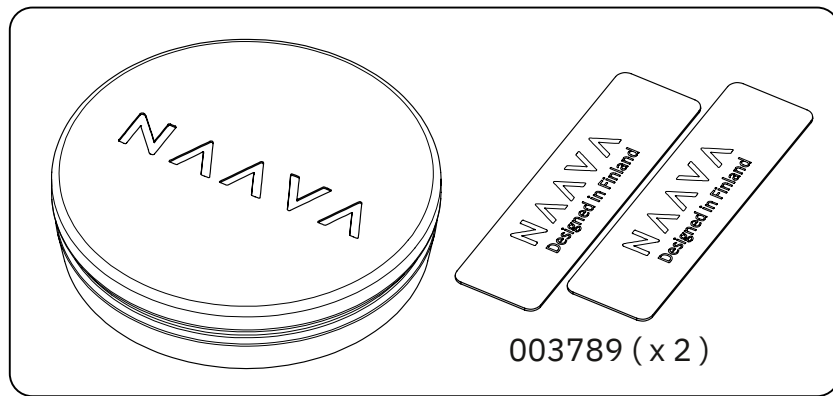 


(A.1 & A.2)

1/2


003673 (x 2)

      003418 (x 2)

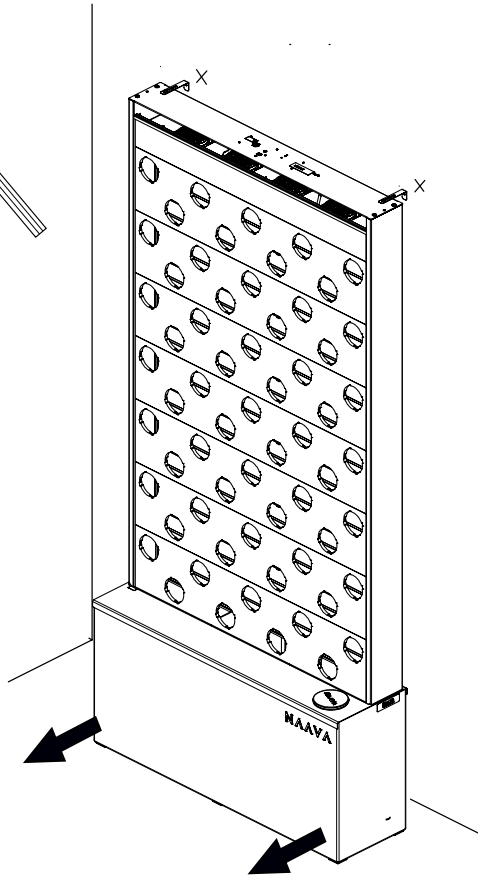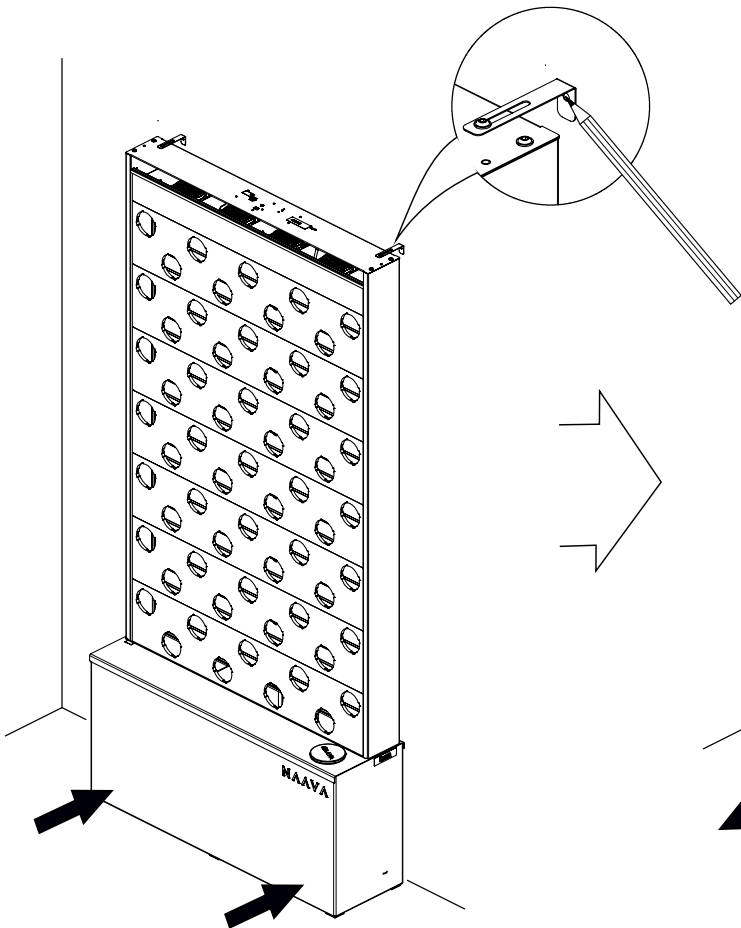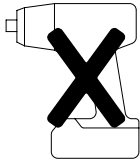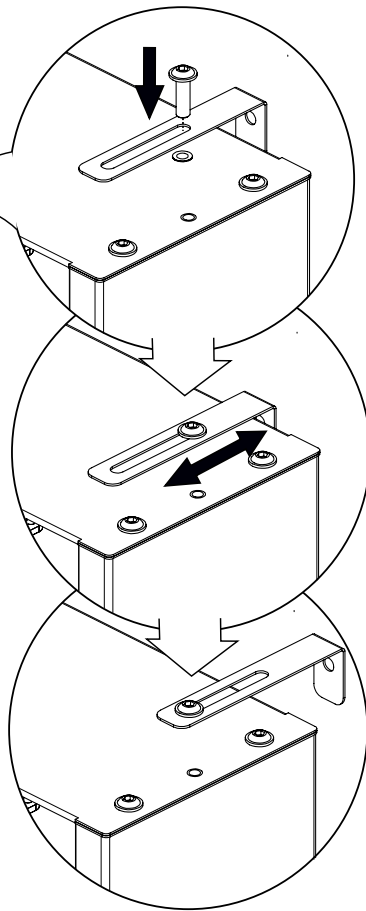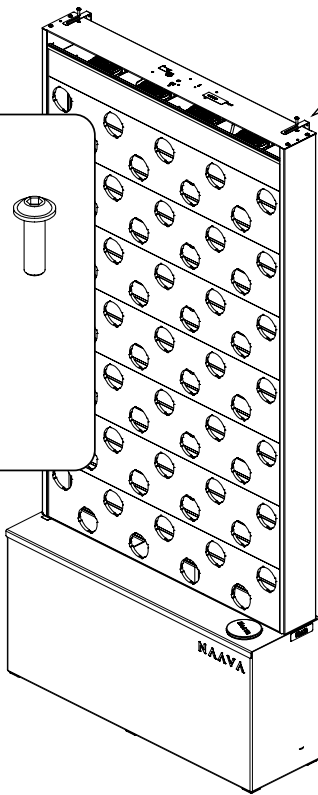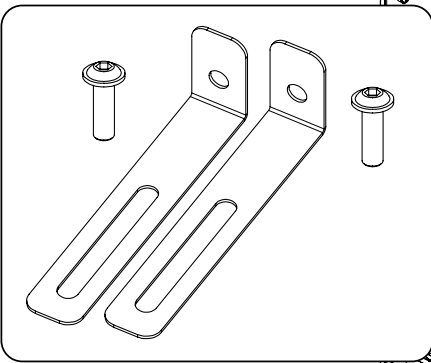


(A.1 & A.2)

 
2/2

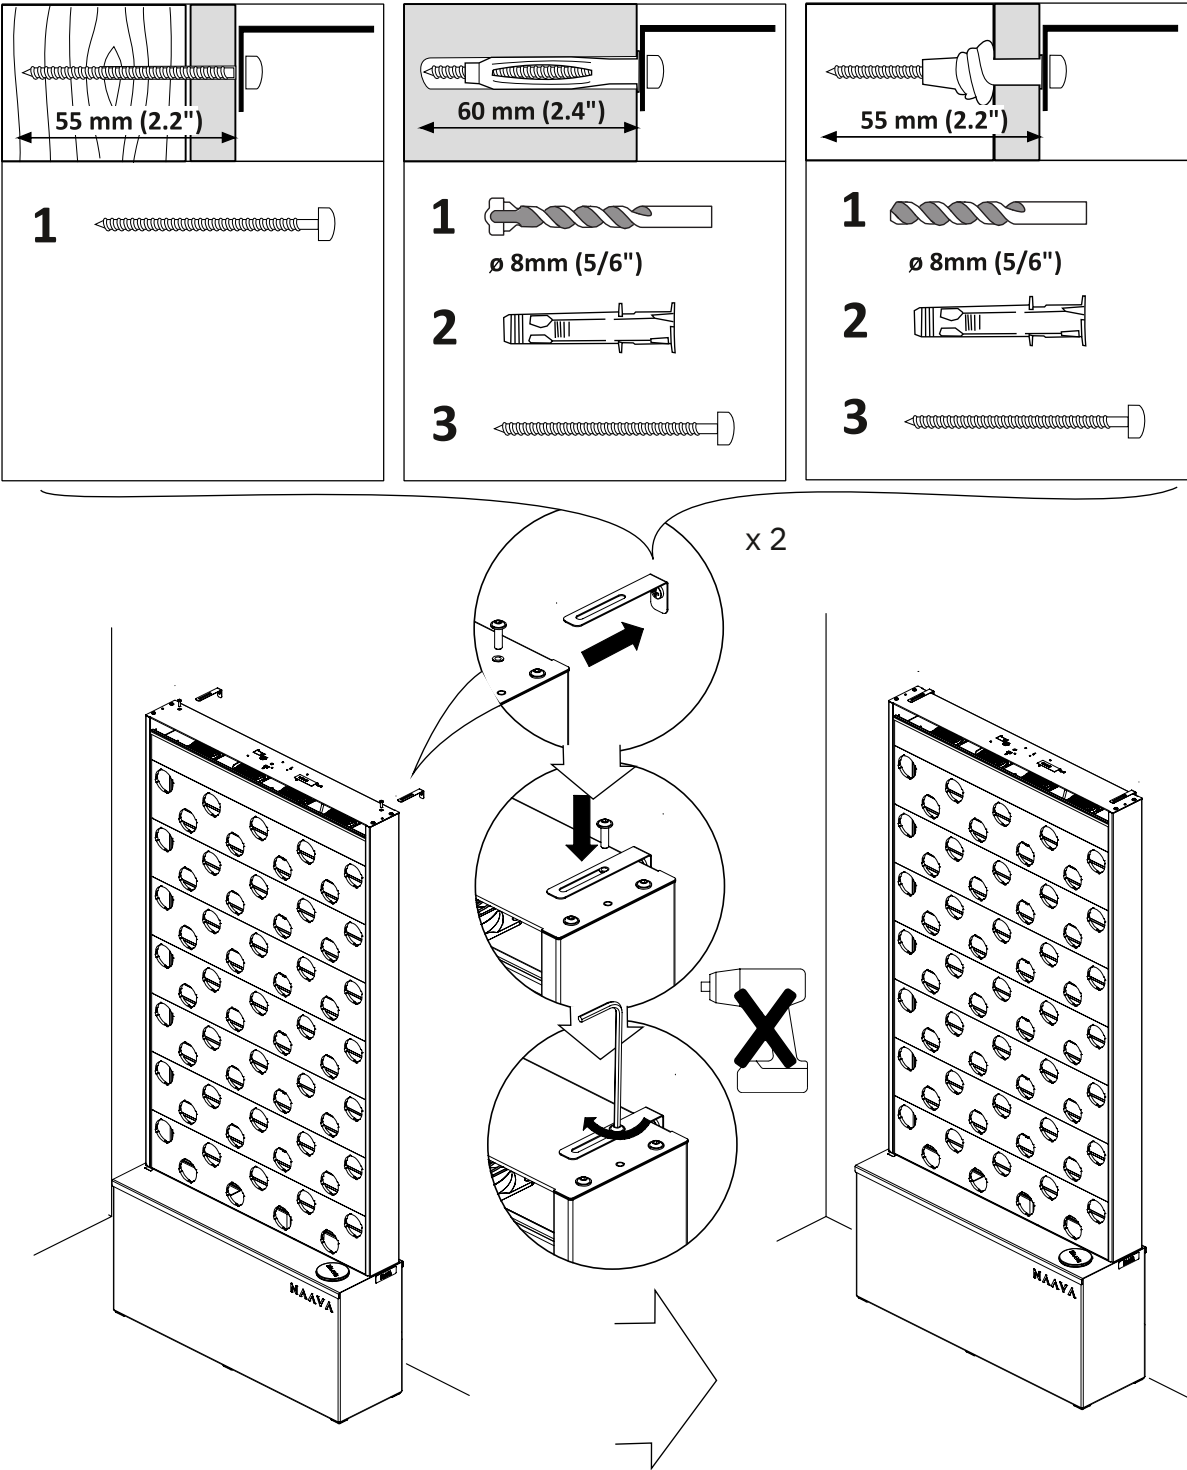



16

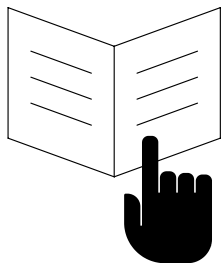 


Quick Guide

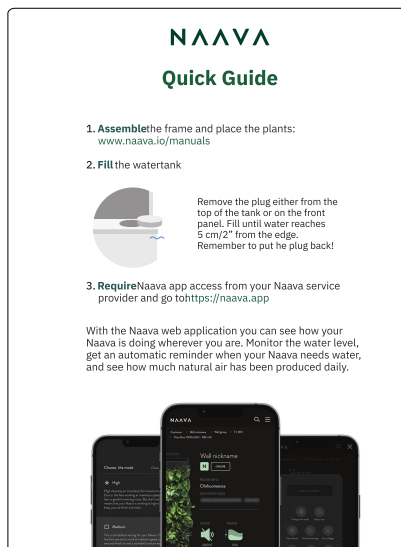 

17

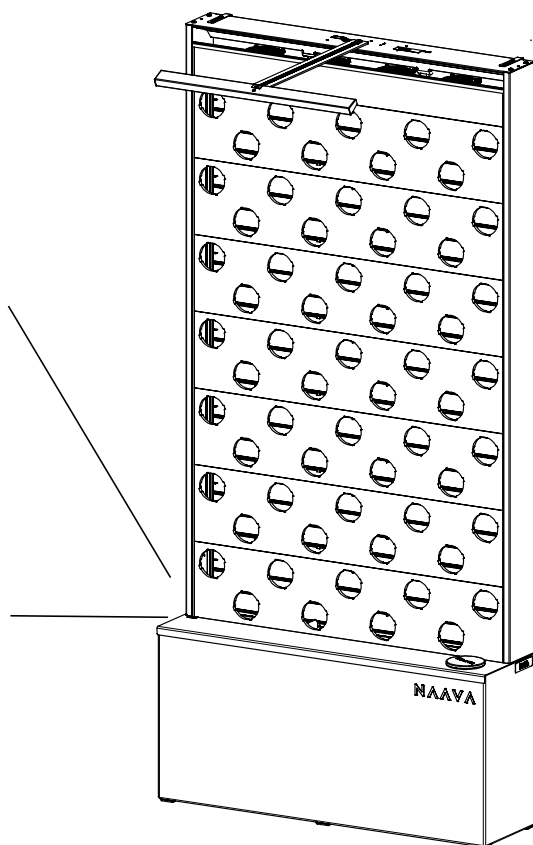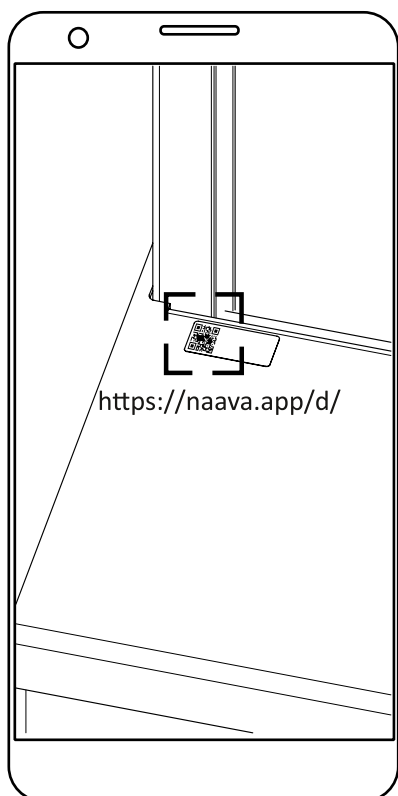  





Naava N-series Swan

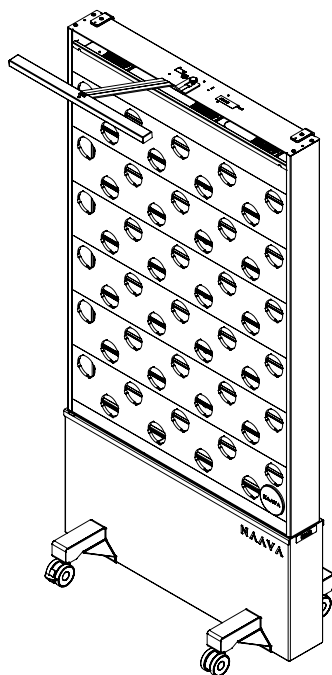 


Swan N100x197
Swan N40"x78"



    
<https://www.naava.io/manuals>

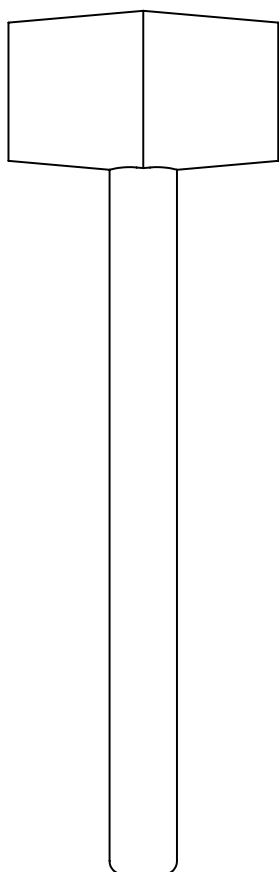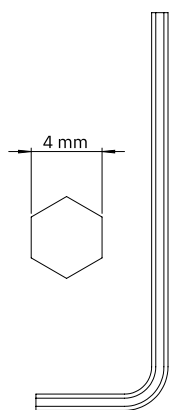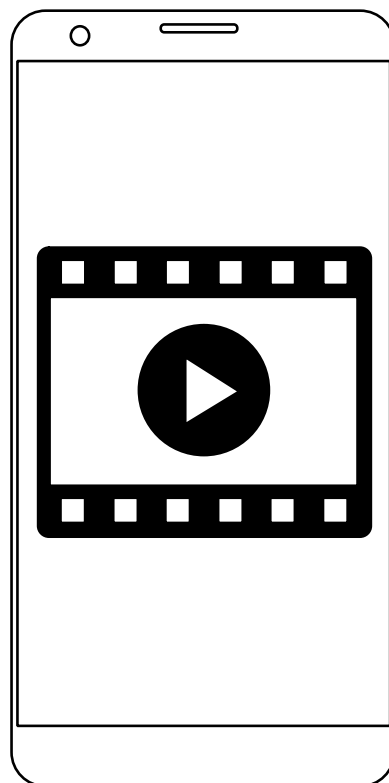

PZ3

 


H 2,5

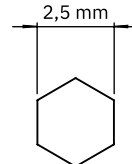 


Click!
0,3 Nm



 
1

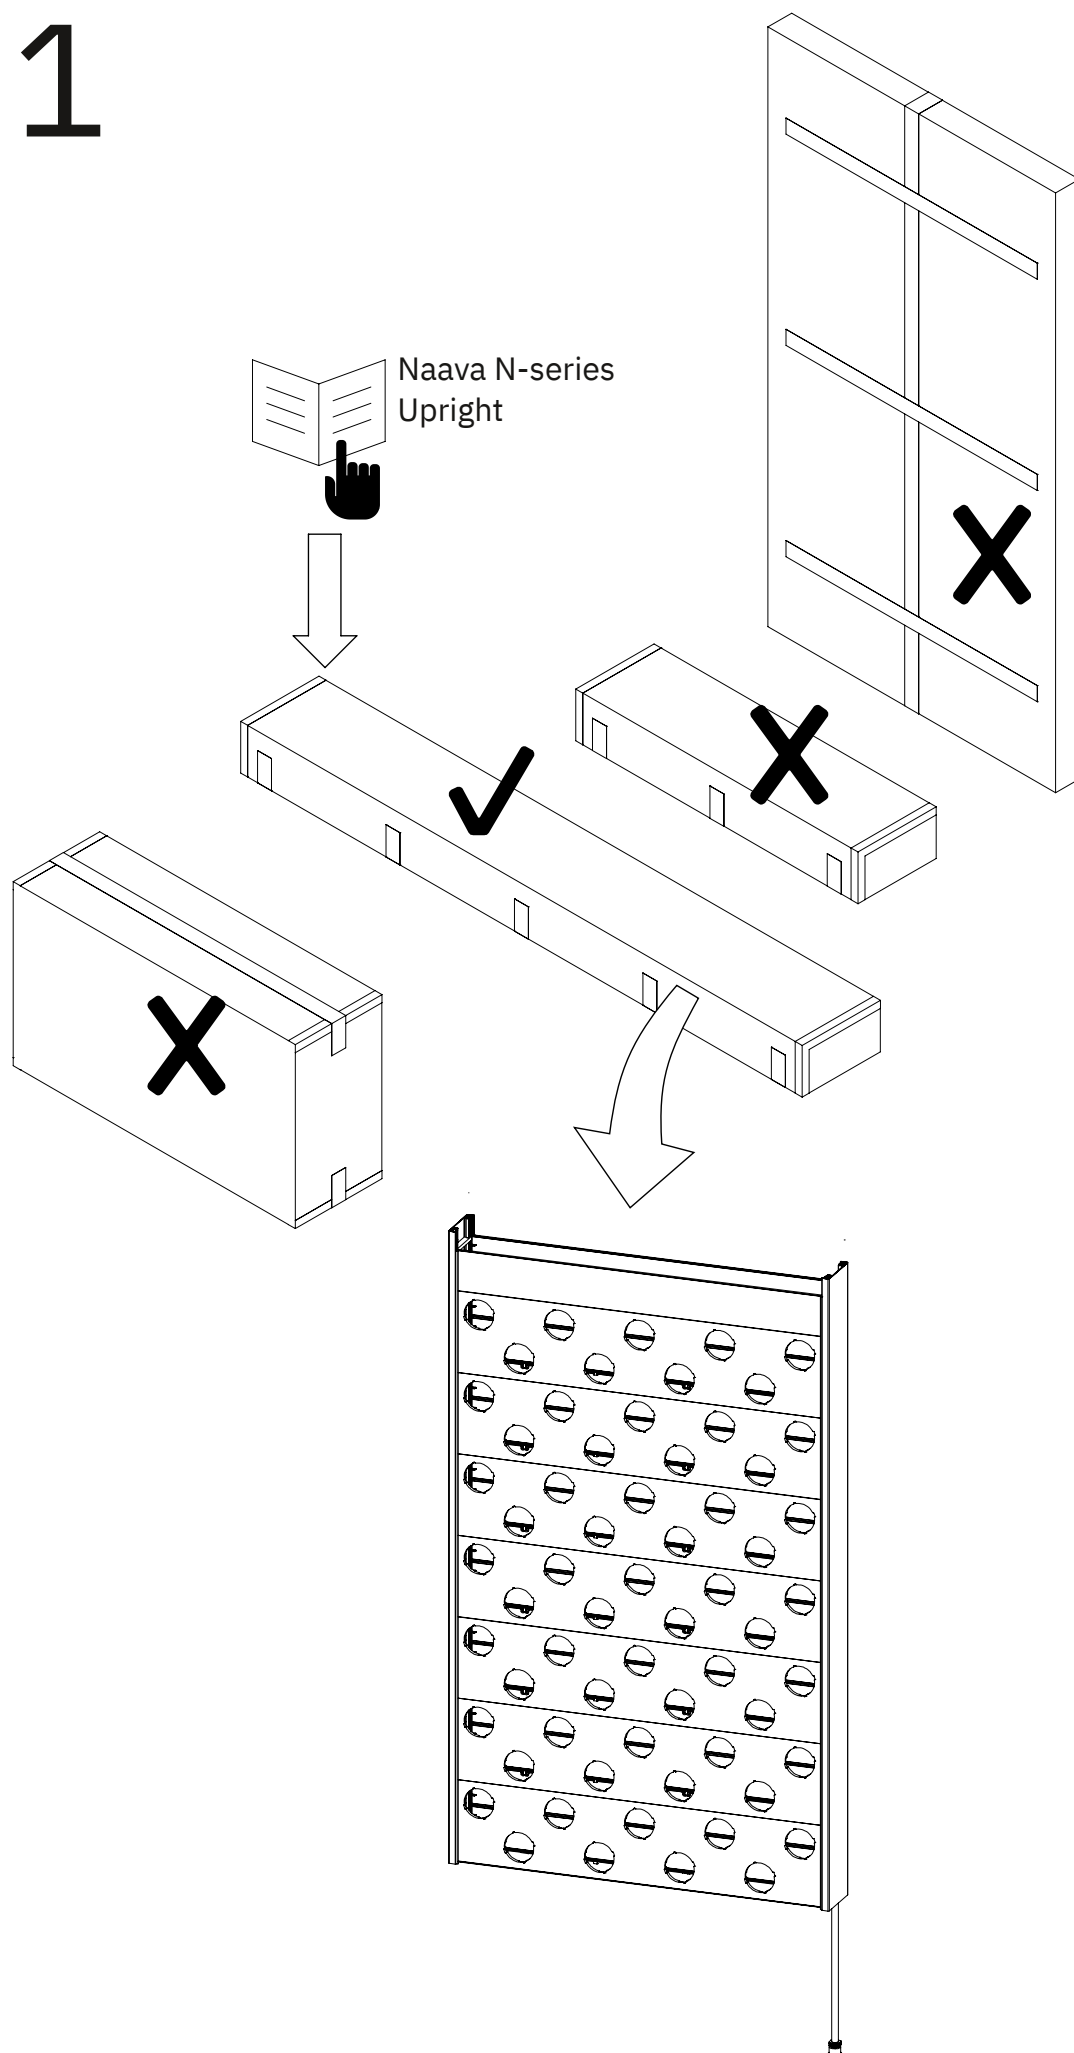



2

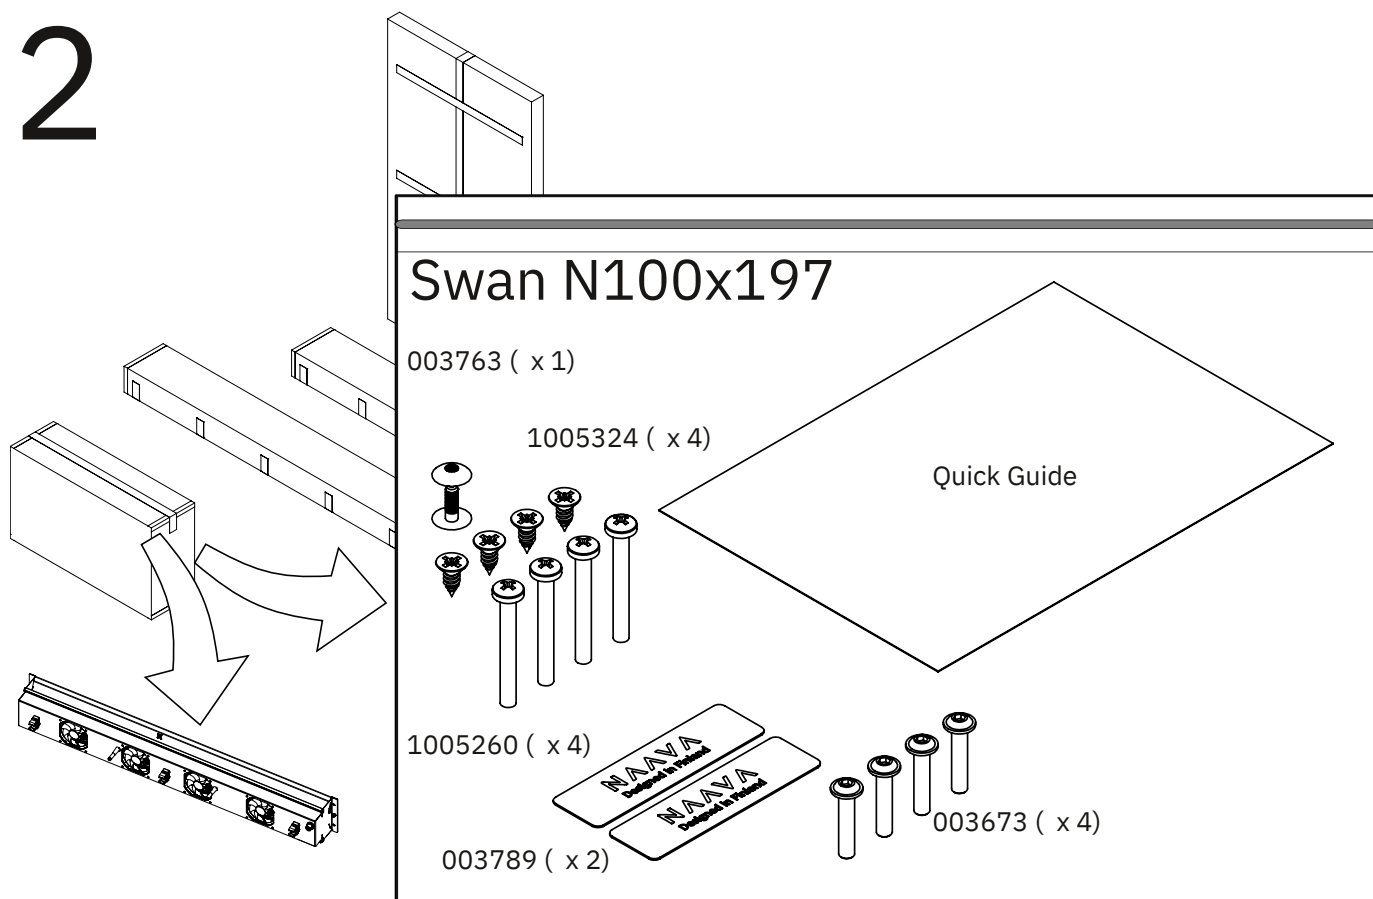 






3

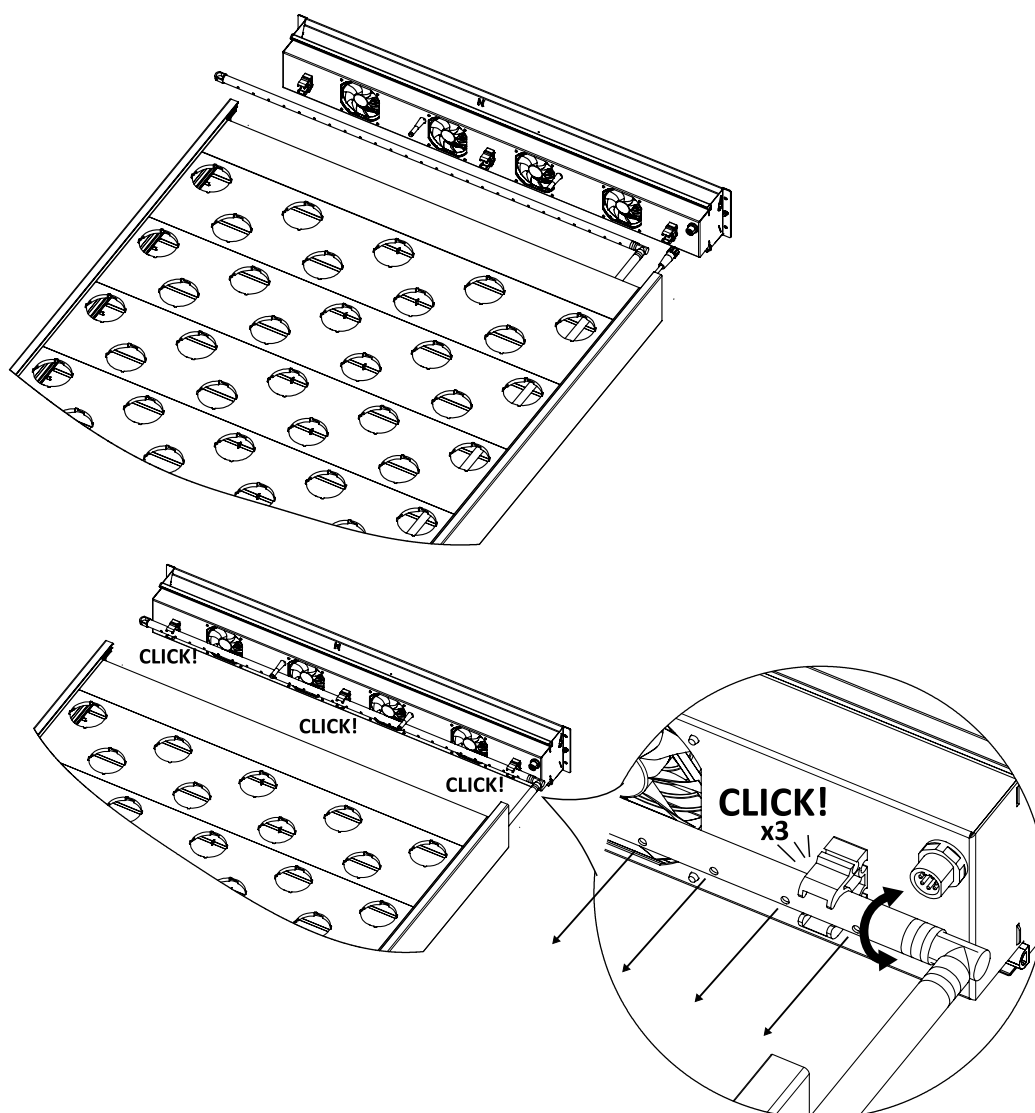 




4

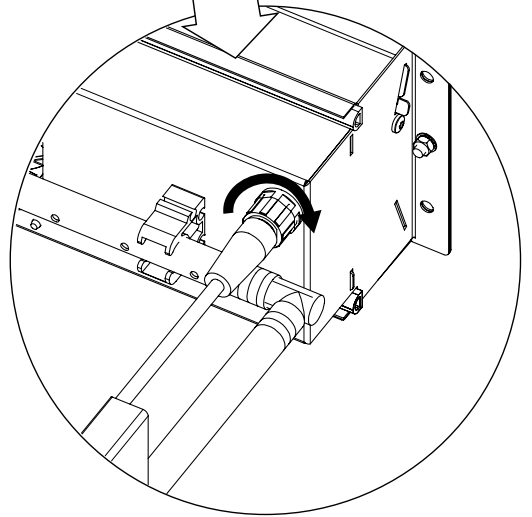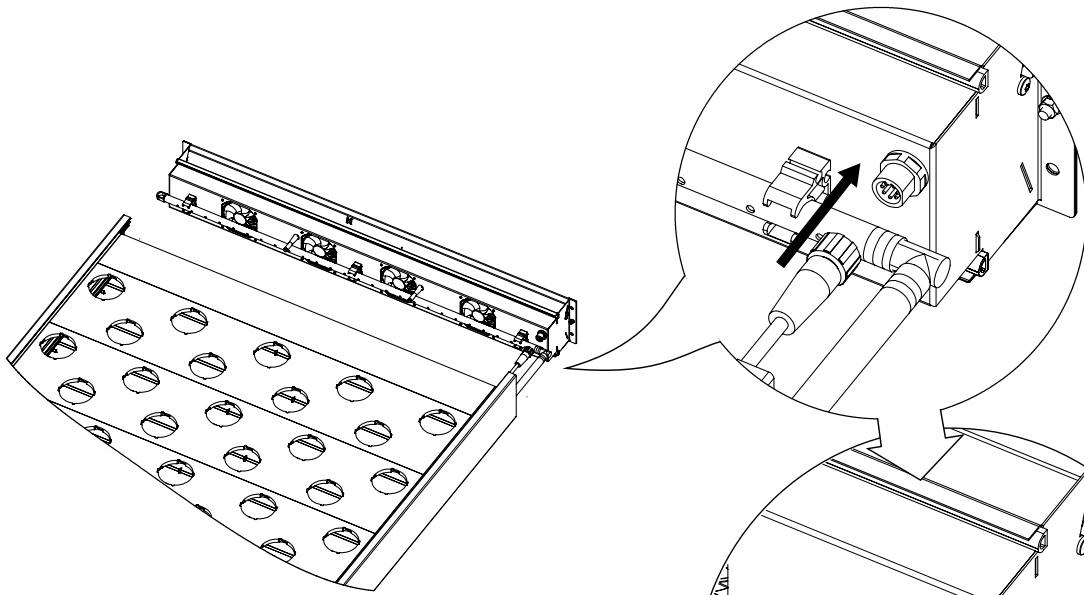  





5

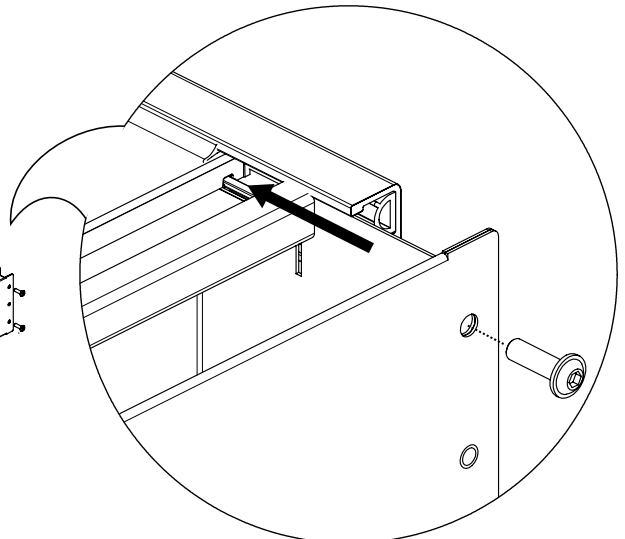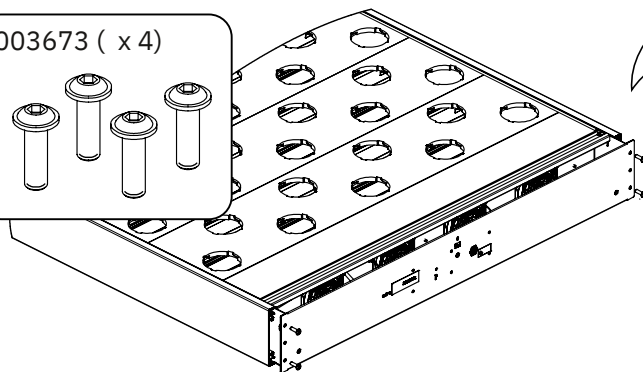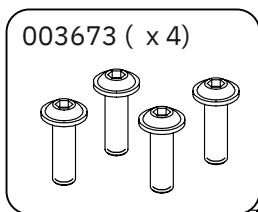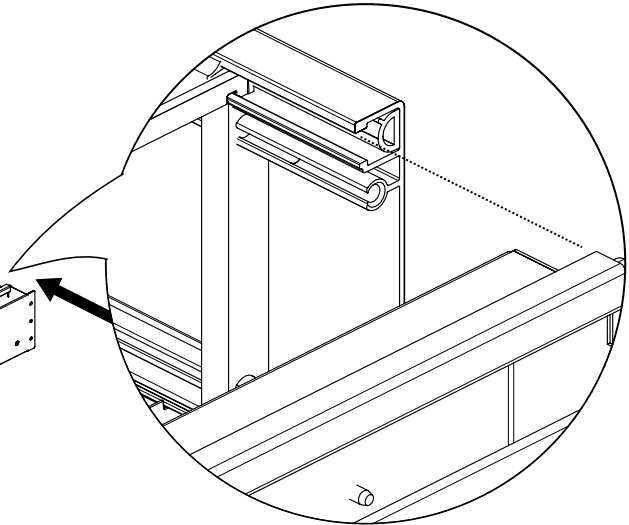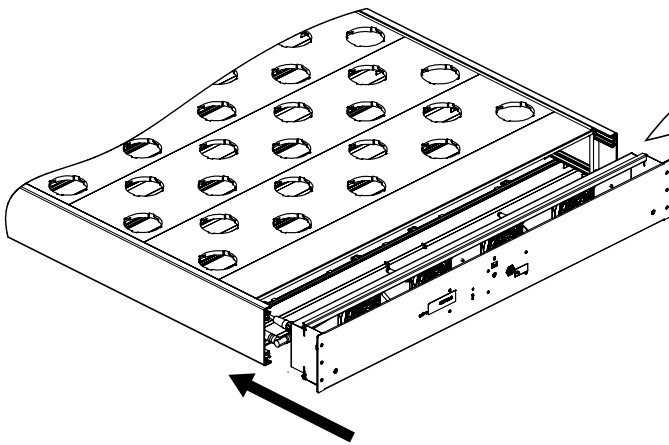     



6

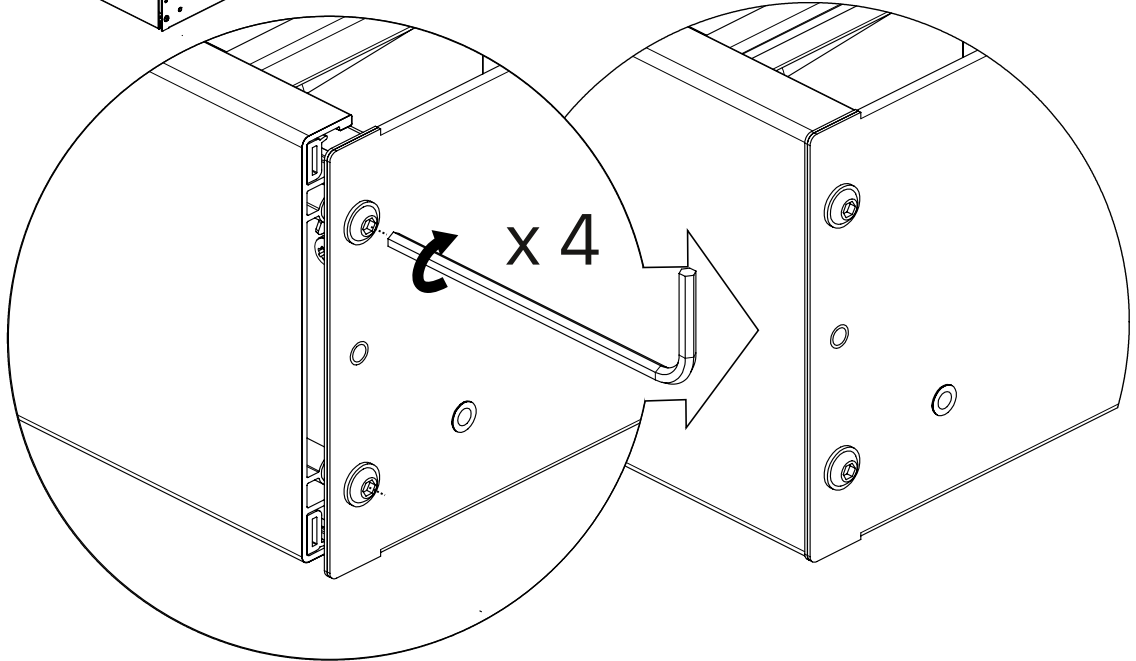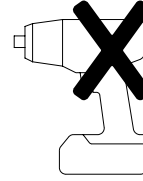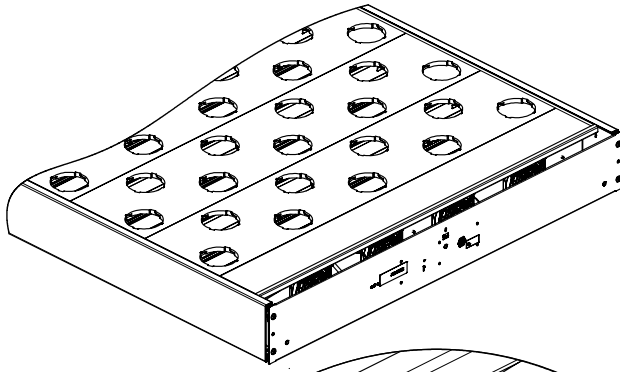   

7


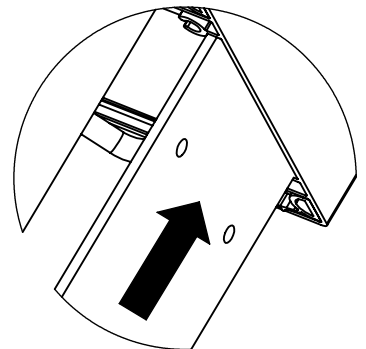 
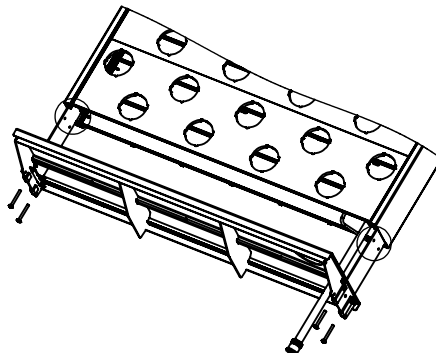 
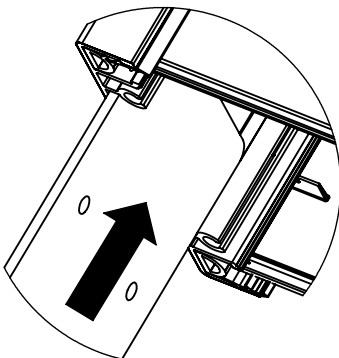 
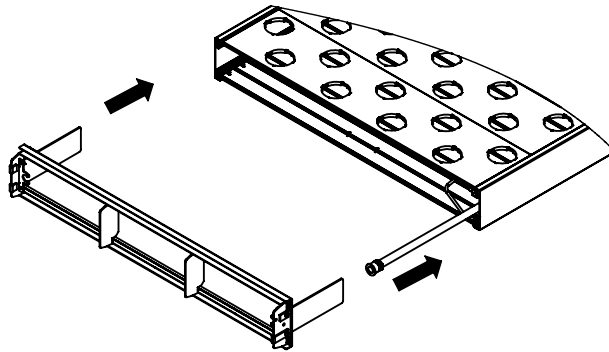 


8

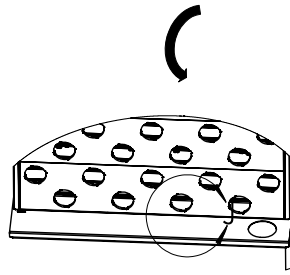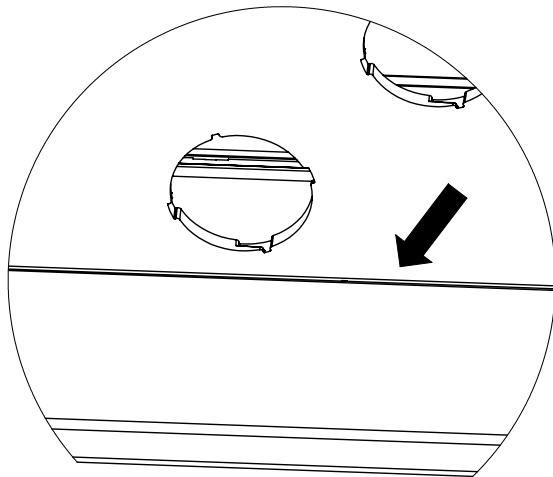  


X

     ✓

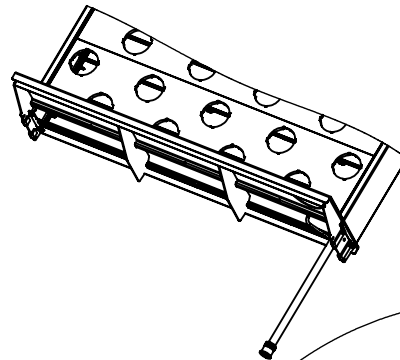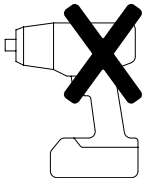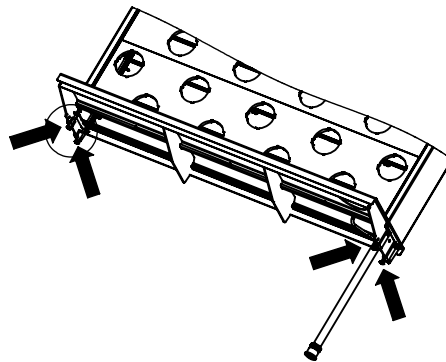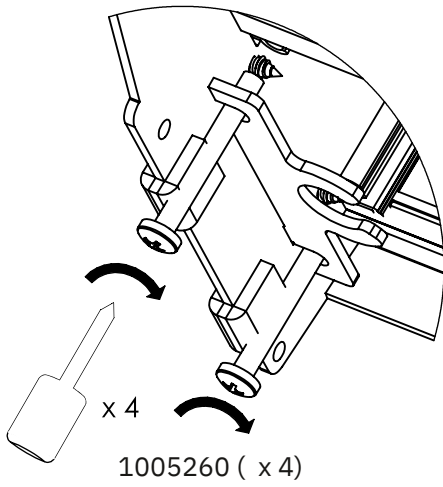


[0,16 max]
4 max.

 
[0,00 min]
0 min.

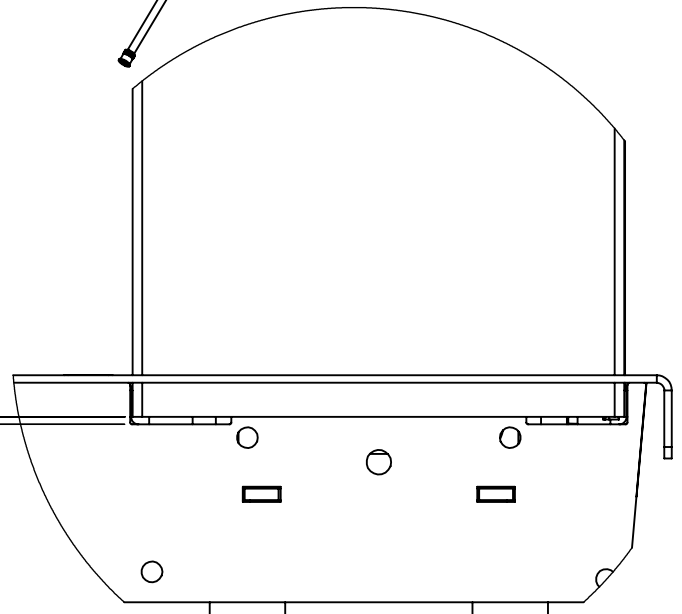


9

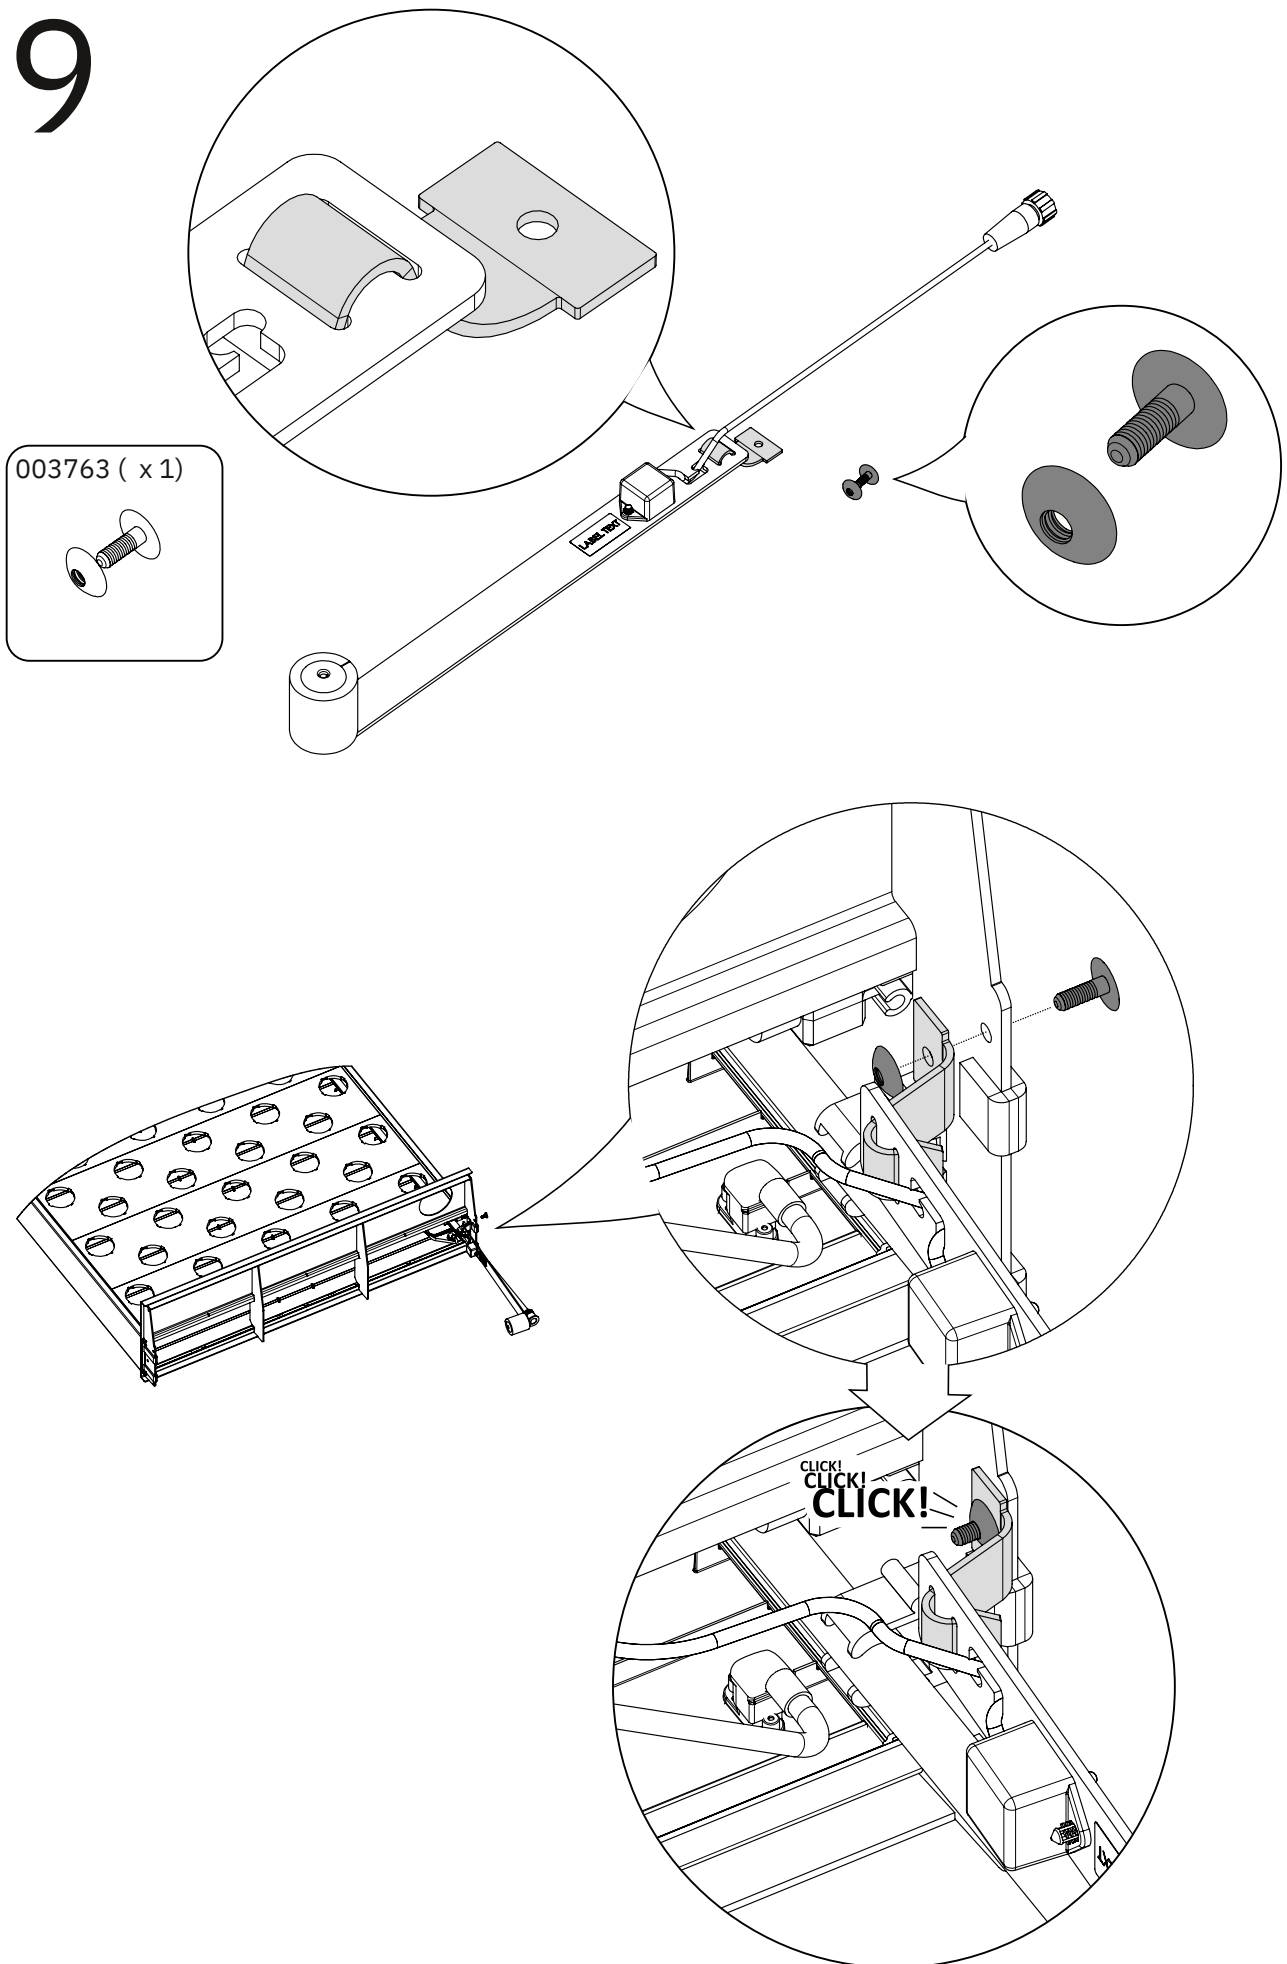 

10

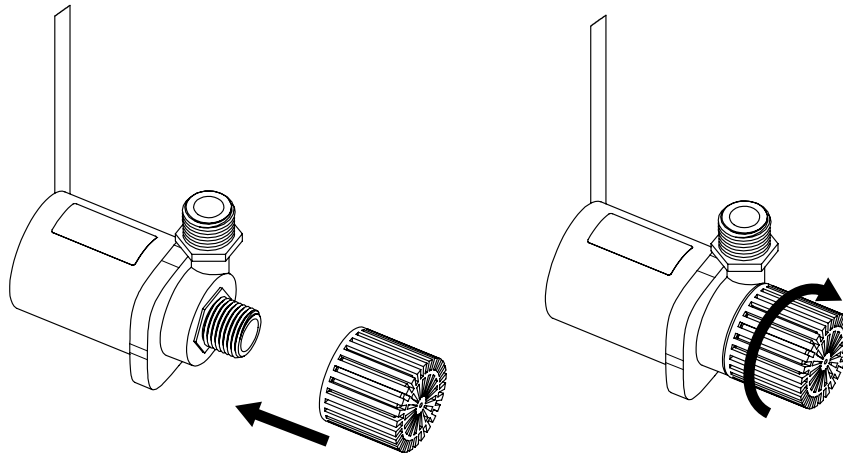 


11

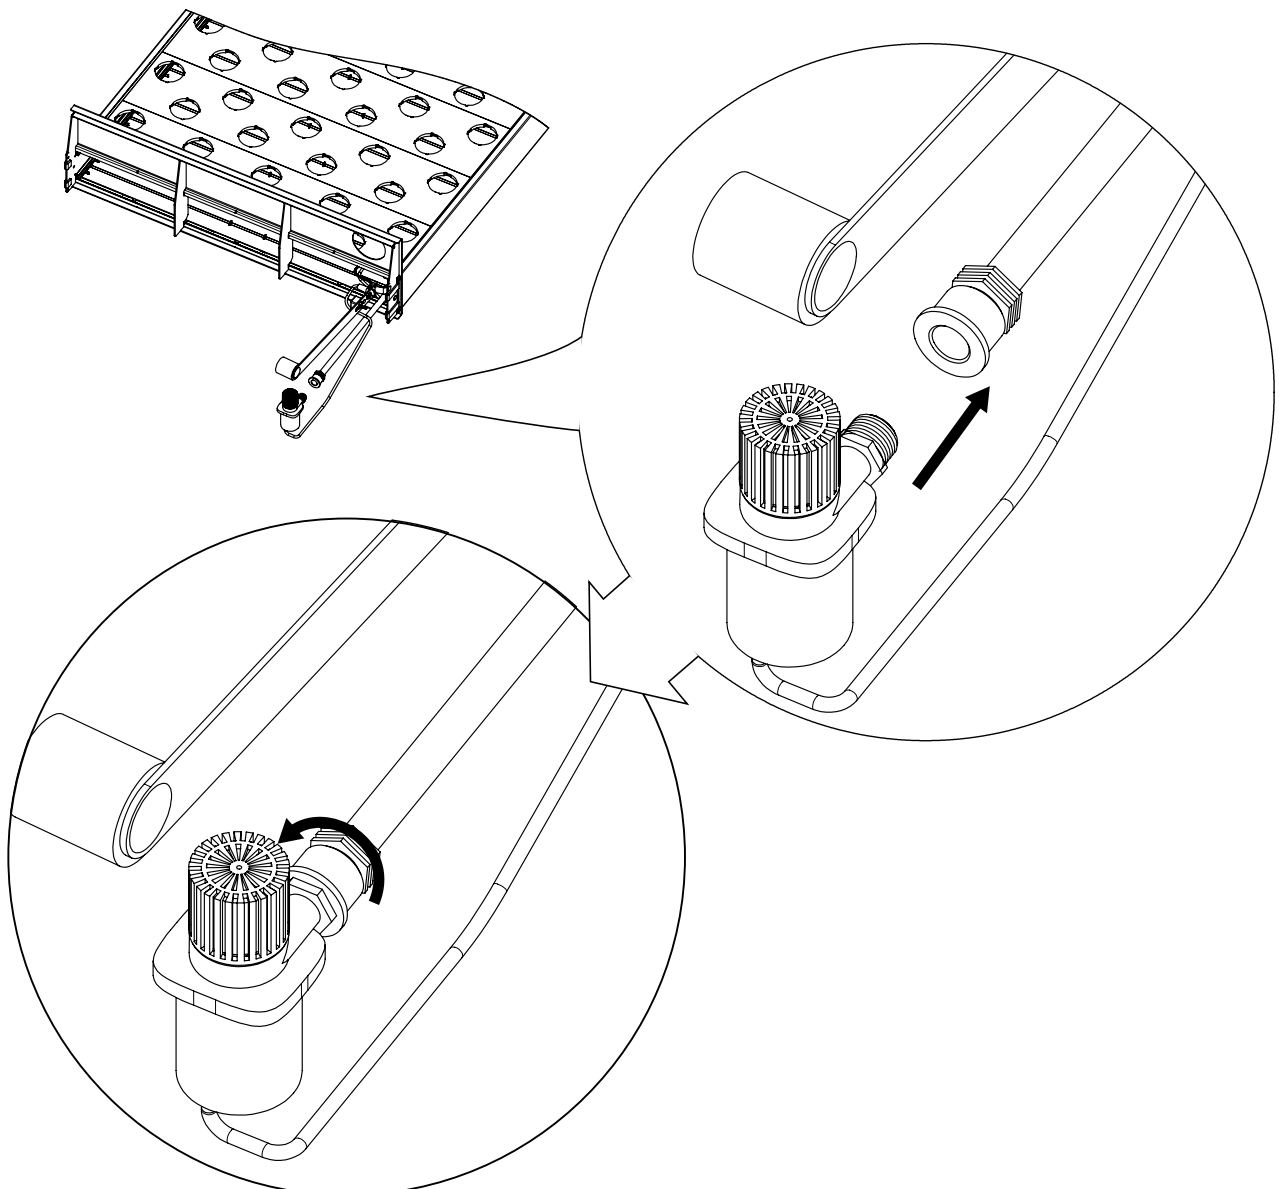 


12

 Upright

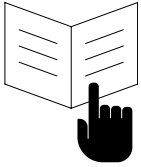


V 1.0




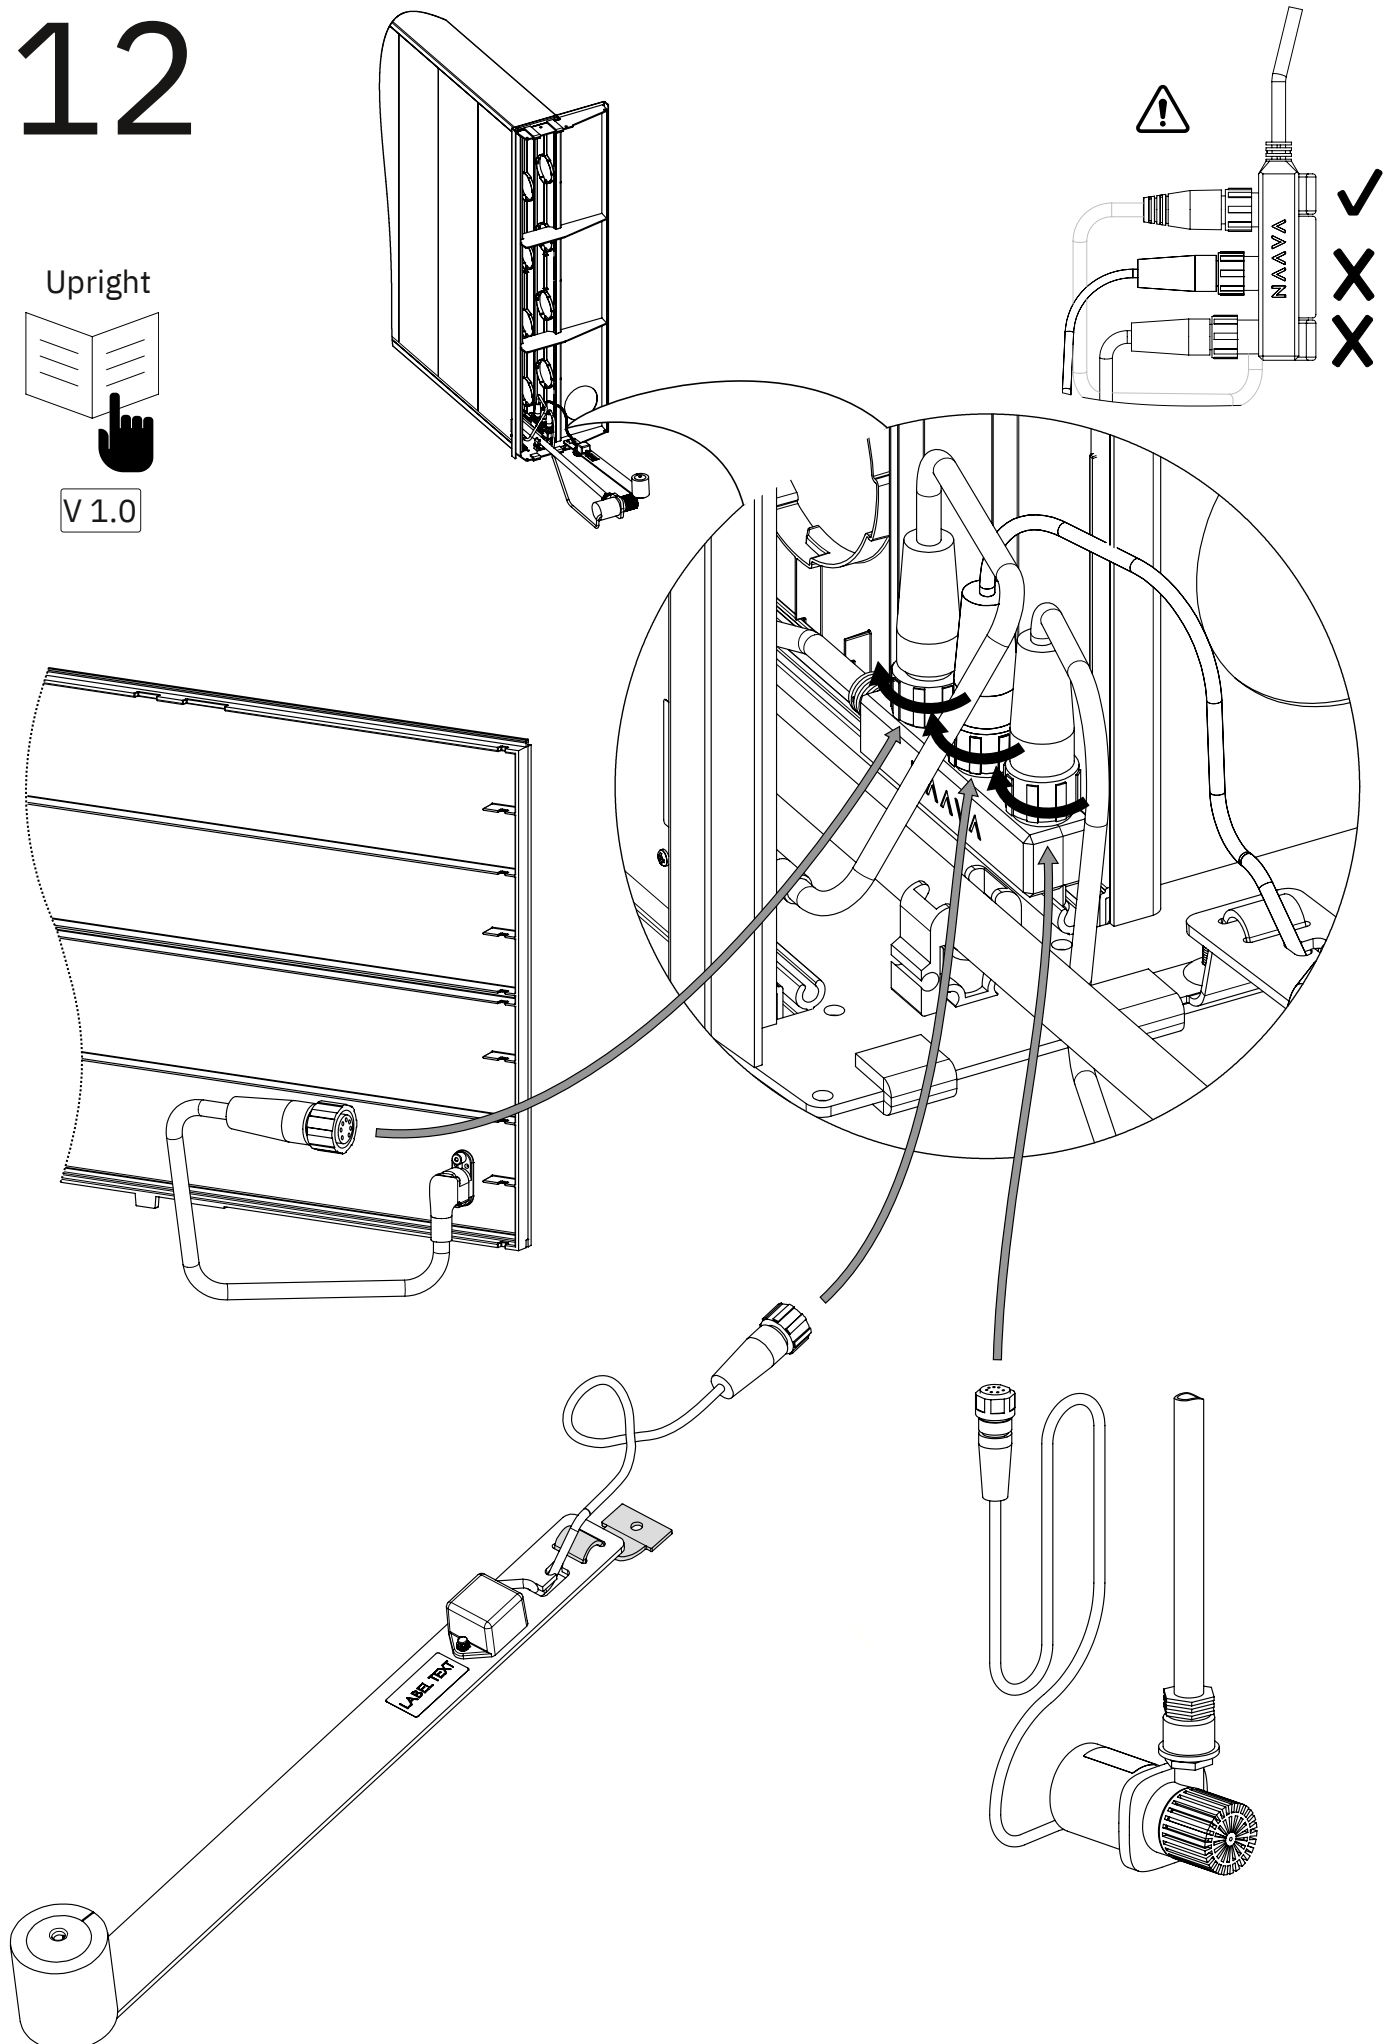 


12


 
Upright

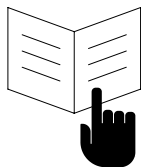


V 1.1

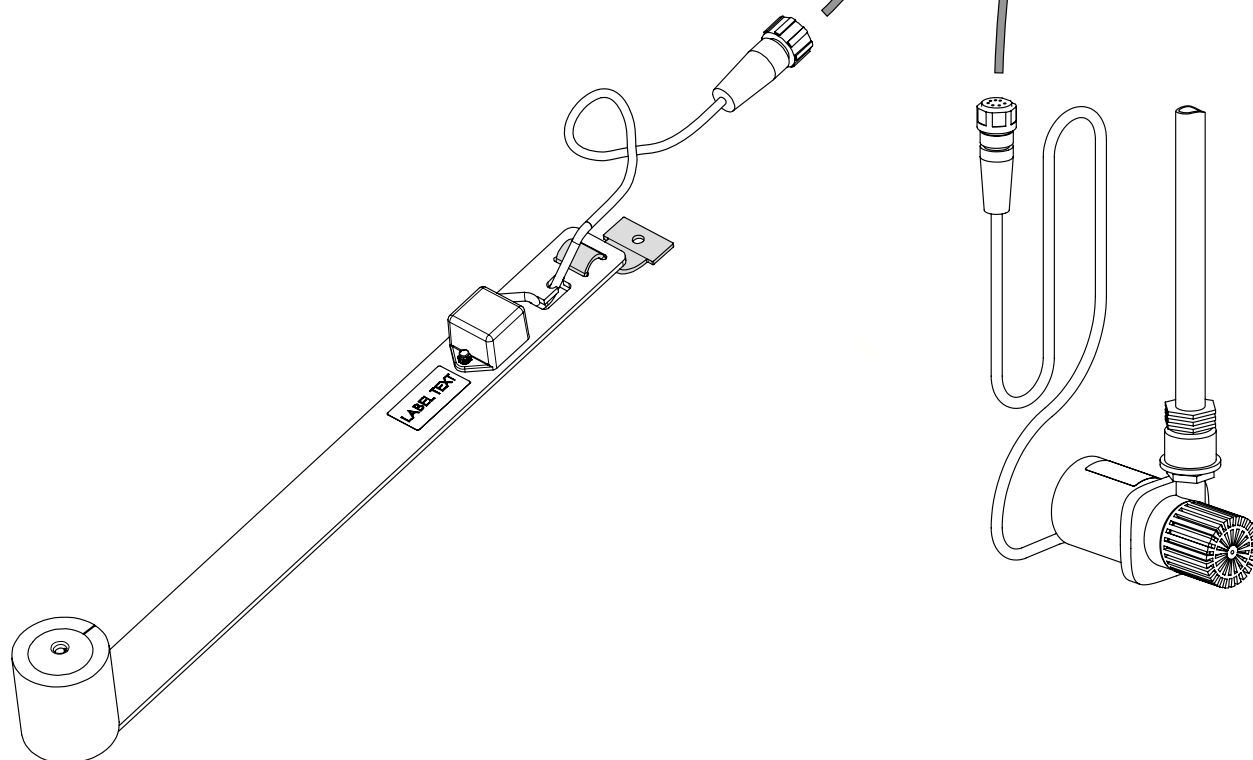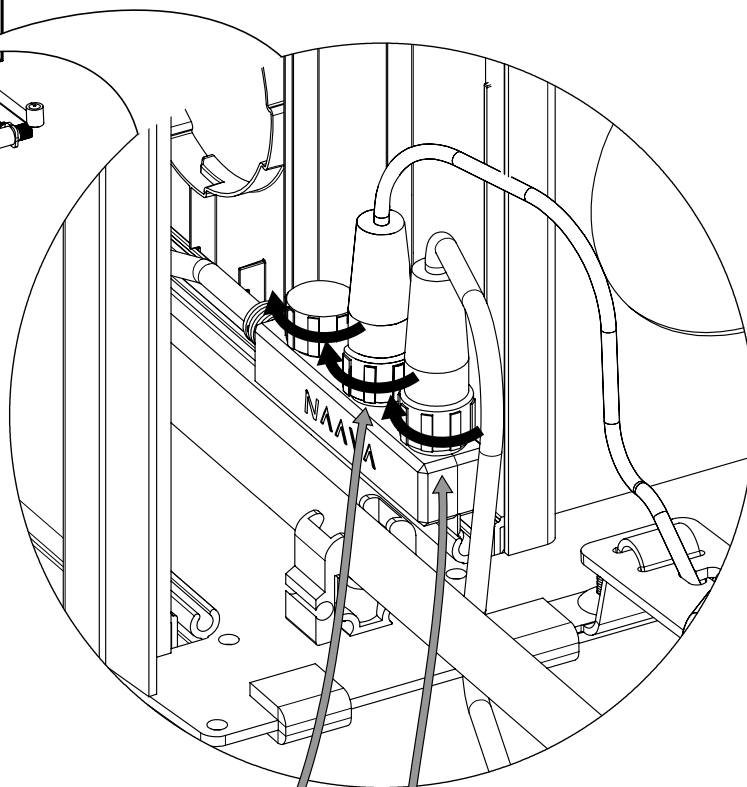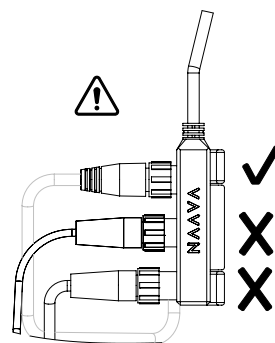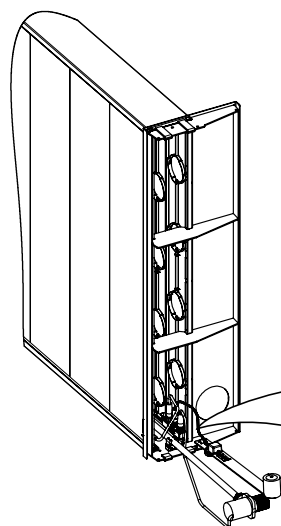    



13

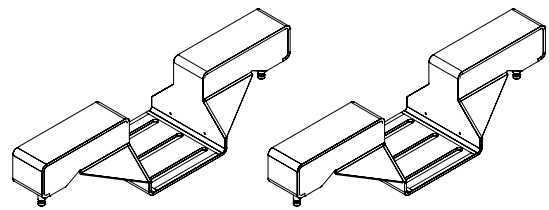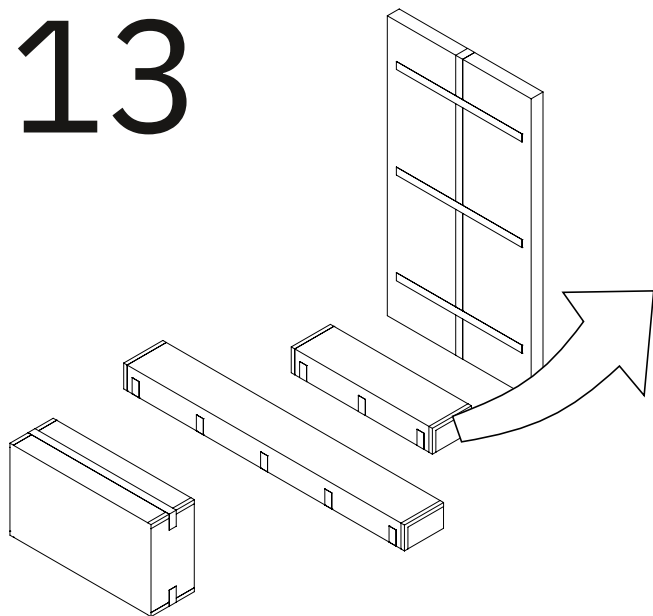  


1005482 (x 2) 1005481 (x 2)

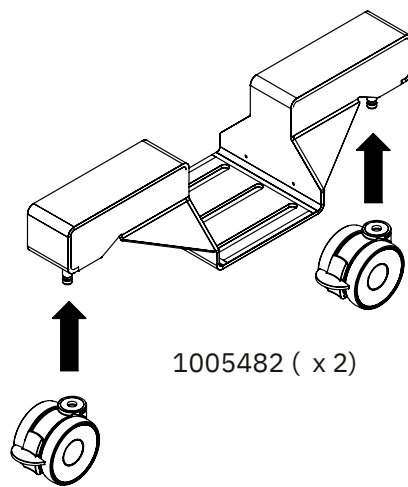 


1005482 (x 2)

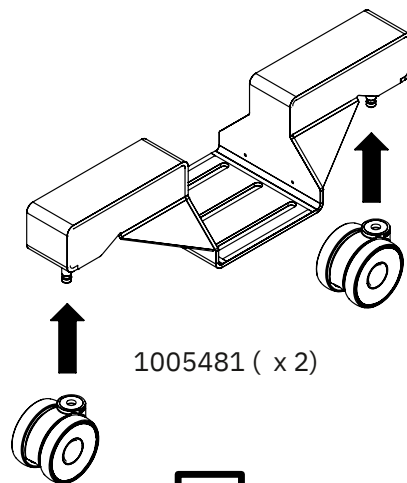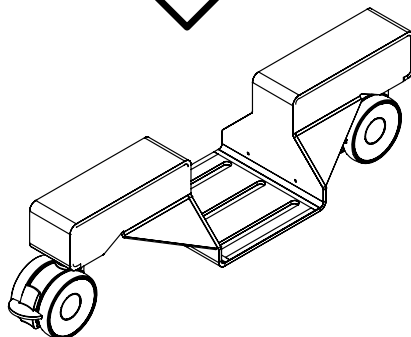  


1005481 (x 2)

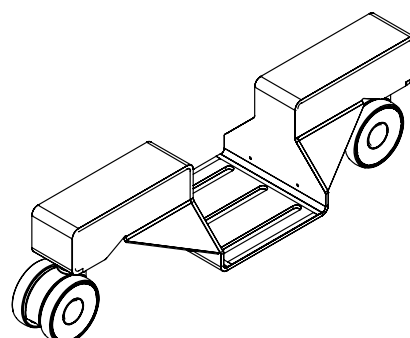 



14

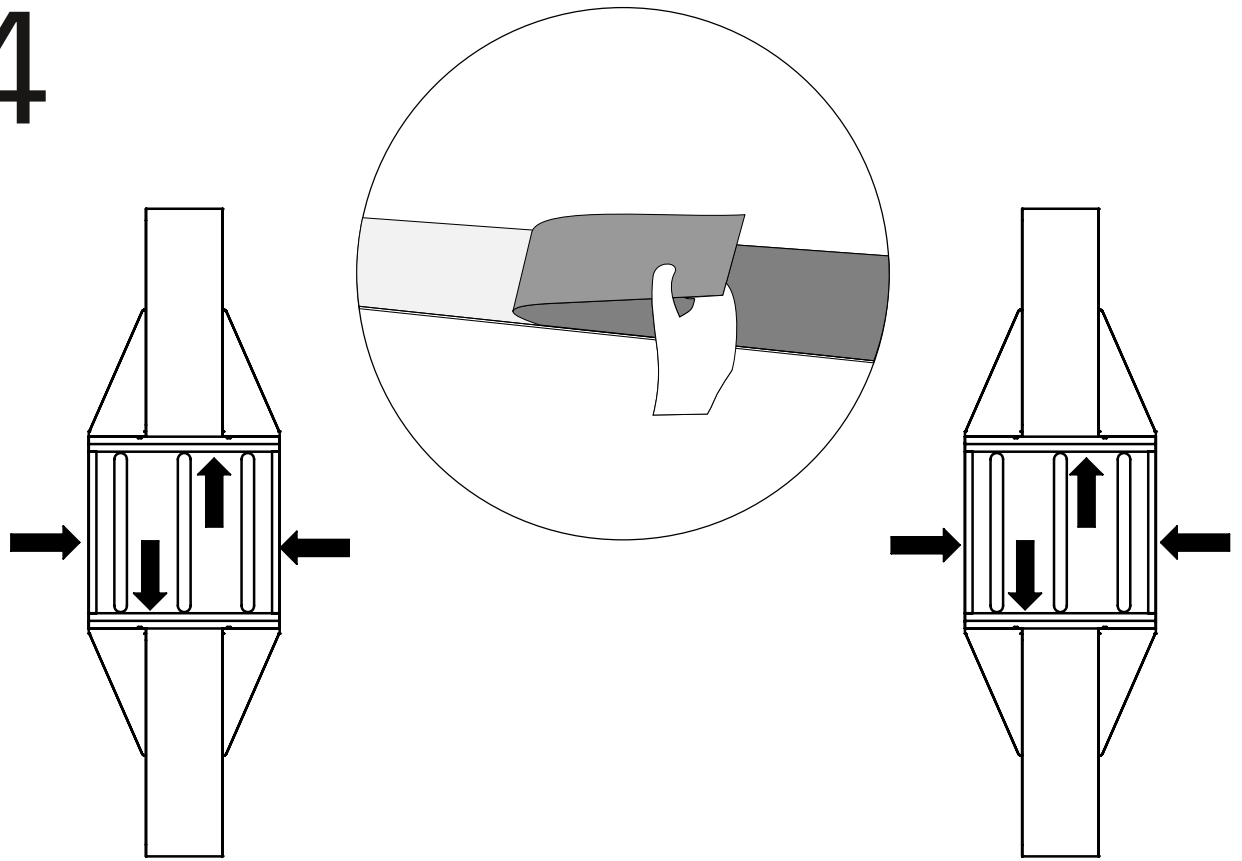 


15

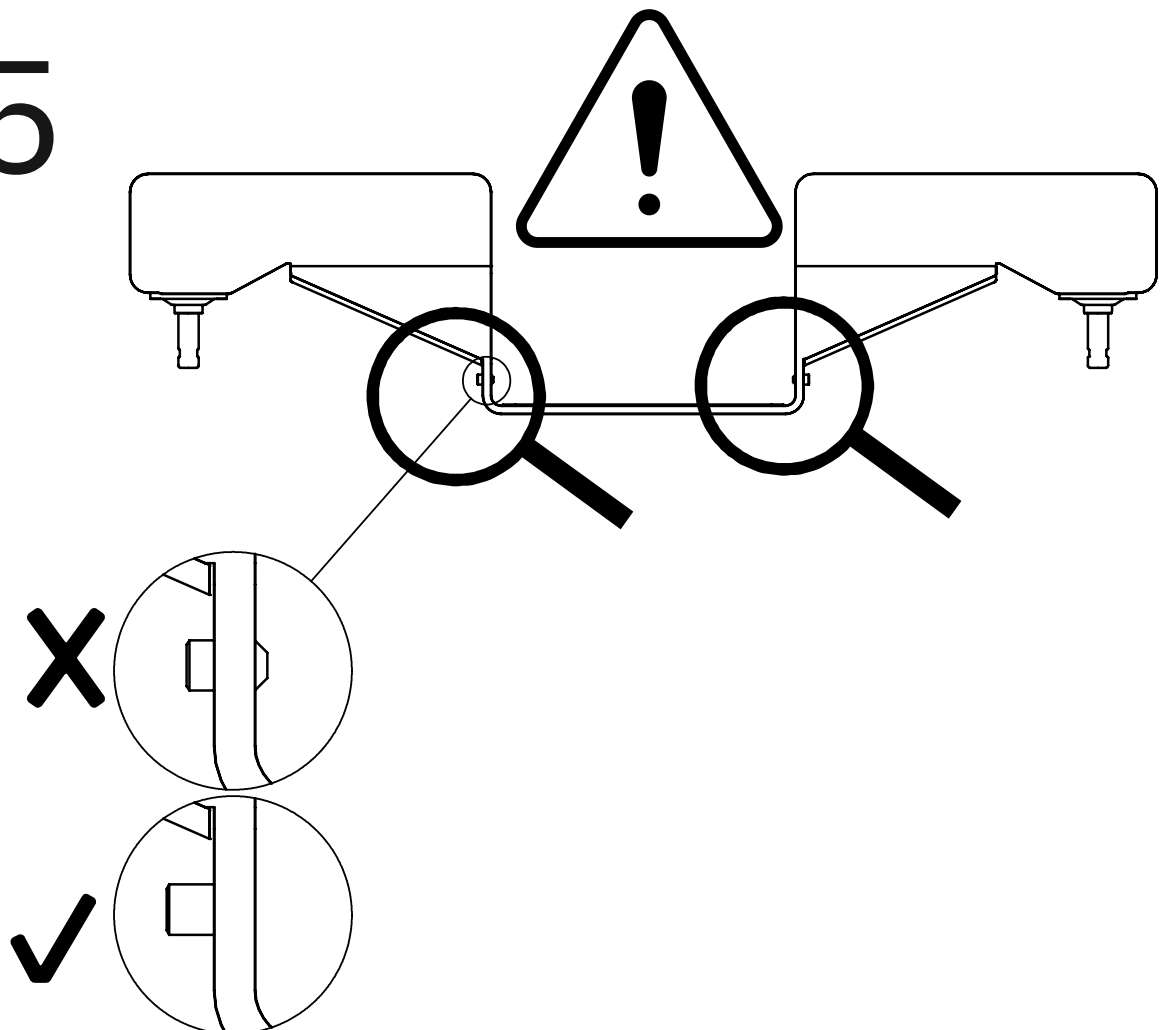 


16

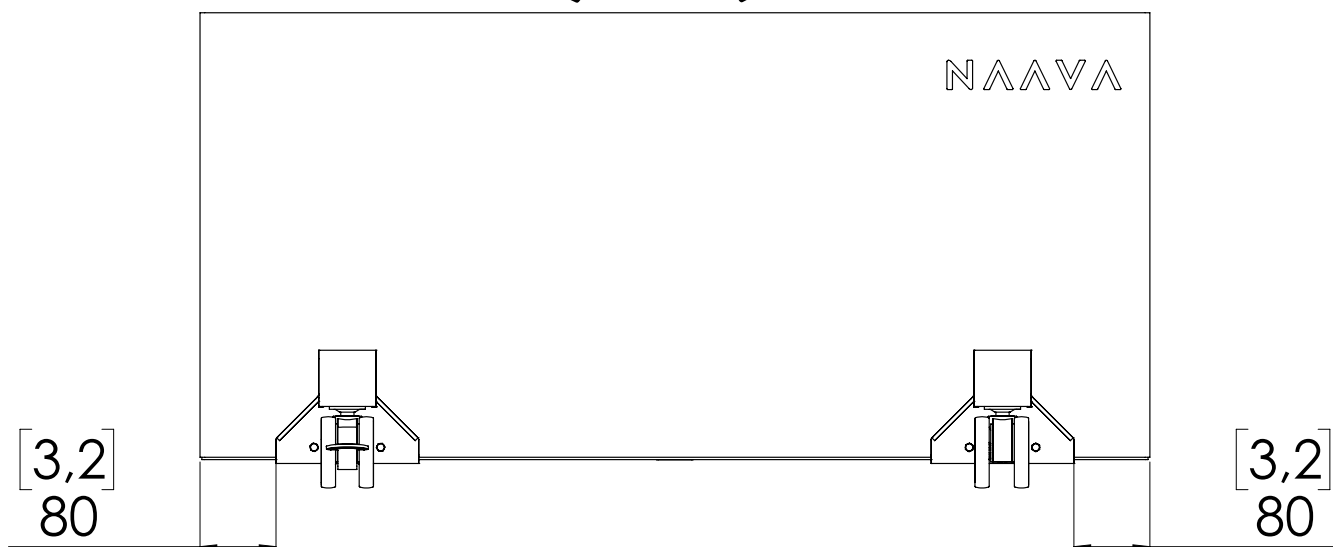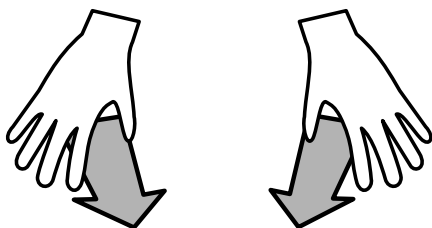  


17

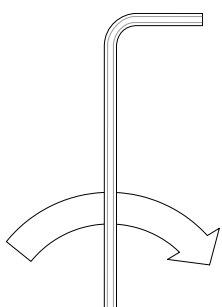 


0,3 Nm max
8 x

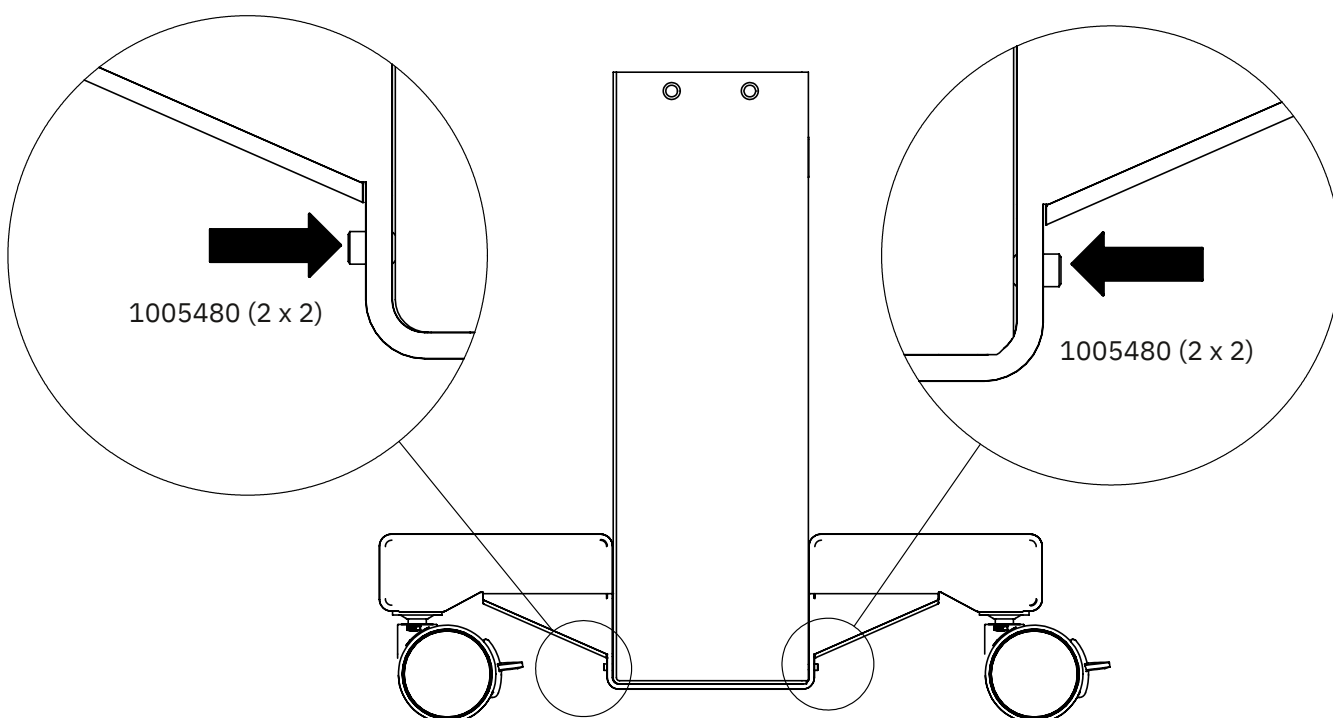 

18



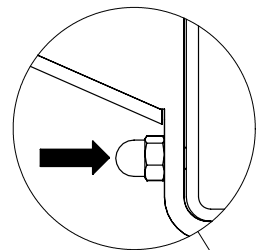 


1005483 (x 8)

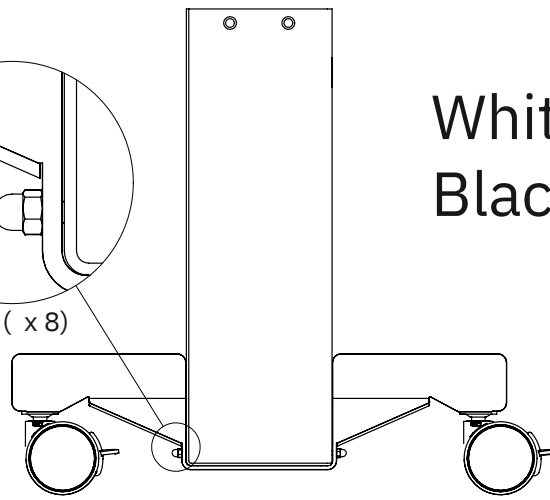 


White ✓
Black ✗


 
 
 
19

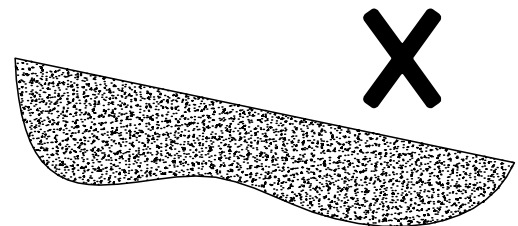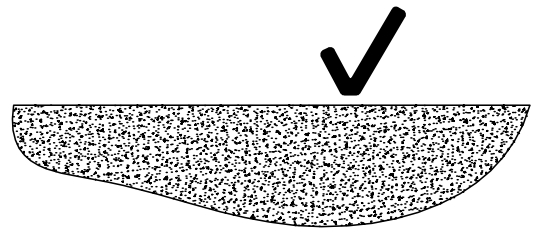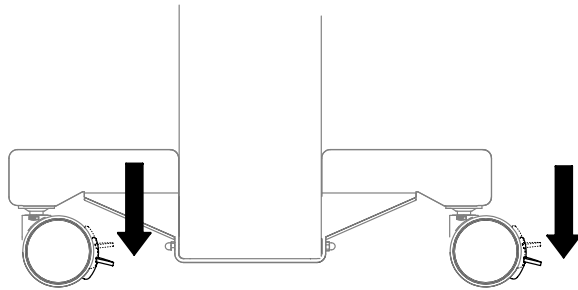



20

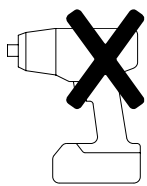 


1005324 (x 4)

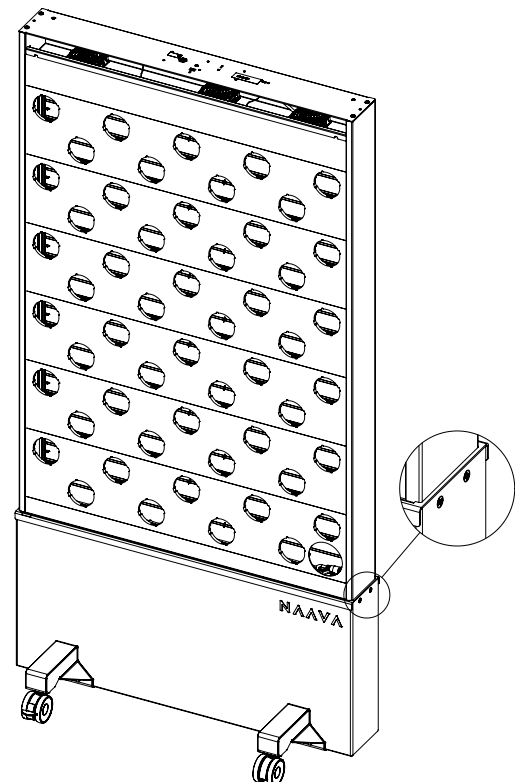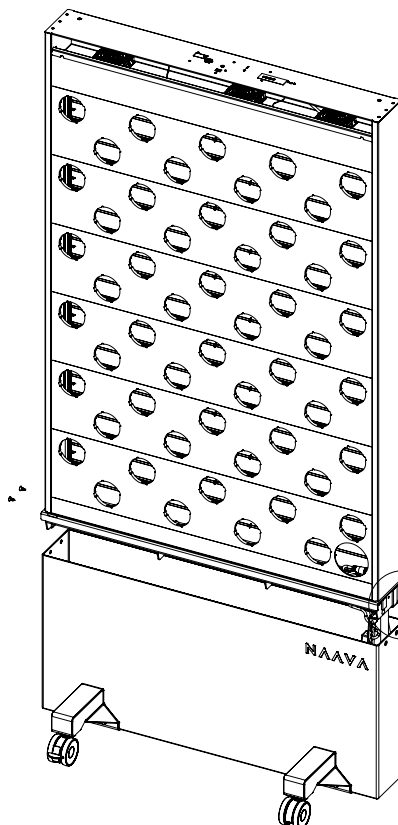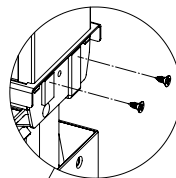    


21

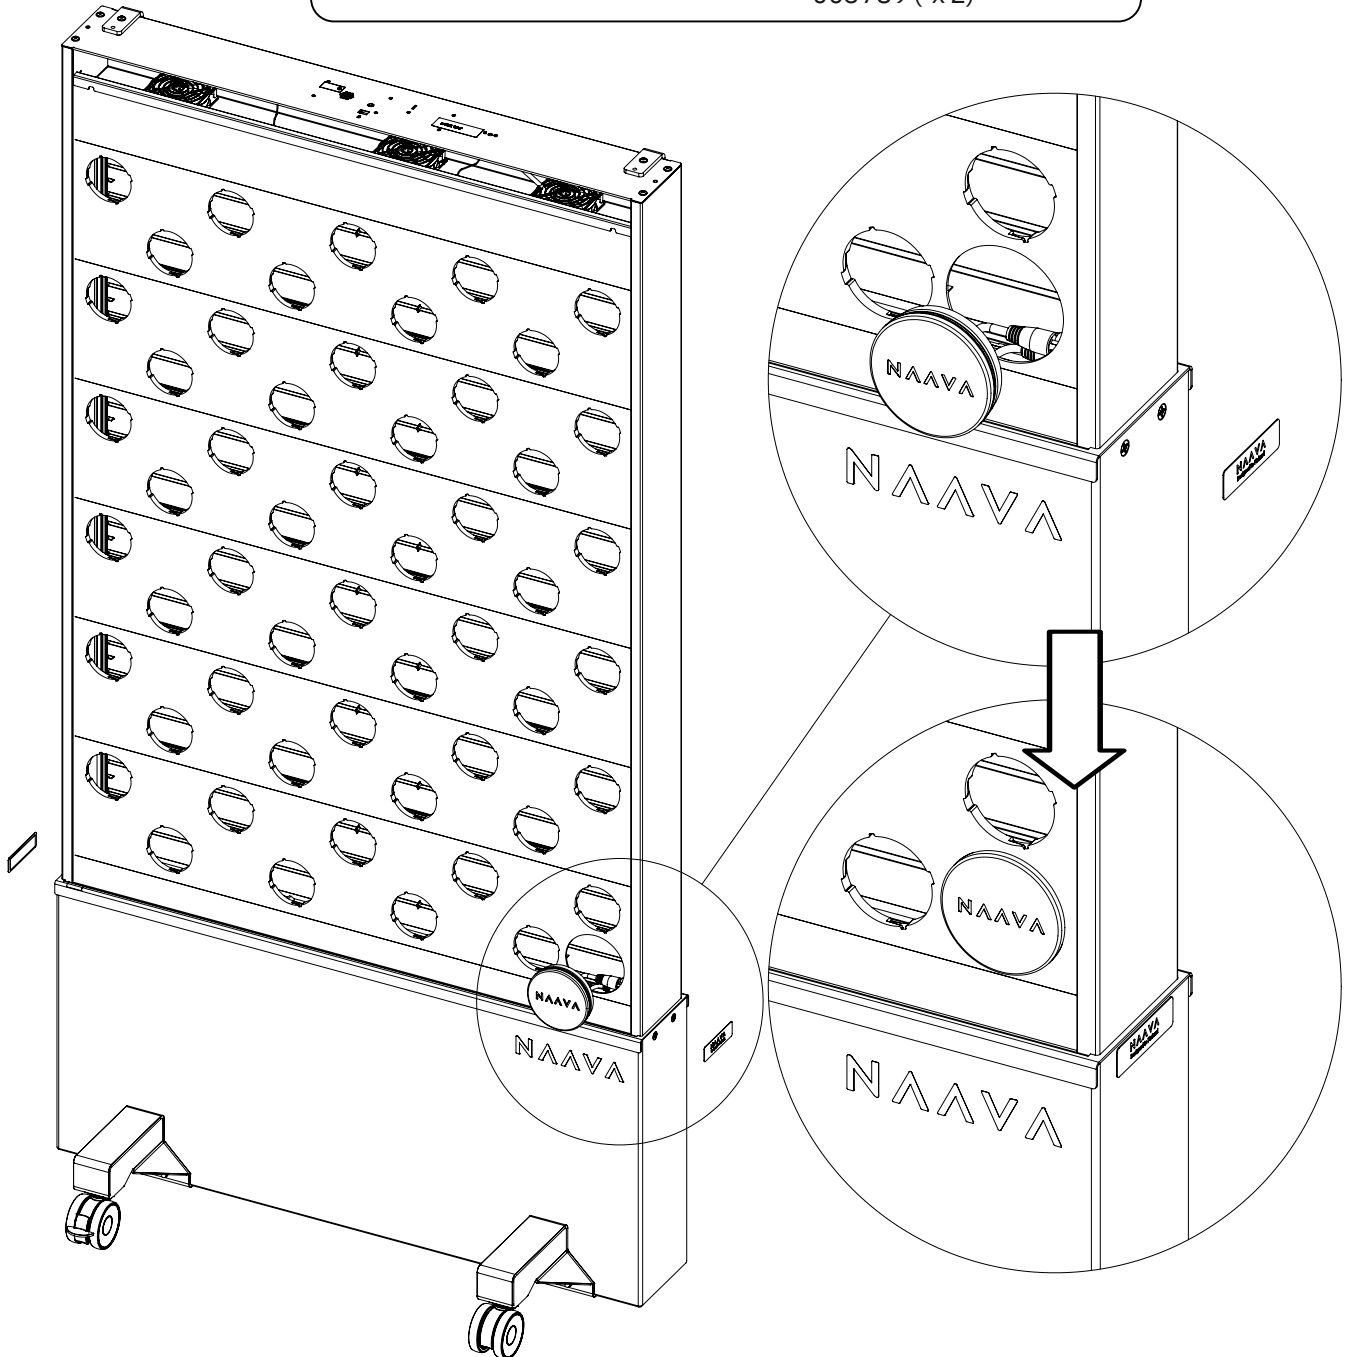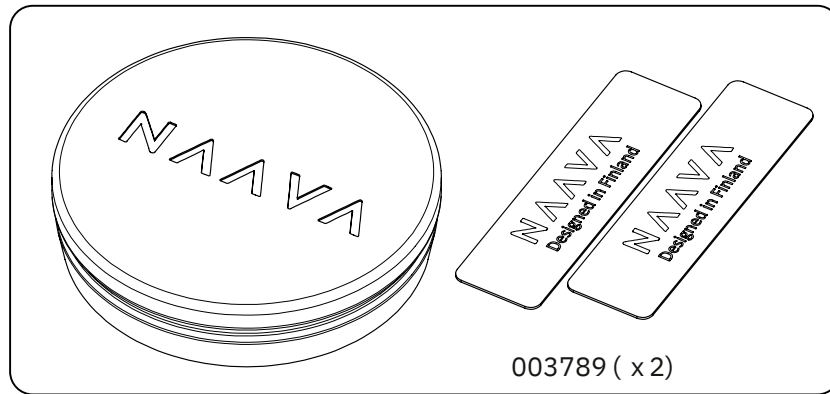  

22

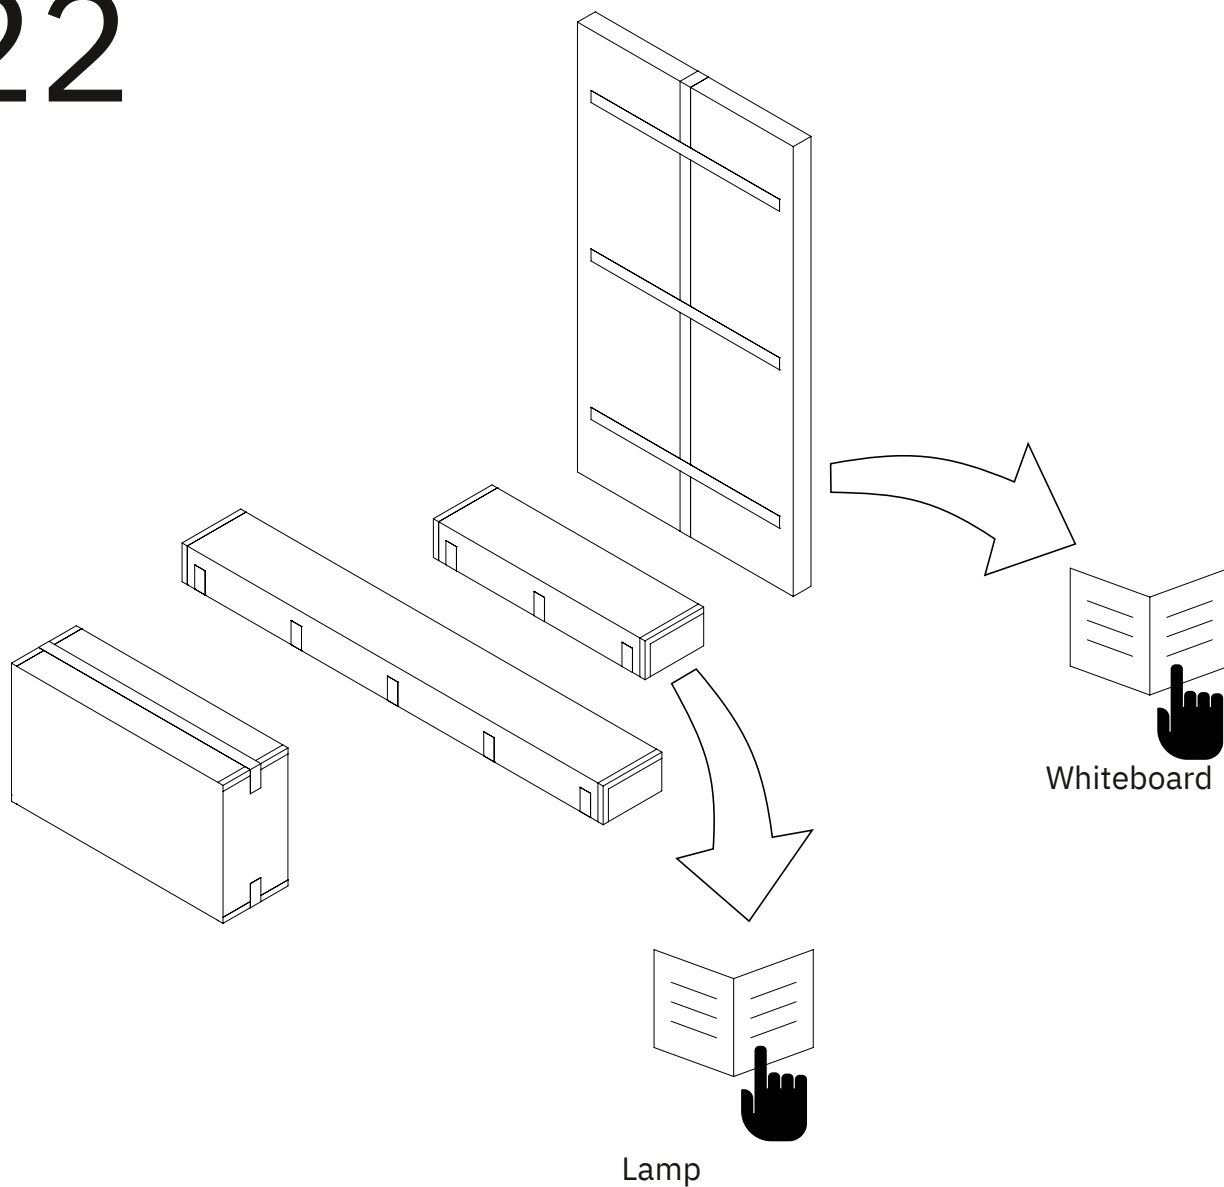 

23

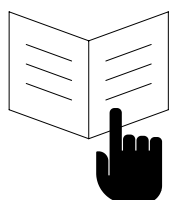 



Quick Guide

- 1. Assemble** the frame and place the plants:
www.naava.io/manuals
- 2. Fill** the watertank


Remove the plug either from the top of the tank or on the front panel. Fill until water reaches 5 cm/2" from the edge. Remember to put the plug back!
- 3. Require** Naava app access from your Naava service provider and go to <https://naava.app>

With the Naava web application you can see how your Naava is doing wherever you are. Monitor the water level, get an automatic reminder when your Naava needs water, and see how much natural air has been produced daily.

